



RAZER BLADE STEALTH + RAZER CORE UPDATER GUIDE

RAZER BLADE STEALTH + RAZER CORE UPDATE GUIDE- TO BE UPDATED WHEN USING THE RAZER CORE TOGETHER WITH THE RAZER STEALTH

Prerequisites


1. Ensure your Razer Blade Stealth Ultrabook is at least 50% charged.
2. Connect your Razer Blade Stealth to the Razer Core using the included Thunderbolt 3 cable.
3. If the "New Thunderbolt Devices has been attached" window pops up click "OK" then select "Always Connect".




4. Do not unplug the Core or power off your device during the update.
5. Download the latest Blade Stealth Updater from this [link](#).

Steps to Update


1. Unzip "BladeStealthUpdater_v1.0.3.5"
2. Double click on "BladeStealthUpdater_v1.0.3.5". (Use v1.0.3.5 or higher)
3. If there are any UAC prompts, click Yes.

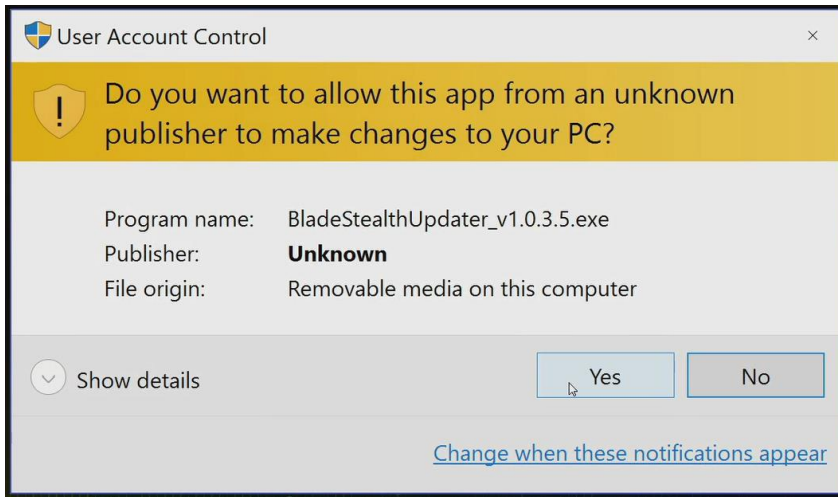


4. The Blade Stealth Updater will show any available updates for the Thunderbolt, BIOS and EC.

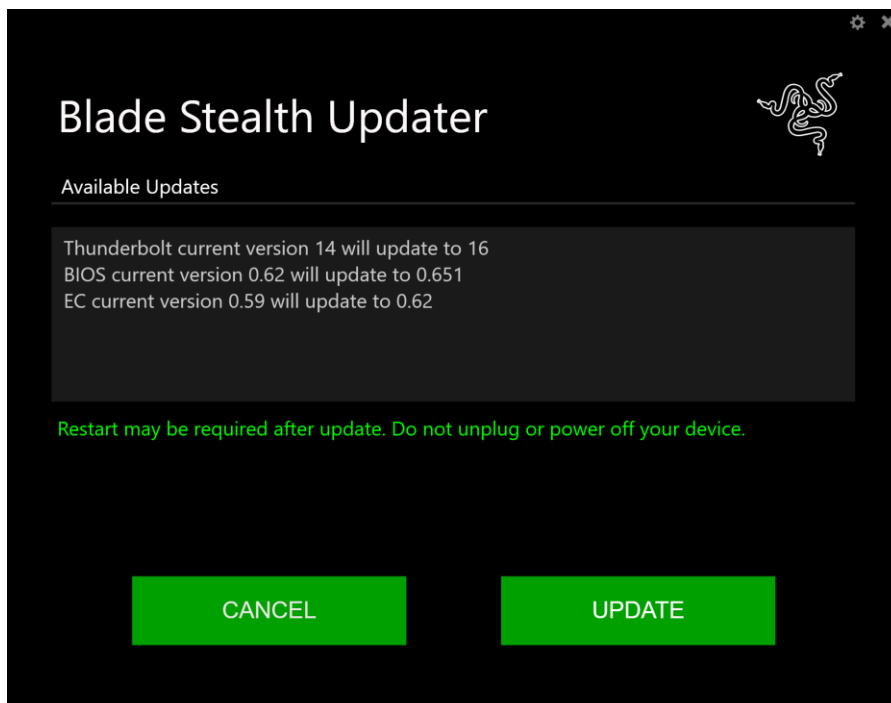

 5. Click on update button to start updating the needed components.

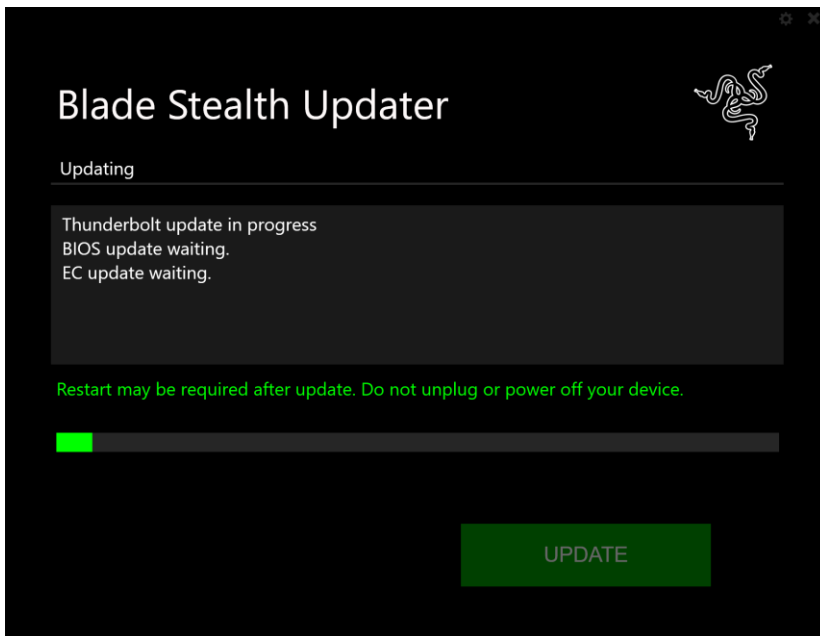

 
6. During the BIOS update keyboard and mouse input will be disabled.
7. Your system will restart automatically after any EC update.
8. If there is no EC update, shutdown the system manually and disconnect the Thunderbolt cable. Then wait 30 seconds before powering on and reinserting the Thunderbolt cable.

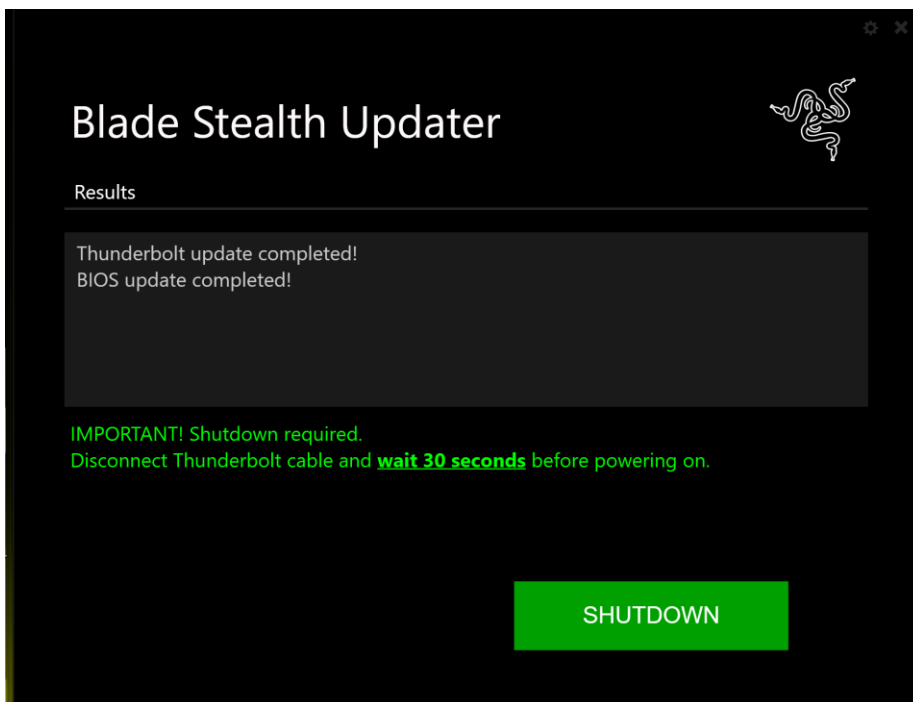

9. After reboot, please re-run the updater to ensure that all detected components are up to date. (See screenshot below)

10. Ensure your Blade Stealth has the latest Intel graphics driver found at <http://www.razersupport.com/downloads>

 11. Your Razer Blade Stealth and Razer Core are now up-to-date and ready to go.

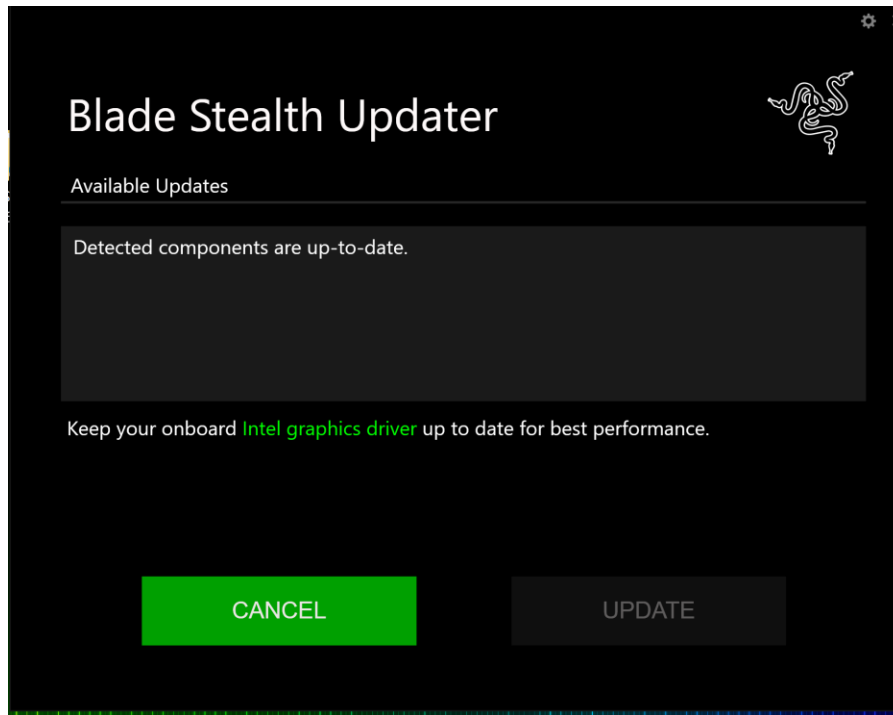

For a full list of updates for Razer Core please visit rzt.to/core-update