## DRIVER INSTALLATION INSTRUCTIONS

### APPLICABLE MODEL NUMBERS

• RZ09-03148

### **DRIVER NAME AND VERSION**

Realtek Audio Driver Version 6.0.8761.1

### **INSTRUCTIONS**

**Note:** This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

 
- 1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
- 2. Save any open documents on your computer and close all other programs before attempting this update.
- 3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to location of your choosing (such as your desktop) to locate the files for the installation process.

# http://rzr.to/Em52g

4. Once you have extracted the file proceed to the installation steps below.

## **INSTALLATION PROCESS**

1. Double-click "InstallPackage.bat" in the "Realtek\_audio\_driver\_6.0.8787.1" folder.



2. A command prompt will pop up on the screen. wait for "Press any key to continue...", then press any key. Once the command prompt disappears, the process is complete.

```
Processing inf:
Successfully installed the driver.
Driver package added successfully.
Published name: oem16.inf

Total attempted:
1
Number successfully imported:
1
C:\Realtek_audio_driver_6.0.8787.1\Realtek\Realtek\SstPpDll_22\Realtek\SstPpDll_inf" /install
C:\Realtek_audio_driver_6.0.8787.1\pnputil -a "C:\Realtek_audio_driver_6.0.8787.1\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realtek\SstPpDll_22\Realte
```