
DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

- RZ09-03148

DRIVER NAME AND VERSION

Intel Dynamic Tuning Driver Version 8.6.10400.9366

INSTRUCTIONS

Note: This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.


1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
2. Save any open documents on your computer and close all other programs before attempting this update.
3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to a location of your choice(such as your desktop).

<http://rZR.to/Du7Xo>

4. Once you have extracted the file proceed to the installation steps below.


INSTALLATION PROCESS

1. To initiate the initial process, click on the "setup.exe" (Application) as shown in the image below:

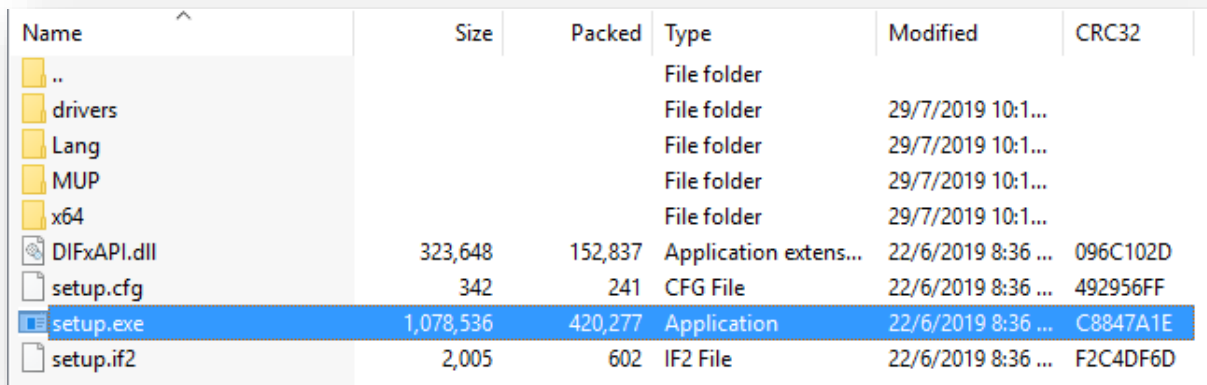

| Name | Size | Packed | Type | Modified | CRC32 |
|-------------|-----------|---------|-----------------------|--------------------|----------|
| .. | | | File folder | | |
| drivers | | | File folder | 29/7/2019 10:1... | |
| Lang | | | File folder | 29/7/2019 10:1... | |
| MUP | | | File folder | 29/7/2019 10:1... | |
| x64 | | | File folder | 29/7/2019 10:1... | |
| DIFxAPI.dll | 323,648 | 152,837 | Application extens... | 22/6/2019 8:36 ... | 096C102D |
| setup.cfg | 342 | 241 | CFG File | 22/6/2019 8:36 ... | 492956FF |
| setup.exe | 1,078,536 | 420,277 | Application | 22/6/2019 8:36 ... | C8847A1E |
| setup.if2 | 2,005 | 602 | IF2 File | 22/6/2019 8:36 ... | F2C4DF6D |

2. You will be prompted to confirm these changes through the User Account Control message that will appear on your screen. Click "Yes" to confirm.
3. The Intel® Dynamic Platform and Thermal Framework setup will appear. Click "Next" as shown in the image below:

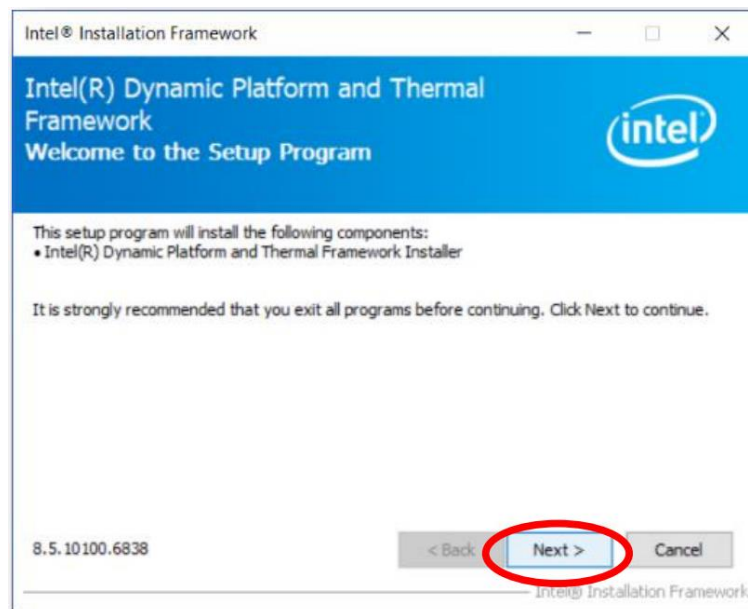

4. Click through the remaining prompts and follow the on-screen instructions. Once complete, click "Finish" as shown in the image below:

