## DRIVER INSTALLATION INSTRUCTIONS

#### **APPLICABLE MODEL NUMBERS**

RZ09-03148

#### **DRIVER NAME AND VERSION**

Intel Software Guard Extensions (SGX) 2.3.100.49777

#### **INSTRUCTIONS**

**Note:** This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.


- 1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
- 2. Save any open documents on your computer and close all other programs before attempting this update.
- 3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to the location of your choice (such as your desktop).

# http://rzr.to/okBUZ

4. Once you have extracted the file proceed to the installation steps below.

### INSTALLATION PROCESS

1. Right click on the "InstallPackage\_19H1.bat" file and select "Run as administrator" from the menu to initiate the installation process.

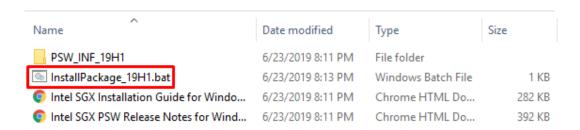

2. A CMD window will pop up. Wait for the installation process to complete.

```
×
C:\Windows\system32\cmd.exe
                                                                                                 П
###Right click the InstallPackage.bat and choose run as administrator####
:\Users\apssg\Desktop\Lynette2UMA\intel_sgx_2.3.100.49777\intel_sgx_2.3.100.49777>pnputil /add-driver "C:\Users\apssg\I
sktop\Lynette2UMA\intel_sgx_2.3.100.49777\intel_sgx_2.3.100.49777\PSW_INF_19H1\sgx_base.inf" /install
Microsoft PnP Utility
Adding driver package: sgx_base.inf
ublished Name:
Priver package is up-to-date on all applicable targets.
otal driver packages: 1
Added driver packages: 0
sktop\Lynette2UMA\intel_sgx_2.3.100.49777\intel_sgx_2.3.100.49777\PSW_INF_19H1\sgx_psw.inf" /install
Adding driver package: sgx_psw.inf
Priver package is up-to-date on all applicable targets.
dded driver packages: 0
:\Users\apssg\Desktop\Lynette2UMA\intel_sgx_2.3.100.49777\intel_sgx_2.3.100.49777>PAUSE
ress any key to continue . . .
```

3. Press any key to close the window.