
DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

- RZ09-03100

DRIVER NAME AND VERSION

Intel Serial IO 30.100.1916.1

INSTRUCTIONS

Note: This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
2. Save any open documents on your computer and close all other programs before attempting this update.
3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to the location of your choice (such as your desktop).

Driver: <http://rZR.to/YyjYo>


4. Once you have extracted the file proceed to the installation steps below.

INSTALLATION PROCESS

1. Right click on the "SetupSerialIO.exe" file and select "Run as administrator" from the menu to initiate the installation process.

Name	Date modified	Type	Size
Win10	26/09/2019 7:37 A...	File folder	
Intel(R) Serial IO - Bring Up Guide and rel...	26/09/2019 7:37 A...	Adobe Acrobat D...	373 KB
mup	26/09/2019 7:37 A...	XML Document	10 KB
ReadMe	26/09/2019 7:37 A...	Text Document	46 KB
SetupSerialIO	26/09/2019 7:37 A...	Application	2,284 KB
Software License Agreement (PV)	26/09/2019 7:37 A...	Adobe Acrobat D...	167 KB
WiXLicenseNote	26/09/2019 7:37 A...	Text Document	13 KB


2. The User Account Control window may pop up to confirm changes that will be made by the application. Click "Yes" to allow the application to launch.
3. The welcome screen will pop up. Click "Next" to continue.

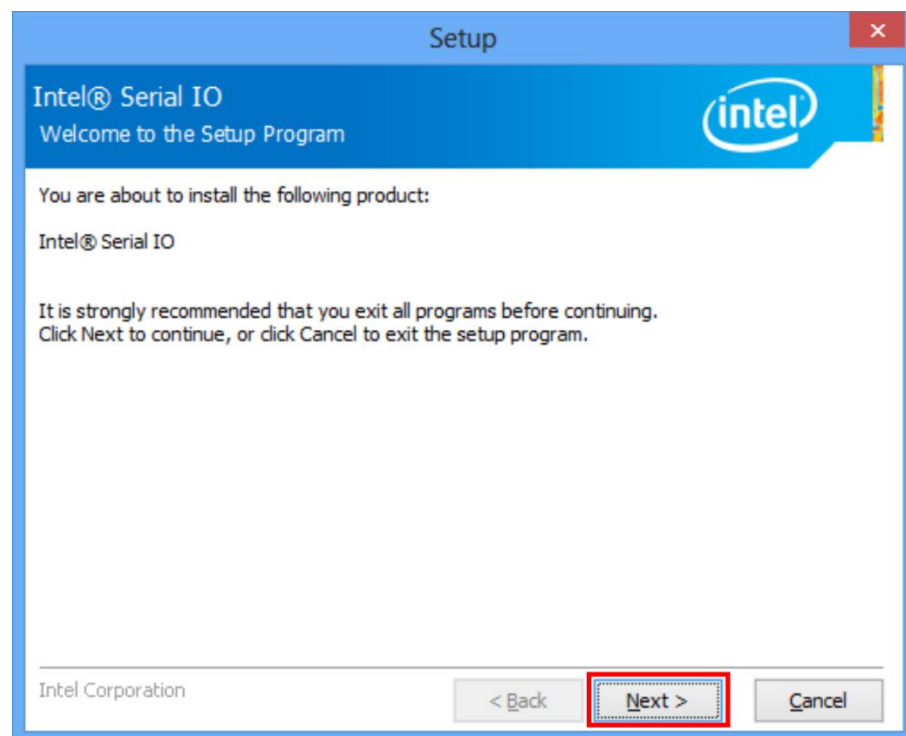


4. Review the license agreement and tick "I accept the terms in the License Agreement" then click "Next".



5. Select a folder location where you want the driver to be installed or directly click "Next" to install to the default destination folder.

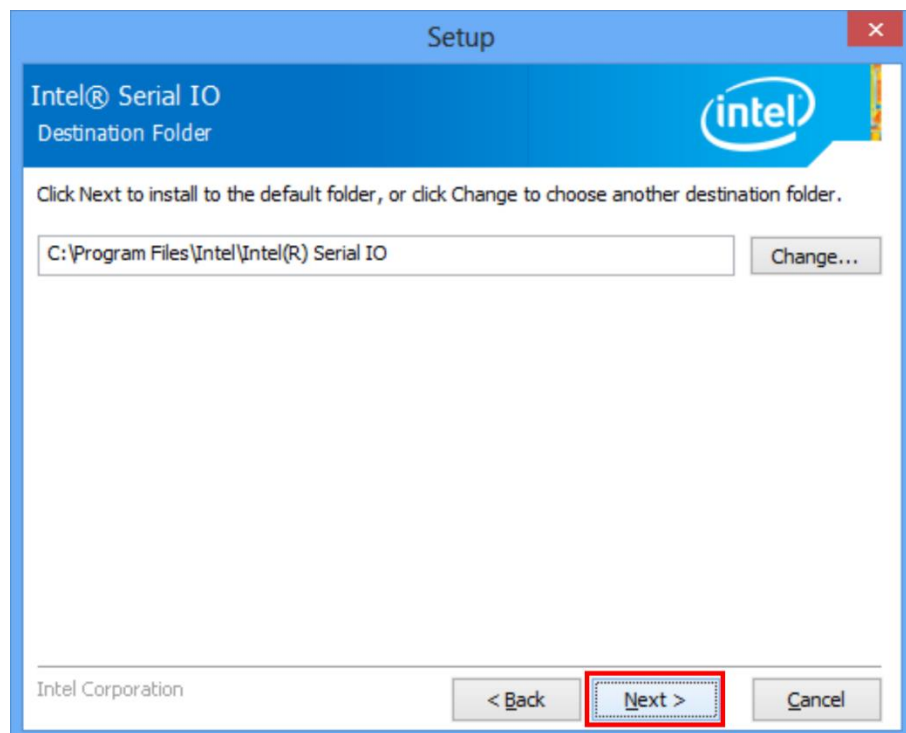

6. A confirmation window will appear, showing the list of driver components that will be installed. Click "Next" to continue.

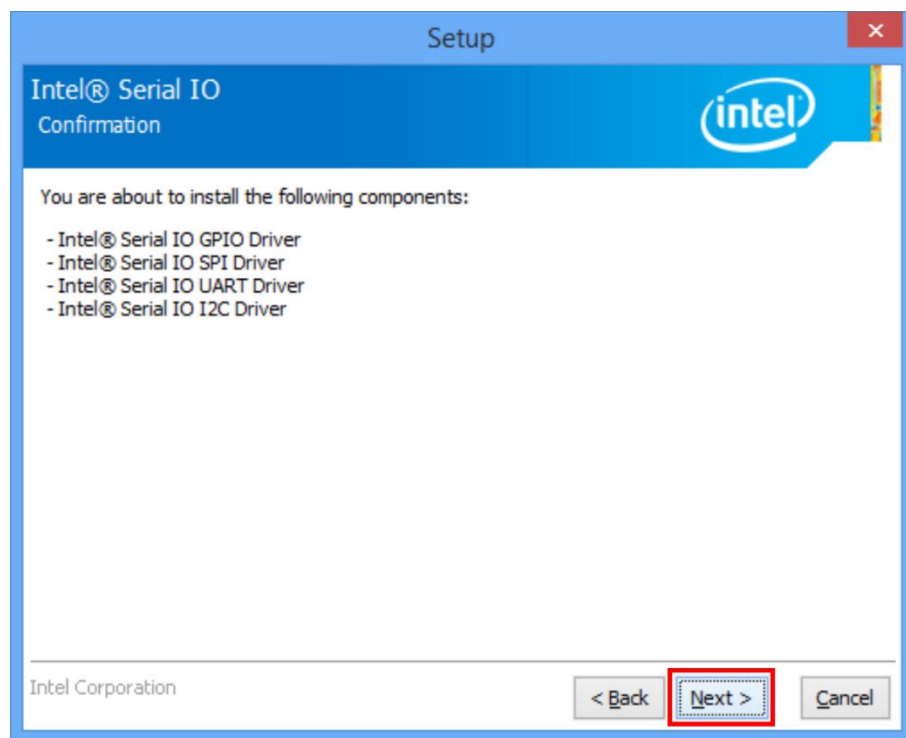

Note: Drivers will not be installed for controllers that are not enabled by BIOS.

7. Click "Finish" once the installation process is complete.

