## DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

• RZ09-03101

DRIVER NAME AND VERSION Intel ME Driver Version 1910.13.0.1060

## INSTRUCTIONS

Note: This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

- 1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
- 2. Save any open documents on your computer and close all other programs before attempting this update.
- 3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to location of your choosing (such as your desktop) to locate the files for the installation process.

http://rzr.to/BRjDG

4. Once you have extracted the file proceed to the installation steps below.

## INSTALLATION PROCESS

1. To initiate the initial process, double-click on the setup.exe (Application) as shown in the image below:

Name	Size	Packed	Туре	Modified	CRC32
			File folder		
lntelMEFWVer.dll	19,944	11,682	Application extens	11/7/2019 11:5	7958180D
mup.xml	27,741	2,221	XML Document	11/7/2019 12:0	04AC58A7
SetupME.exe	161,079,784	160,372,711	Application	11/7/2019 12:0	A4145DE1


- 2. Upon running the SetupME.exe (Application), you will be prompted to confirm changes to be used for your system by the User Account Control. Click "Yes" to confirm these changes.
- 3. You will be prompted to close all running applications before continuing. After doing that, click on "Next" to continue.

Setup.			
ntel® Management Engine Components Welcome		inte	P
You are about to install the following product:			
Intel® Management Engine Components 1928.13.0.1086			
It is strongly recommended that you exit all programs before Click Next to continue, or click Cancel to exit the setup progr			
of et Carponation	< Back	Next >	Cancel
			_

4. You will presented the terms of License Agreement. You will need to tick on "I accept the terms in the License Agreement" before you can click "Next".

intel Management Engine Components Ucense Agreement		(inte	D
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / IS)	V Distribution & Si	ngle User)	^
IMPORTANT - READ BEFORE COPYING, INSTALLING OR Do not use or load software (including drivers) from this (collectively, the "Software") until you have carefully rea By loading or using the Software, you agree to the term modify from time to time following reasonable notice to Y do not install or use the Software.	site or any assoc ad the following to s of this Agreeme	erms and cond ent, which Inte	itions. I may
Please Also Note: • If you are an Original Equipment Manufacturer (OEM), or Independent Software Vendor (ISV), this complete LI • If you are an End-User, then only Exhibit A, the INTEL apples.	CENSE AGREEME	NT applies;	Tone St
For OEMs, IHVs and ISVs:			
LICENSE. Subject to the terms of this Agreement, Intel (	grants to You a n	onexclusive,	Y
I accept the terms in the License Agreement.			

5. You will be prompted to specify your own destination folder or install it to the default directory.

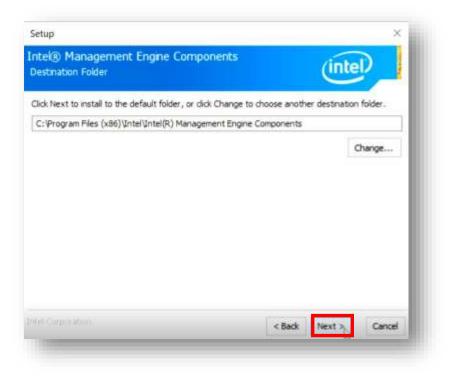

6. Wait until installation is done and click "Finish" to close the installer.

