



# RAZER CHARGING PAD CHROMA 10W FAST WIRELESS CHARGER

MASTER GUIDE

Keep your devices topped up and setup looking sharp with the **Razer Charging Pad Chroma** —a fast wireless charger powered by Razer Chroma RGB. Customize its lighting to match the rest of your Razer gear, while it provides a quick, seamless solution for all your charging needs.

CONTENTS

1. WHAT’S INSIDE / WHAT’S NEEDED ..... 3

2. LET’S GET YOU COVERED ..... 5

3. SETTING UP THE CHARGING PAD ..... 6

4. CUSTOMIZING THE CHARGING PAD LIGHTING VIA RAZER SYNAPSE 3..... 9

5. SAFETY AND MAINTENANCE ..... 17

 
6. LEGALESE..... 19

---

## 1. WHAT'S INSIDE / WHAT'S NEEDED

### WHAT'S INSIDE

- Razer Charging Pad Chroma 10W Fast Wireless Charger

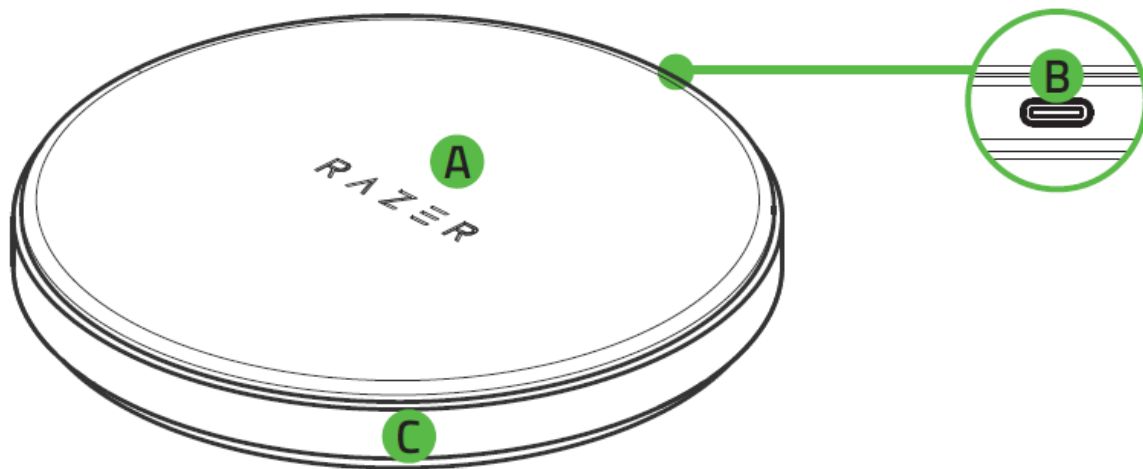


A. Wireless charging surface

B. Type C port

C. Underglow lighting

 - Type C cable



- Important Product Information Guide

## WHAT'S NEEDED

### PRODUCT REQUIREMENTS

- Qi™ enabled smartphones or accessories
- PC with a free Type C port\*

### RAZER SYNAPSE REQUIREMENTS

 
- Windows® 7 64-bit (or higher)
- Internet connection for software installation

*\*Standard charging (5W) only. The charging pad is also compatible with Type C Quick Charge (2.0 or 3.0 compliant) or Power Delivery (2.0 or 3.0 compliant) power adapters for fast charging (10W); and 5V 2A power adapters for standard charging (5W).*

---

## 2. LET'S GET YOU COVERED

You've got a great device in your hands, complete with a 1-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at [razerid.razer.com](https://razerid.razer.com)

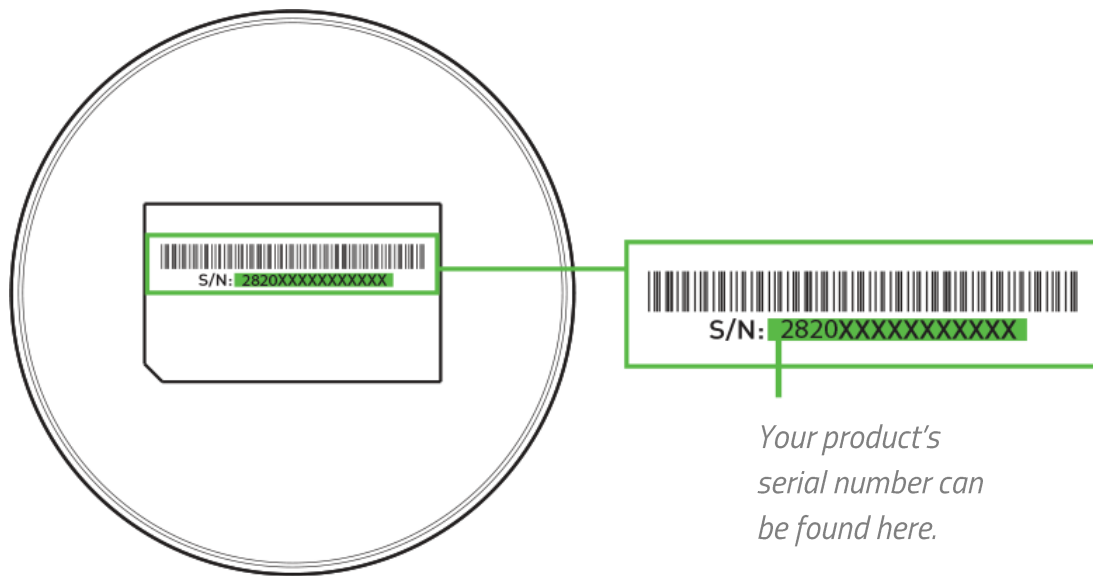


Got a question? Ask the Razer Support Team at [support.razer.com](https://support.razer.com)

---

### 3. SETTING UP THE CHARGING PAD

 1. Connect the charging pad to the Type C port of your PC using the Type C cable. The underglow lighting will briefly display a rapid wave of colors to show that you can now begin charging your smartphone.

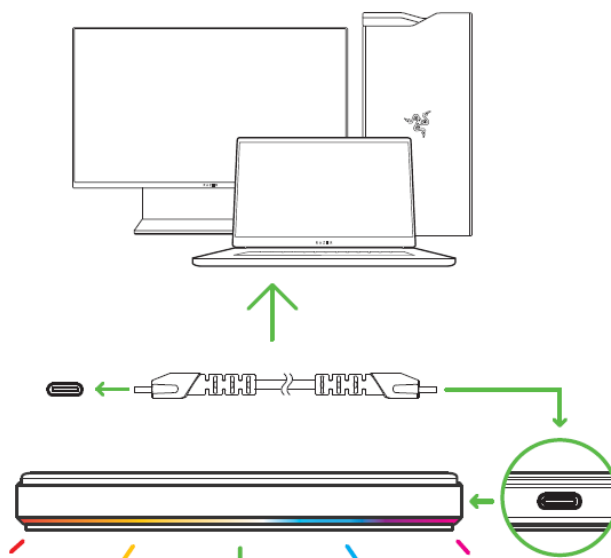


The charging speed is dependent on the connection of the charging pad, as shown here:

Connection		Charging speed**
PC / Laptop	Type C port	Standard charging (5W)
	Type A port*	
Power adapter*	5V 2A power adapters	Fast charging (10W)
	Up to 12W power adapters**	

\*Power adapter and Type C to Type A cable (for Type A connection), not included.


\*\*Compatible with Quick Charge / Power Delivery (2.0 or 3.0 compliant) power adapters. The charging pad's ambient temperature may directly affect its charging speed. Depending on the OS of your smartphone, the charging pad may either shift to standard charging (5W) or simply stop charging your smartphone if its operating temperature exceeds its recommended range (see Safety and Maintenance).

 2. Place your smartphone on the center of the charging pad. The underglow lighting will display a slow wave of colors to indicate that it is now charging your smartphone.

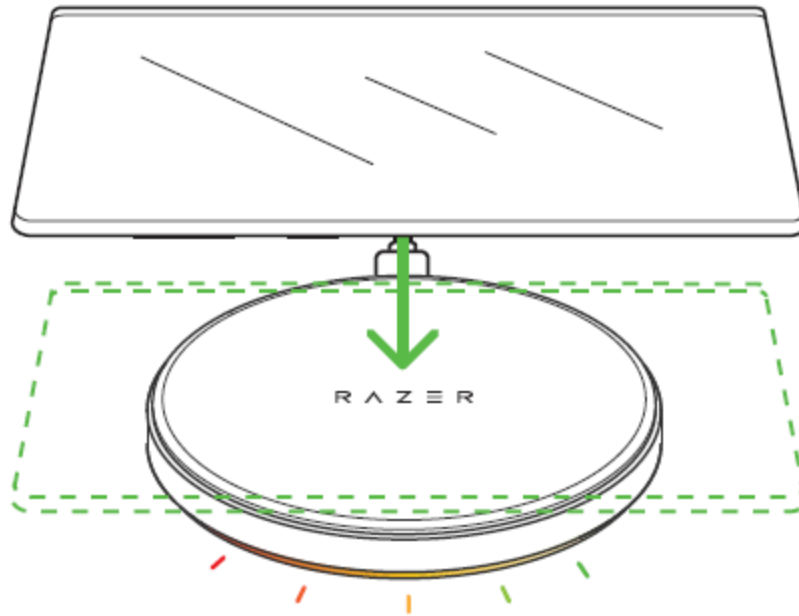


**i** When fast charging (10W), the underglow lighting will display a rapid wave of colors.

 If the underglow lighting continuously flashes in red (a charging error), check if your smartphone is compatible and/or properly placed at the center of the charging surface.

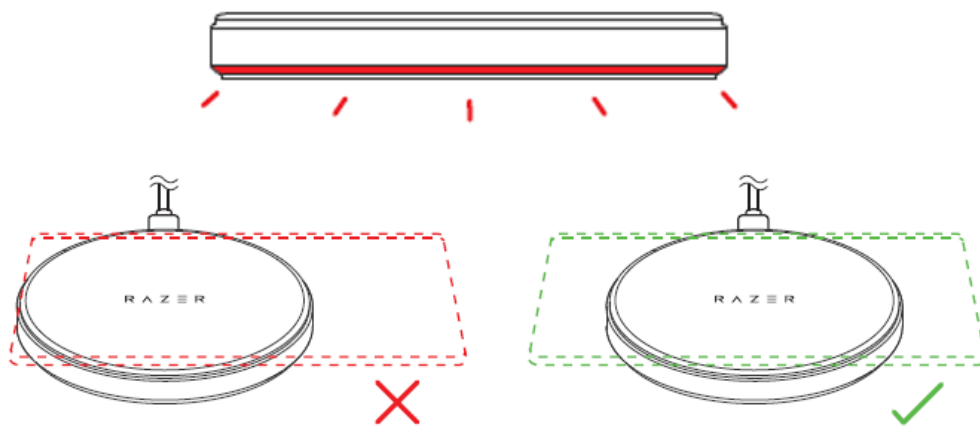



 3. Wait for your smartphone to fully charge. The charging pad will gently pulse in green to indicate that it has finished charging.

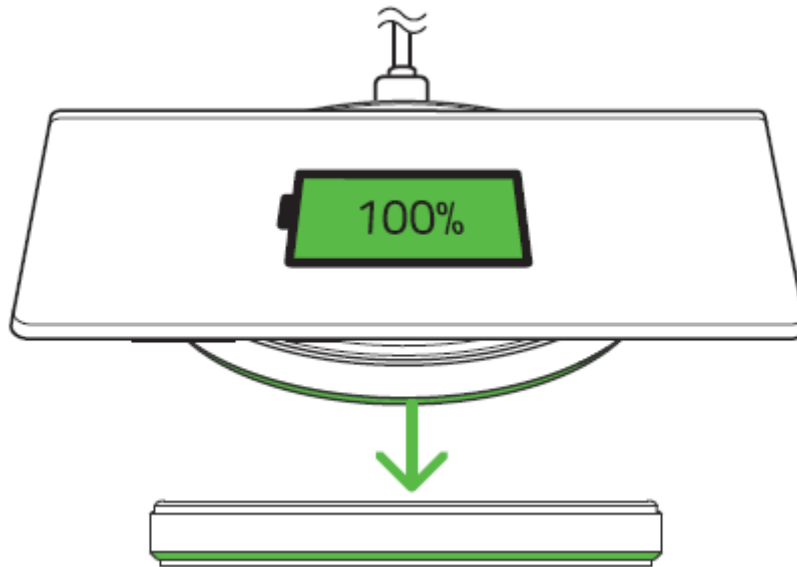

*Your smartphone must support full-battery communication for the charging pad to indicate that it has been fully charged.*

4. Use the Razer Synapse\* app to customize the brightness and lighting effects of your charging pad when charging and/or idle, and even synchronize its lighting with other Razer Chroma-enabled devices for a unified look across your devices.

*\*Install Razer Synapse when prompted or download the installer from [razer.com/synapse](https://razer.com/synapse).*

## 4. CUSTOMIZING THE CHARGING PAD LIGHTING VIA RAZER SYNAPSE 3

 
**i** Internet connection is required for installation, updates and cloud-based features. Registering for a Razer ID account is recommended, but optional. All listed features are subject to change based on the current software version, connected device(s), and supported apps and software.

### SYNAPSE TAB

The Synapse tab is your default tab when you first launch Razer Synapse. This tab allows you to navigate the Dashboard subtab.


#### Dashboard

The Dashboard subtab is an overview of your Razer Synapse where you can access all your Razer devices, modules, and online services.

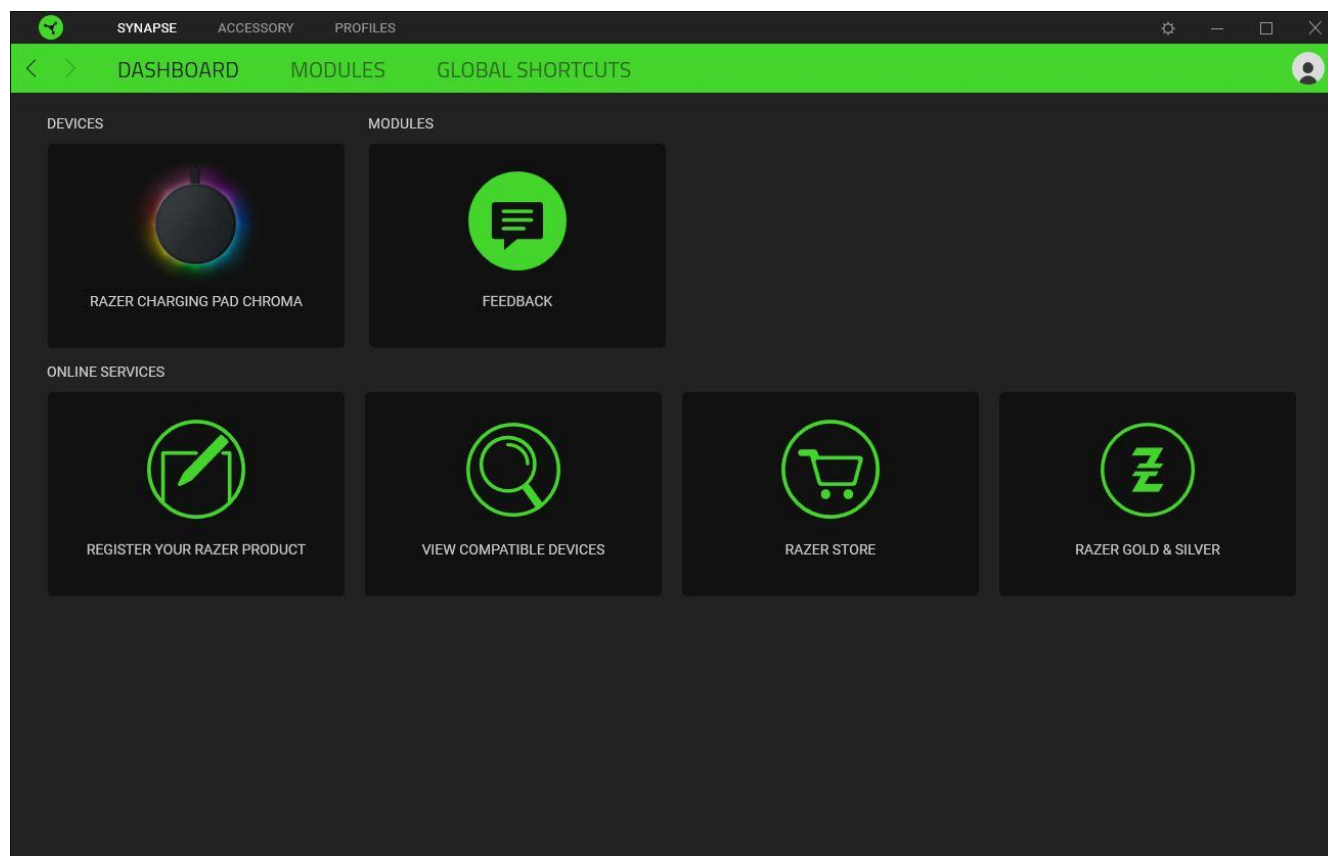

## Modules

 
The Modules subtab displays all installed and available modules for installation.

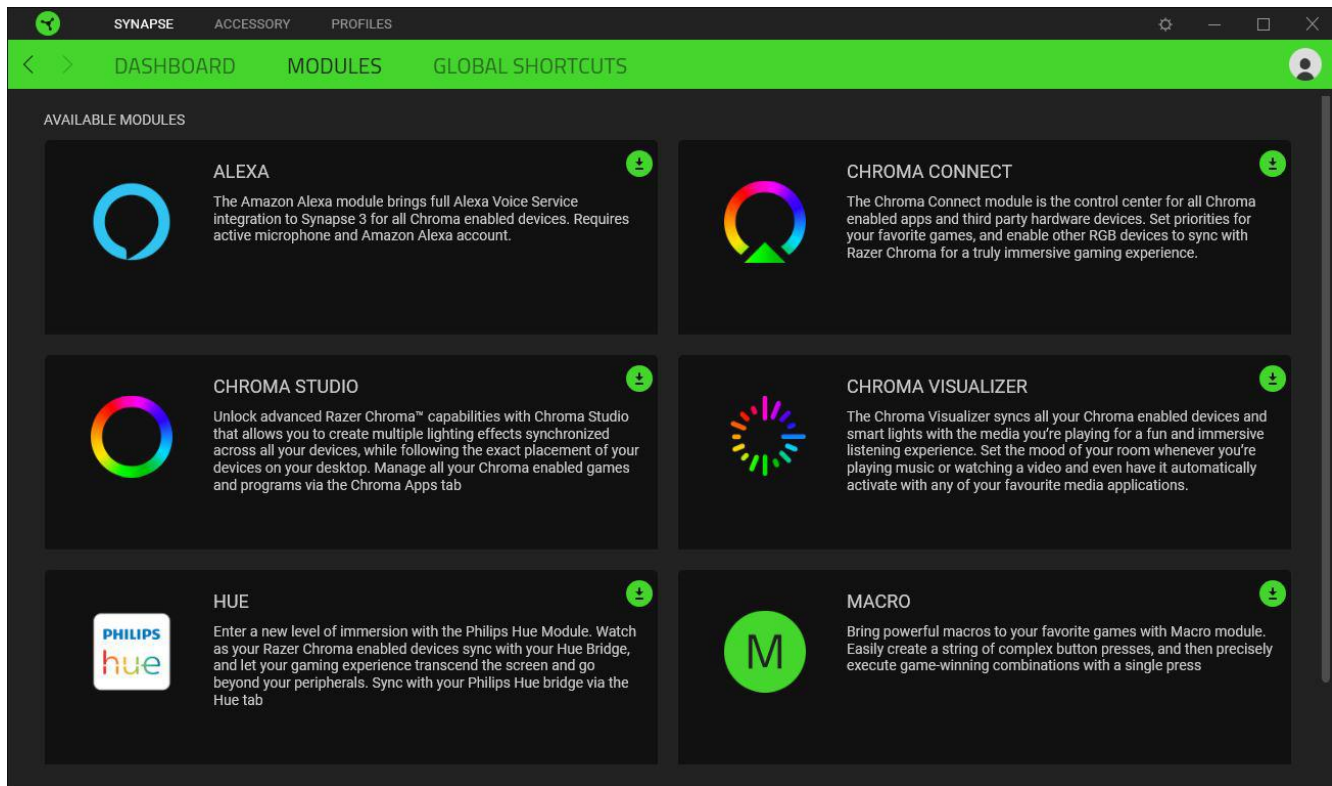

## Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs which apply across all device profiles. [Learn more about Profiles](#)

 ! *Only Razer Synapse-enabled device inputs will be recognized.*

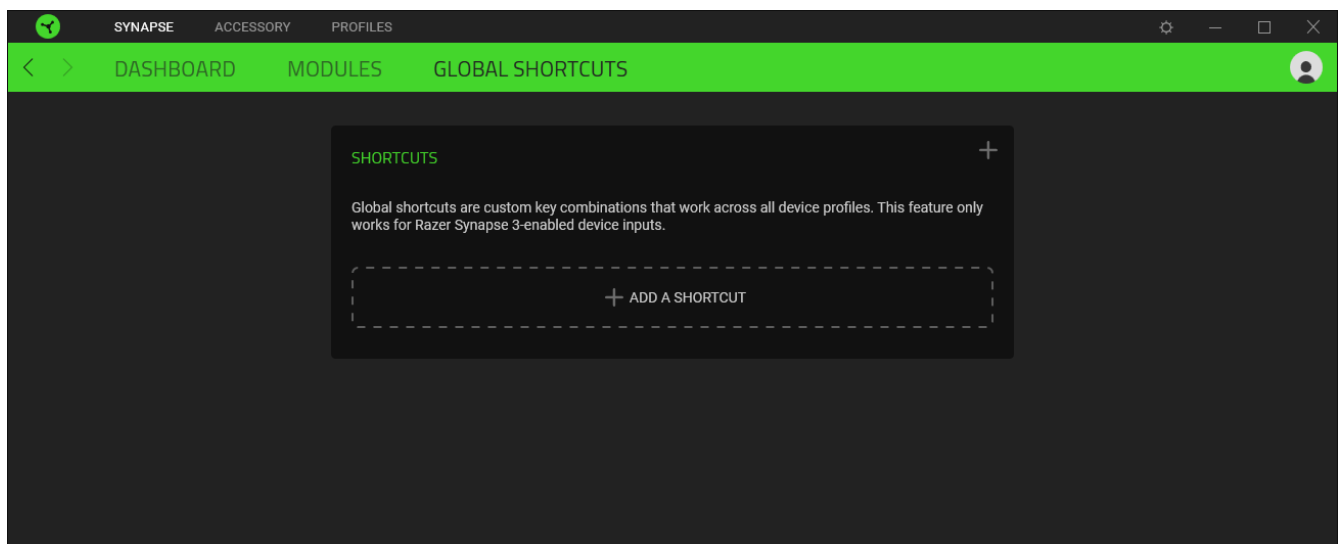


## ACCESSORY TAB

The Accessory tab is the main tab for your charging pad. From here, you'd be able to customize the brightness and lighting of your charging pad when idle, charging and/or fast charging. Changes made under this tab are automatically saved to your system and cloud storage.

### Lighting

 The Lighting subtab enables you to customize the lighting of your Razer device.

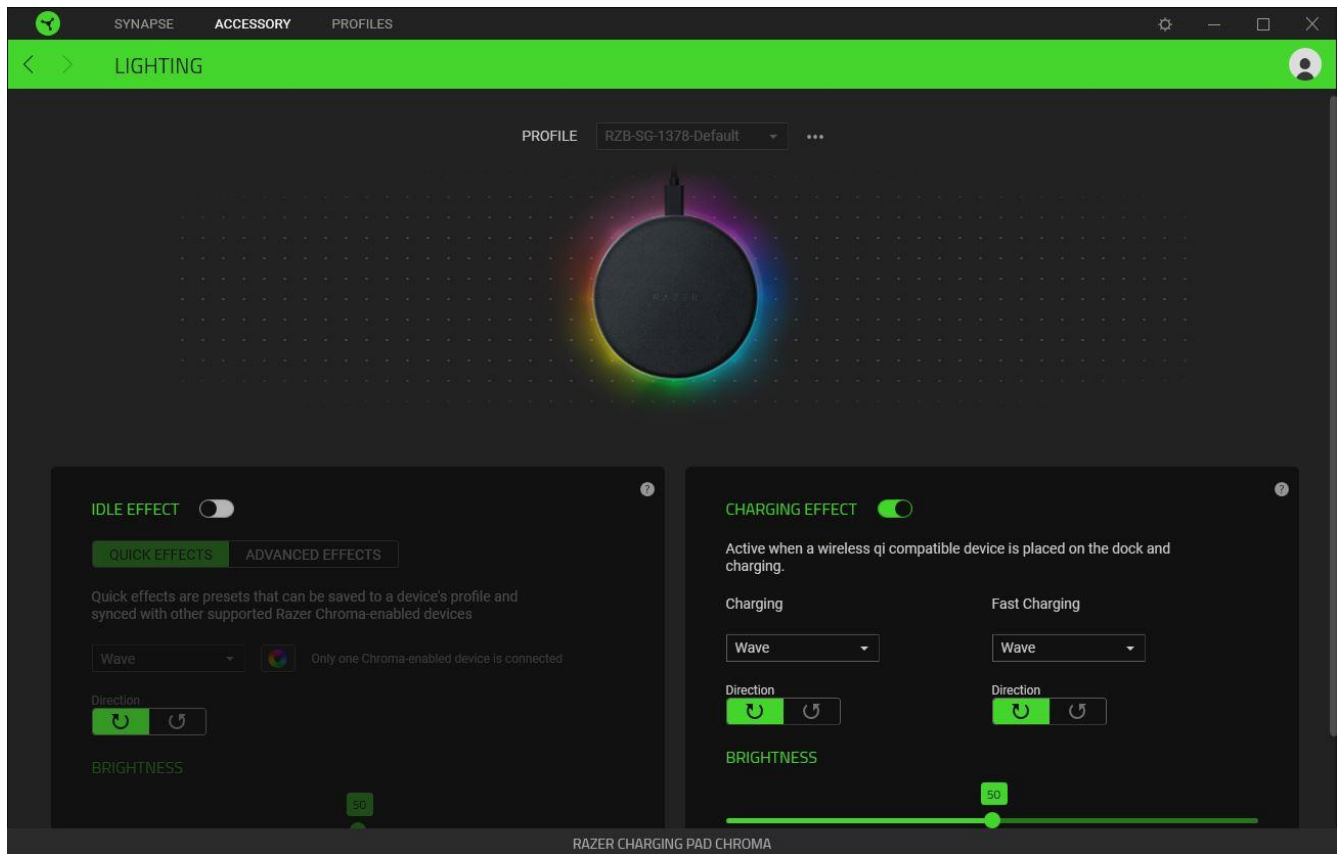

### Profile





A Profile is a data storage for keeping all your Razer devices' settings. By default, the profile name is based on your system's name. To add, import, rename, duplicate, export, or delete a profile, simply press the profile's corresponding Miscellaneous button ( ●●● ).


### Idle Effect

Apply an effect when the charging pad is powered on but not charging a device; or adjust the idle effect's brightness using its corresponding brightness slider. You may toggle the Idle Effect option if you want to disable this setting.

## Quick Effects


A number of quick effects can be selected and applied to your device's lighting, as listed here:

	Name	Description	How to set up
	Breathing	The lighting will fade in and out of the selected color(s)	Select up to 2 colors or randomize colors
	Spectrum cycling	The lighting will cycle between 16.8 million colors indefinitely	No further customization required
	Static	The device will remain lit in the selected color	Select a color
	Wave	The lighting will scroll in the direction selected	Select either clockwise or counter-clockwise wave direction

If you have other supported Razer Chroma-enabled devices, you can synchronize their quick effects with your Razer device by clicking the Chroma Sync button (  ).

 *Only devices that support the selected lighting effect will synchronize.*

## Advanced Effects

The Advanced Effects option allows you to choose a Chroma Effect you want to use on your Razer Chroma-enabled device. To start making your own Chroma Effect, simply press the Chroma Studio button (  ).

## Charging Effect

Set a quick effect when the charging pad is standard charging (5W) or fast charging (10W) your device; or adjust the charging effect's brightness using its corresponding brightness slider. You may toggle the Charging Effect option if you want to disable this setting.

 *You may also set the charging pad to use active Chroma effects while charging by enabling **Prioritize Razer Chroma-supported games and app effects even when charging** option.*

## Switch Off Lighting

 
Enable this power saving option to disable your device's lighting in response to your system's display turning off.

## PROFILES TAB

The Profiles tab is a convenient way of managing all your profiles and linking them to your games and applications.

### Devices


View which games are linked to each device's profiles or which Chroma Effect is linked to specific games using the Devices subtab.

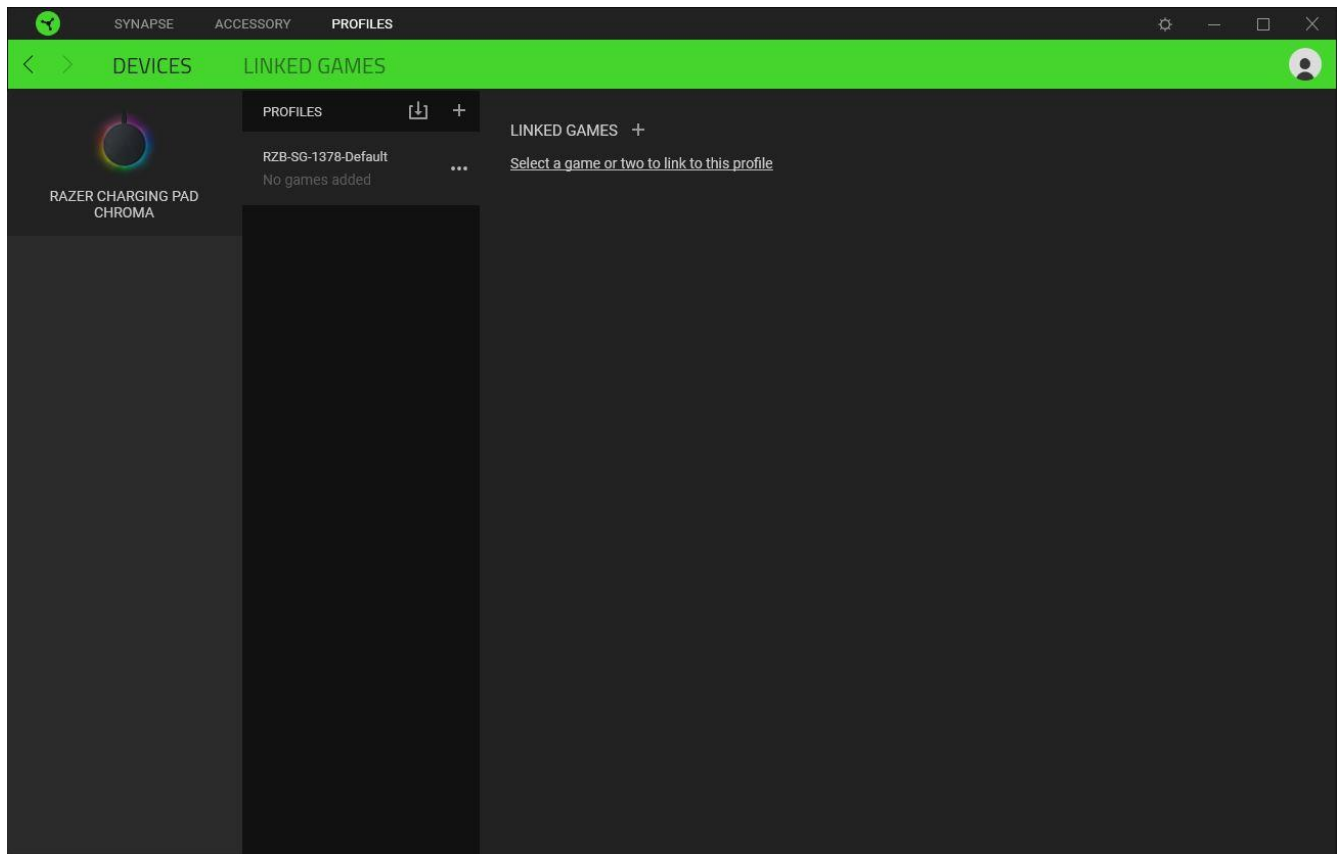

You can import Profiles from your computer or from the cloud through the import button (📁) or create new profiles within the selected device using the add button (+). To rename, duplicate, export, or delete a profile, simply press the Miscellaneous button (⋮). Each profile can be set to automatically activate when you run an application using the Linked Games option.

## Linked Games

 
The Linked Games subtab gives you the flexibility to add games, view devices that are linked to games, or search for added games. You can also sort games based on alphabetical order, last played, or most played. Added games will still be listed here even if it is not linked to a Razer device.

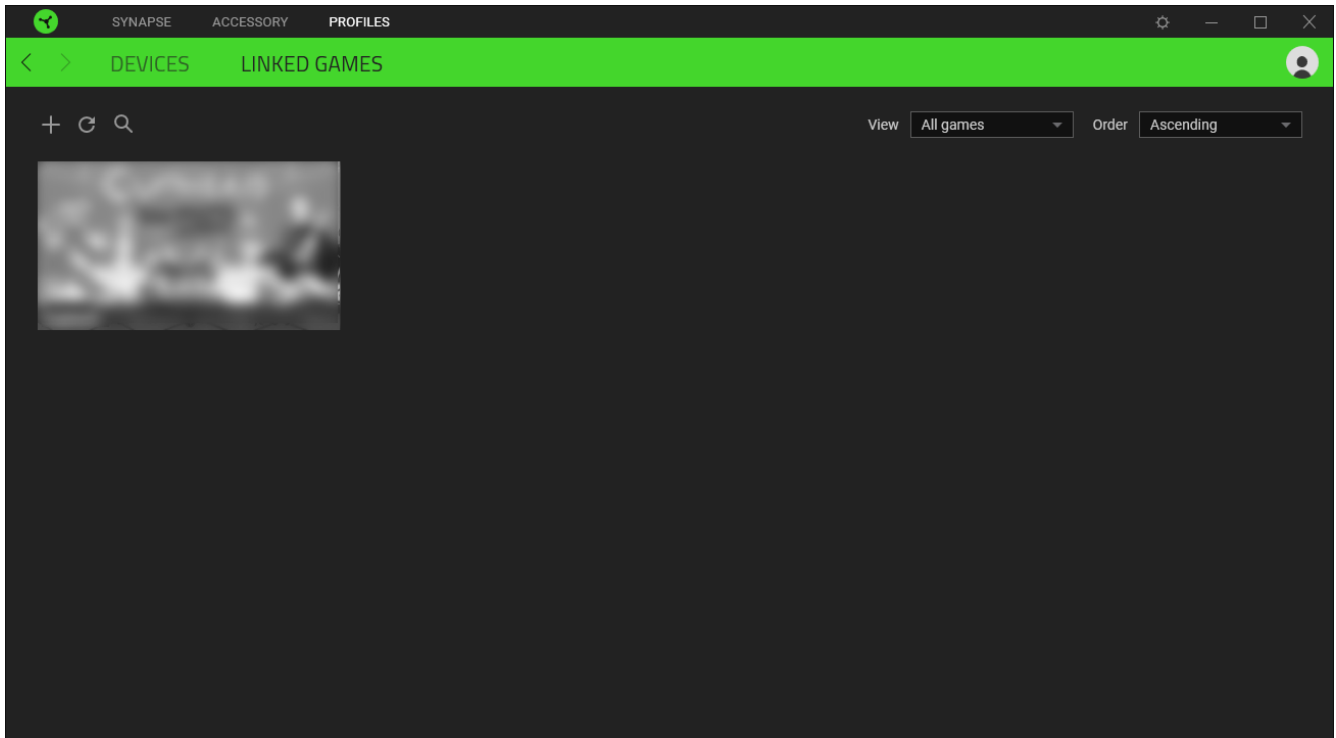

To link games to connected Razer devices or Chroma Effects, simply click on any game from the list, and then click **Select a device and its profile to launch automatically during gameplay** to select the Razer device or Chroma Effect it will link with. Once linked, you may click on the Miscellaneous button ( ●●● ) of the corresponding Chroma Effect or device to select a specific Chroma Effect or profile.

## SETTINGS WINDOW

 The Settings window, accessible by clicking the (⚙️) button on Razer Synapse, enables you to configure the startup behavior and display language of Razer Synapse, view the master guides of each connected Razer device, or perform factory reset on any connected Razer device.

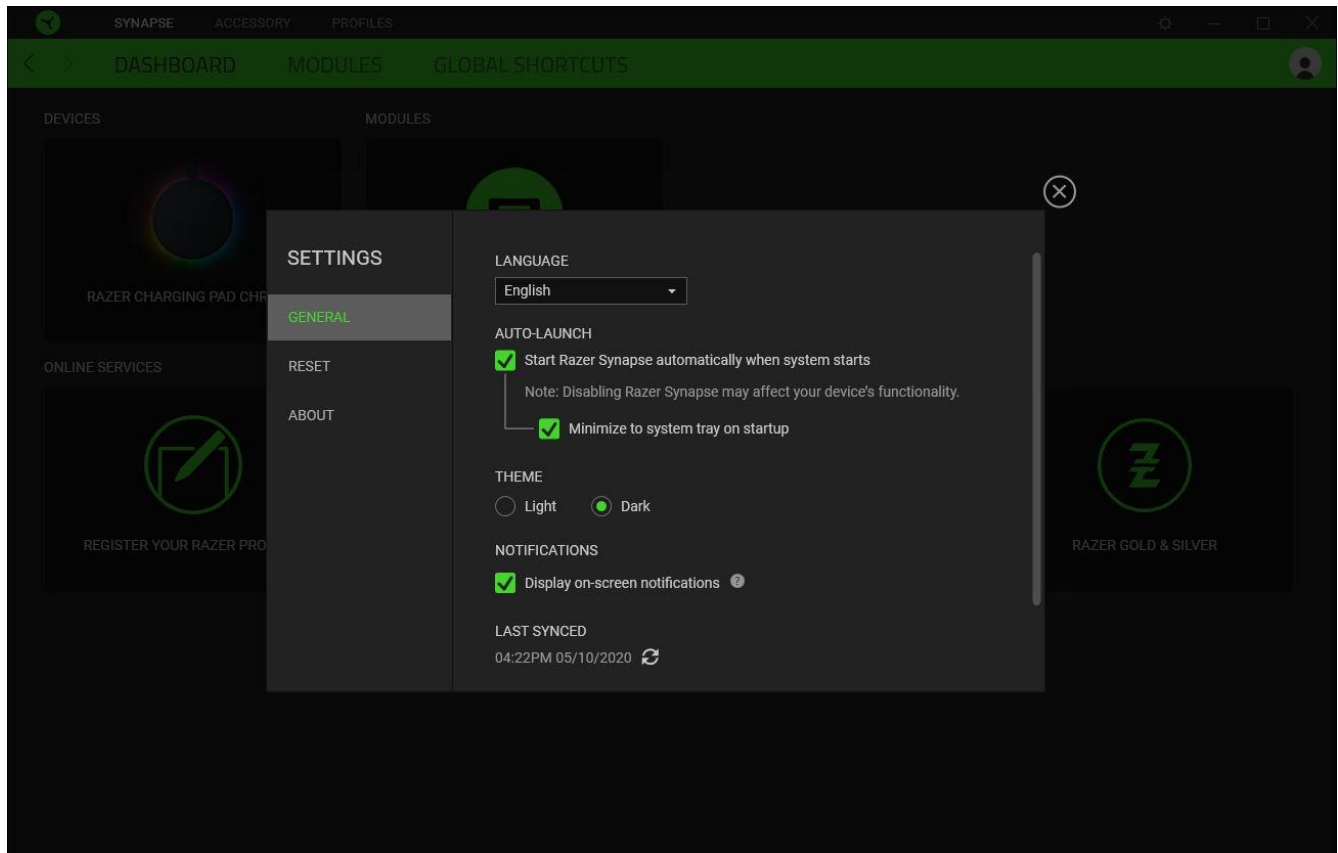

### General tab

The default tab of the Settings window. The General tab enables you to change the software's display language, start-up behavior, display theme, and on-screen notifications display. You may also manually sync your profiles to the cloud (↺️) or view the master guide of all connected Razer devices and installed modules.

### Reset tab

The Reset tab allows you to perform a factory reset on all connected Razer devices with on-board memory and/or reset Razer Synapse tutorials to acquaint yourself again with Razer Synapse's new features on its next launch.



*By resetting a Razer device, all profiles stored on the selected device's on-board memory will be erased.*



**About tab**

The About tab displays brief software information, copyright statement and provides relevant links for its terms of use. You may also use this tab to check for software updates, or as a quick access to Razer's social communities.

---

## 5. SAFETY AND MAINTENANCE

### SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Charging Pad Chroma 10W Fast Wireless Charger, we suggest that you adopt the following guidelines:

- Should you have trouble using the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to [support.razer.com](https://support.razer.com). Don't attempt to service or fix the device yourself at any time.
- Don't take apart the device and don't attempt to operate it under abnormal current loads. Doing so will void your warranty.
- When using a power adapter (not included) with the device, make sure that its Type C cable is fully inserted into the power adapter before plugging it into a power outlet.
- When charging Qi™ enabled accessories, make sure the accessory is positioned on the center of the charging pad with its charging coil facing the charging surface.
- Place the device on a stable surface that allows adequate air ventilation. Don't place the device on any unstable surface as the device may fall which may cause injury, damage to property, and even the product itself.
- Don't use or place the device near water, moisture, or other wet surfaces.
- Don't use or place the device near any heat, naked flame, or other hot surfaces such as radiators, stoves, fireplaces, and candles.
- Use caution when using the device to avoid electrical shock or damage, such as unplugging the device during thunderstorms, ensuring that your hands are dry before using (and handling) the device, keeping it away from any source of liquid and/or heat source, and using all other reasonable precautions needed under the circumstances.
- Protect the Type C cable from being walked on or pinched, particularly at plugs, convenience receptacles, or the point where they exit from the device.
- Don't overload wall electricity outlets, extension cords and plugs. This may result in fire or electrical shock.
- The device should be used for compatible mobile devices only. Please check the packaging to know if it is compatible with your mobile device. Razer shall not be responsible for any damages incurred to any device when using the charging pad.
- Don't use the device under pillows, blankets or near flammable surfaces as the device will generate heat while charging.

- The device should only be operated using the type of power source indicated on the device. If you are unsure of the power source, please consult the local power company or a qualified technician.
- Refer all servicing to qualified service personnel. This is required when the device has been damaged in any way, such as if its Type C cable is damaged, liquid has been spilled or objects have fallen on the device; the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

## **MAINTENANCE AND USE**

The Razer Charging Pad Chroma 10W Fast Wireless Charger requires minimum maintenance to keep it in optimum condition. Once a month, we recommend you unplug the charging pad and gently clean it using a soft cloth or cotton swab to prevent dirt buildup. Don't use soap or harsh cleaning agents.

---

## 6. LEGALESE

### **COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION**

©2020 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, "For Gamers. By Gamers.", and "Razer Chroma" logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries.

The 'Qi' symbol is a trademark of the Wireless Power Consortium.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

All other trademarks and trade names are the property of their respective owners and other company and product names mentioned herein may be trademarks of their respective companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Charging Pad Chroma 10W Fast Wireless Charger (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

### **LIMITED PRODUCT WARRANTY**

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://www.razer.com/warranty).

### **LIMITATION OF LIABILITY**

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

### **GENERAL**

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without

invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.