

CONFIGURING YOUR RAZER SALMOSA

Adjust the Razer Salmosa's pointer sensitivity.

Activate On-The-Fly Sensitivity to change tl sensitivity settings without the need to enter the

Activating the SHOW ON-SCREEN option w show a small display indicating the sensitiv range whenever you make changes on the fly.

machine only.

Sensitivity

**SENSITIVITY TAB** 

On-The-Fly Sensitivity™

configuration menu.

The features listed here require the Razer Salmosa software driver to be installed and the Razer Salmosa Tray Icon to be active. Each setting will be saved to the current Profile on the current

Salmosa

SCHOLL WHEEL BUTTONS

0


www.razerzone.com | s


KEŲ FEBTUCES

Default button assignments


**e** | For Gamers. by Gamers.™



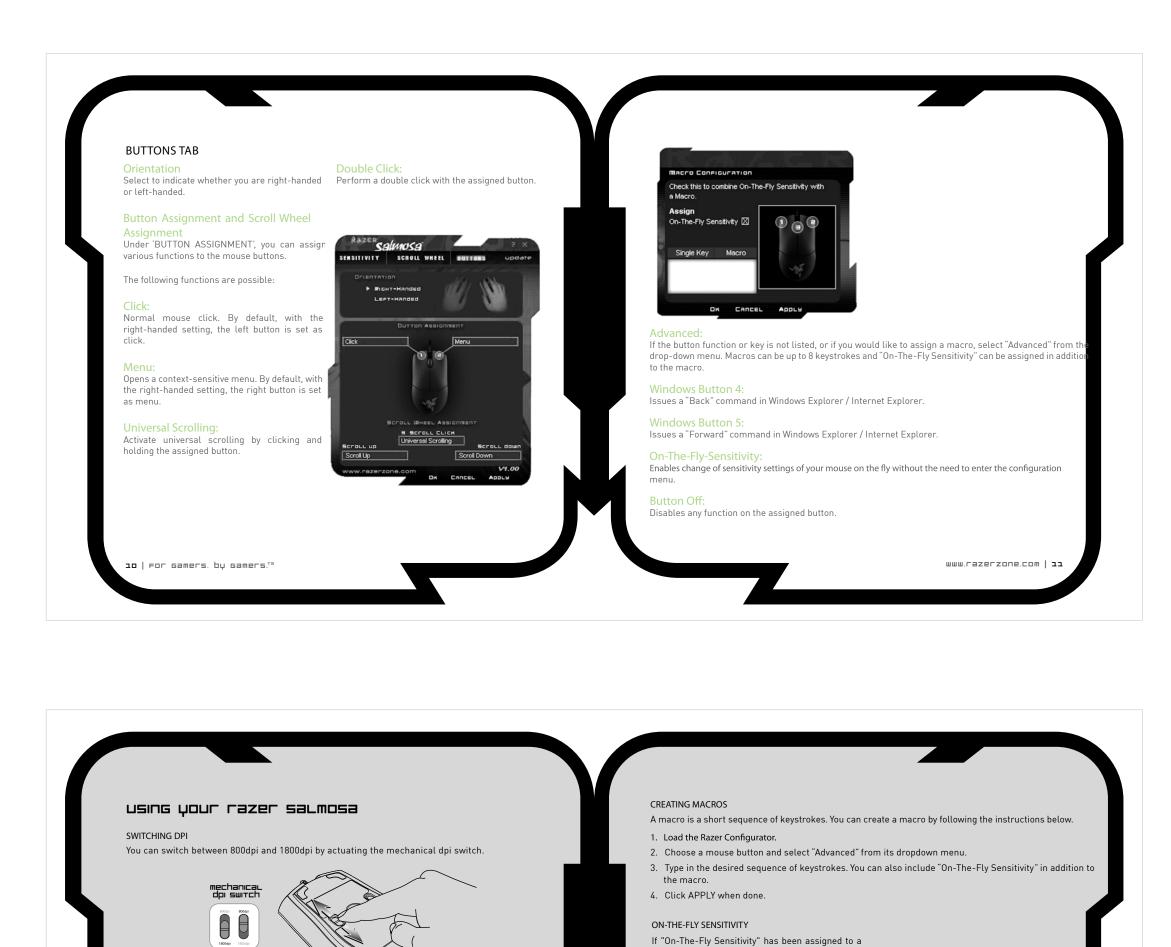

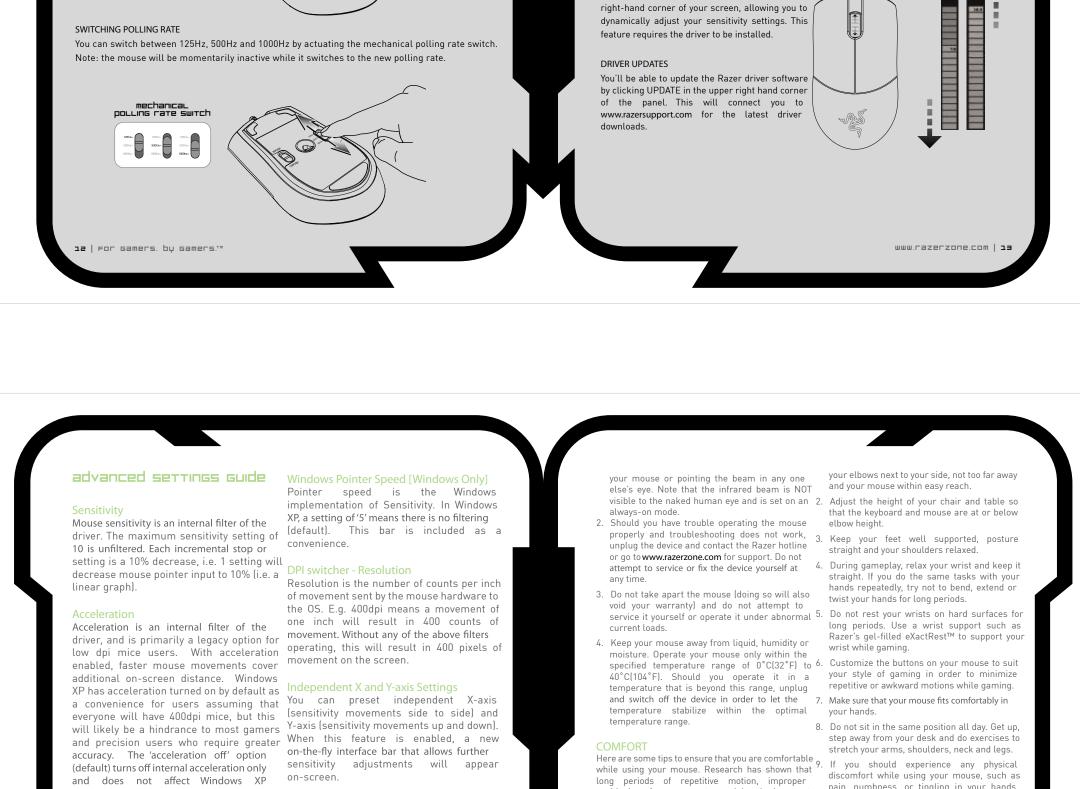

button, pressing that assigned button and moving the scroll wheel will produce a bar at the lower

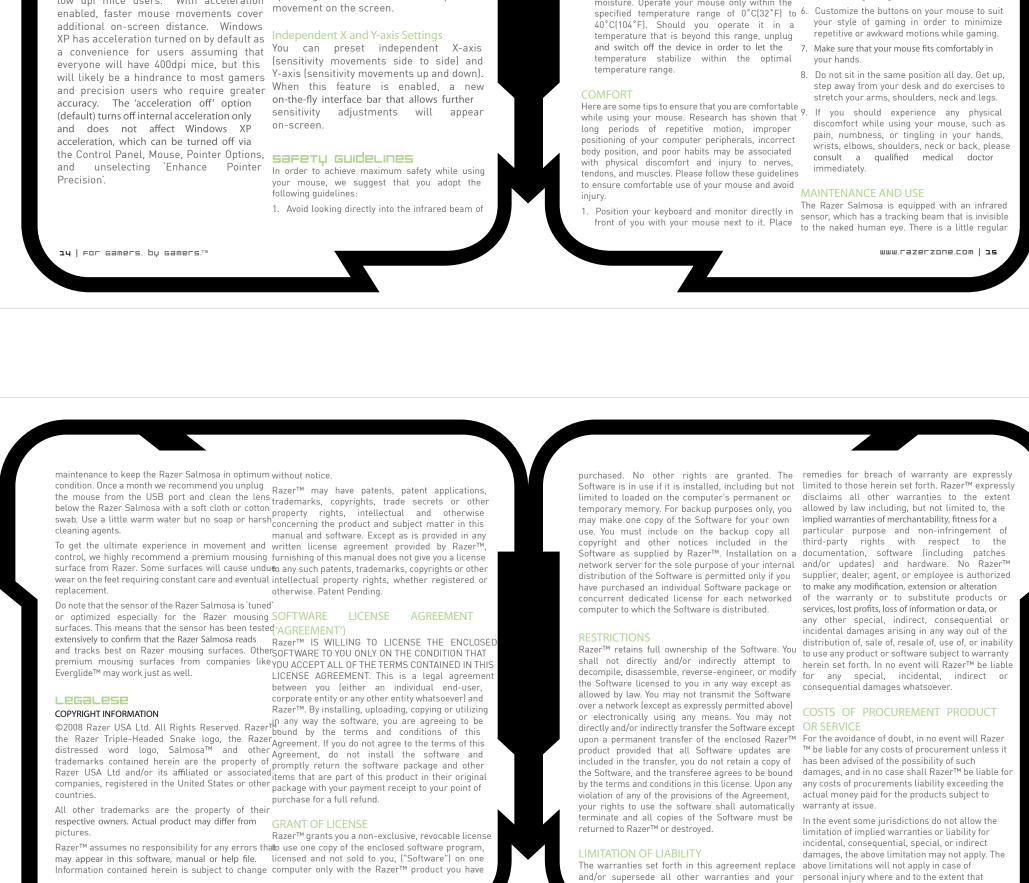

www.razerzone.com | 17

**16** | For gamers. by gamers.™



