



RAZER BLADE PRO

MASTER GUIDE

The Desktop in Your Laptop

Setting a new standard for desktop replacement laptops, the **Razer Blade Pro** delivers a desktop gaming experience in an incredibly thin all-aluminum chassis.

Armed with all the performance of a desktop driven by an overclocked 7th Gen Intel® Core™ i7 Quad Core processor, the revolutionary NVIDIA® GeForce® GTX 1060 GPU, faster memory and a stunning 17.3" IPS Full HD display, the new Razer Blade Pro sets the new standard in desktop replacements. The Razer Blade Pro is also VR ready for the latest in immersive gaming experiences and features the best-in-class components, including the world's first ultra-low-profile mechanical keyboard powered by Razer Chroma™. It's also the world's first THX® Certified Mobile Device, delivering an immersive experience unlike any other laptop with a pre-calibrated, color accurate display and high fidelity audio with increased output and lower distortion.

Measuring in at a mere 0.88" thin, it's not only one of the most powerful laptops, it's also the thinnest 17" desktop replacement laptop in its class. A true portable powerhouse – it's the Desktop in Your Laptop.

CONTENTS

1. PACKAGE CONTENTS / REGISTRATION / TECHNICAL SUPPORT 3

2. DEVICE LAYOUT 4

3. SETTING UP YOUR RAZER BLADE PRO 5

4. USING YOUR RAZER BLADE PRO 8

5. CONFIGURING YOUR RAZER BLADE PRO 10

6. SAFETY AND MAINTENANCE 36

7. LEGALESE 38

1. PACKAGE CONTENTS / REGISTRATION / TECHNICAL SUPPORT

 
PACKAGE CONTENTS

- Razer Blade Pro
- Power Adapter + regional power cord
- Micro-fiber cleaning cloth
- Important Product Information Guide

REGISTRATION

Register your product online at razer-id.razerzone.com/warranty to get real-time information on your product's warranty status.

If you haven't registered for a Razer ID yet, register now at razer-id.razerzone.com to get a wide range of Razer benefits.

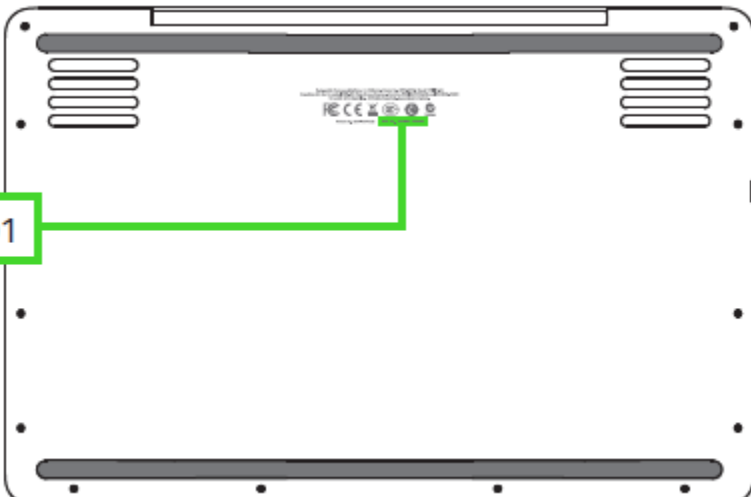

The diagram shows the back of a laptop with a green line pointing to a label on the bottom bezel. A green box highlights the serial number text.

Serial No.: BY16WWAAAA00001

 
 
*Your product's serial number
can be found here.*

TECHNICAL SUPPORT

What you'll get:

- 1 year limited manufacturer's warranty
- 1 year limited battery warranty
- Free online technical support at razersupport.com.


2. DEVICE LAYOUT

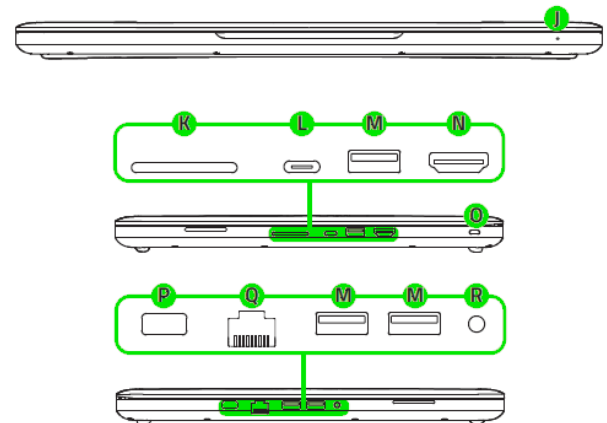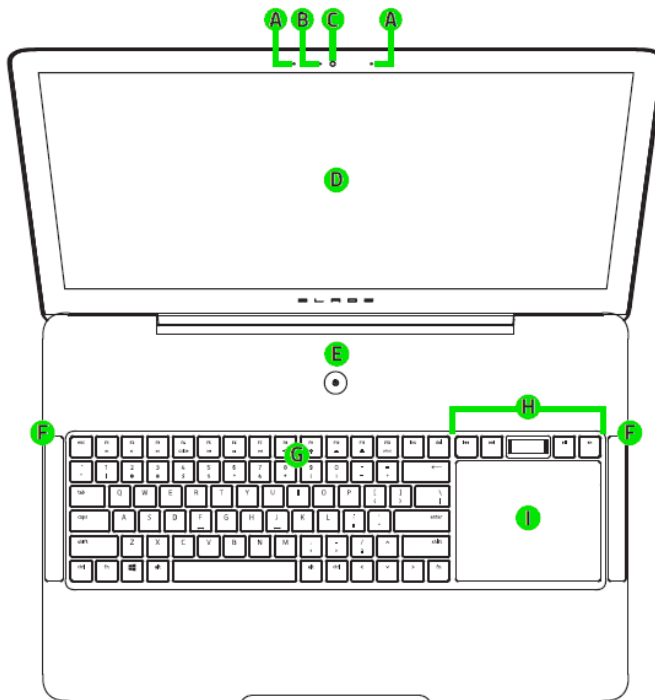

- A. Array microphone
- B. Webcam indicator light
- C. 2.0 MP webcam
- D. 17.3" IPS Full HD display
- E. Power button
- F. Stereo speakers
- G. Anti-ghosting keyboard
- H. Multimedia keys with volume scroll wheel
- I. Multi-touch trackpad
- J. Front LED power indicator
- K. SDXC card reader
- L. Thunderbolt™ 3 port (USB-C™)
- M. USB 3.0 port x3
- N. HDMI port
- O. Kensington™ Security Slot
- P. AC power port
- Q. Ethernet (RJ-45) port
- R. 3.5mm combo port


3. SETTING UP YOUR RAZER BLADE PRO

 CONNECT THE POWER ADAPTER AS FOLLOWS:

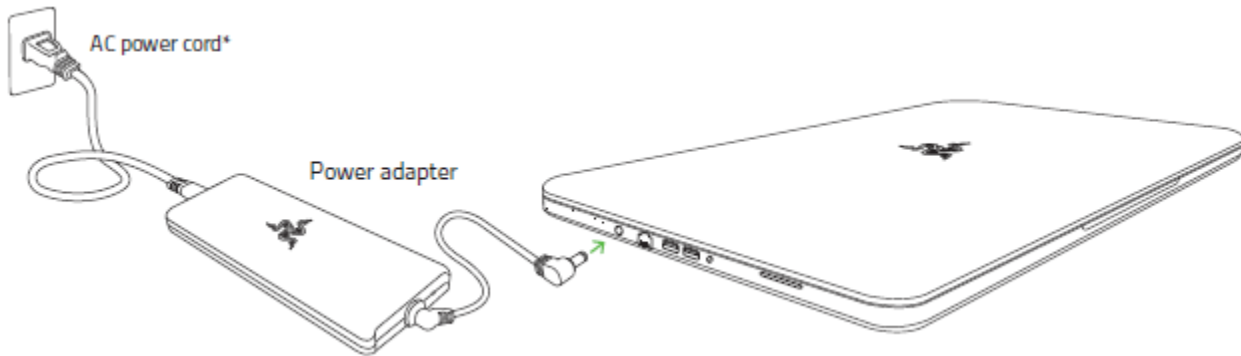

Make sure that the AC plug is properly inserted into the power outlet and the power adapter. An indicator will light up to show that the adapter is receiving appropriate power. Insert the power adapter's connector into the Razer Blade Pro's power port. Press the power button to turn on your Razer Blade Pro.

 **Use the appropriate power cord for your region.*

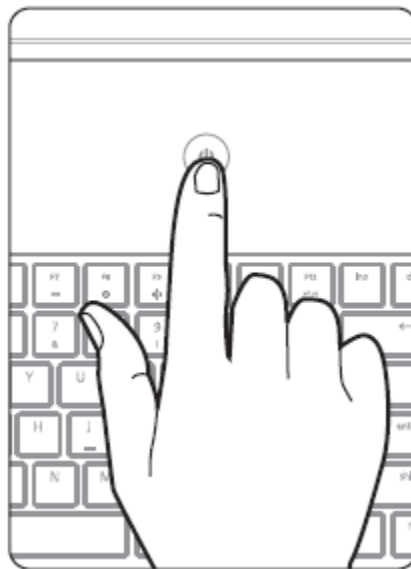


For first time use, please fully charge your Razer Blade Pro or connect it to a power outlet before turning it on. It takes approximately 3 hours to fully charge the Razer Blade Pro.


CONNECTING TO THE INTERNET

Disclaimer: The screens shown are subject to change based on the current version of your Operating System.

 
1. Click the wireless network icon () to bring up the Wireless network list. The system will automatically search for wireless networks in range.

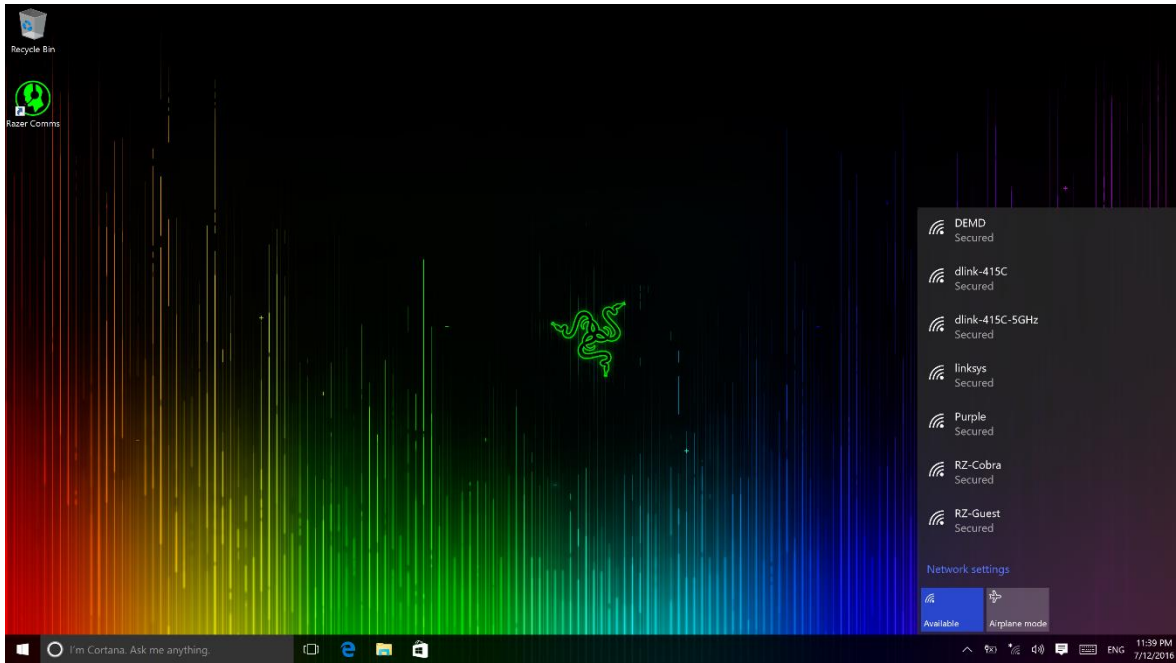

 2. Click the network you wish to connect to and click **Connect**.

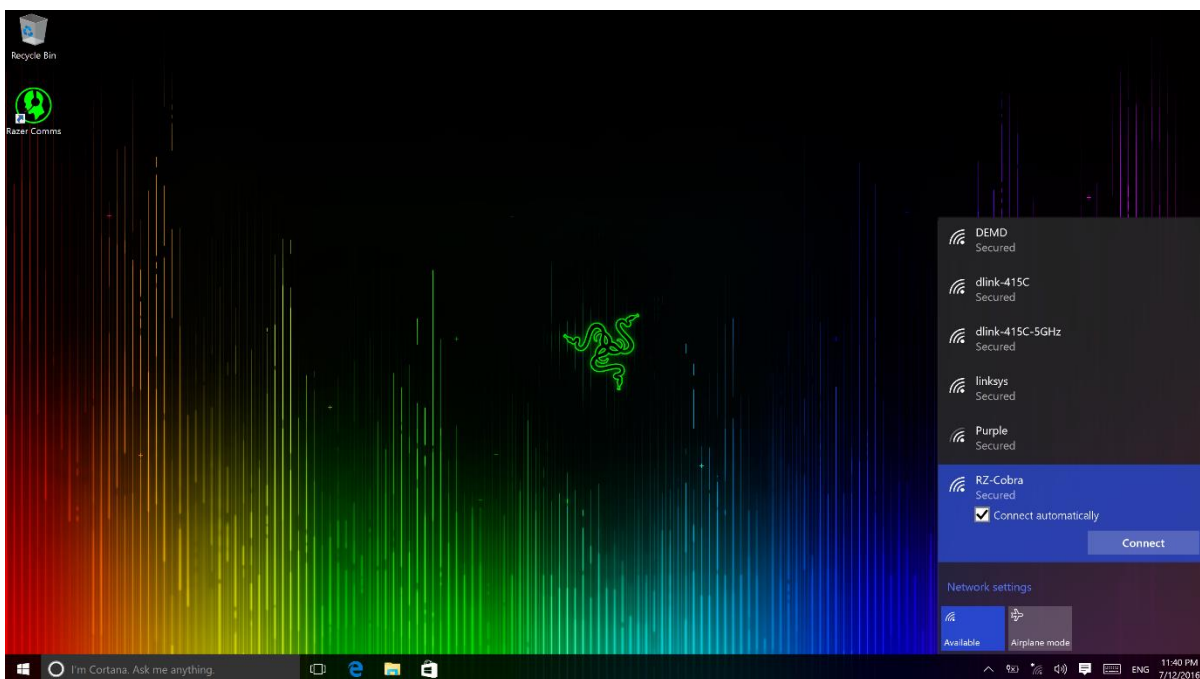

 
3. Enter the network password (if any) and select whether to enable network sharing. Click **Next**.

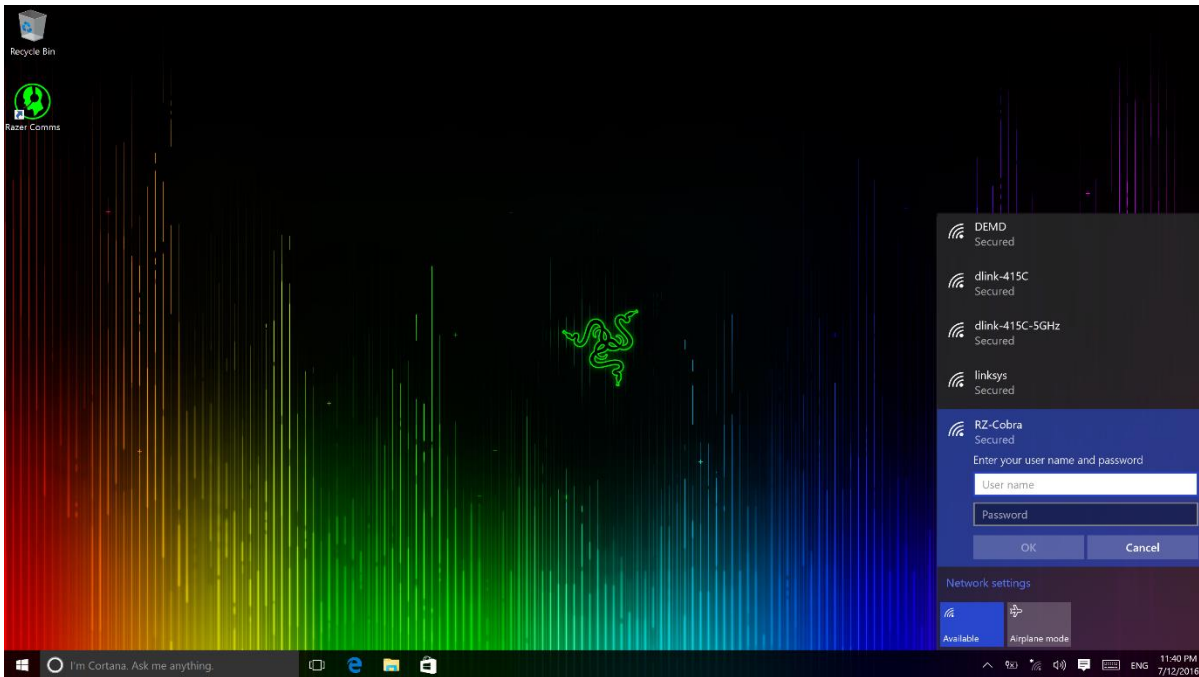

4. Once you are connected to the wireless network, click anywhere outside the window to return to the desktop.

RAZER SYNAPSE ACCOUNT CREATION & INSTALLATION

 Razer Synapse allows you to sync your Razer Blade Pro and other supported Razer peripherals to a cloud server to download driver and firmware updates. You will also be able to configure the key bindings, profiles, macros, backlighting and more within the application. In addition, Razer Synapse will allow you to immediately register your product and get real-time information on your product's warranty status. All your custom settings will be stored in the cloud too.

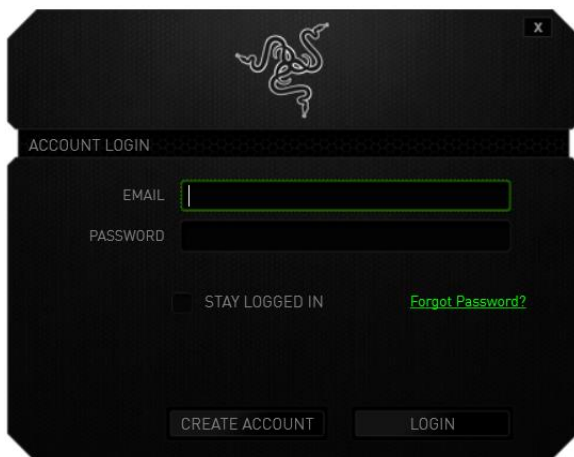

1. Razer Synapse will start automatically once you enter Windows 10.
2. Register for a Razer ID and confirm your new account.
3. Open Razer Synapse and login to your account.
4. Wait until Synapse automatically downloads and installs the necessary drivers

4. USING YOUR RAZER BLADE PRO

STATUS INDICATORS

				
	Sleep	On	Low battery (10% left)	Low battery (3% left)
Front LED indicator				

KEYBOARD FUNCTION KEYS


F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
											

Pressing the “FN” key in combination with the function keys will activate their secondary functions.

Function key	Secondary function description
  	The audio volume controls allow you to mute (), decrease () and increase () the audio output.
	Toggles the monitor output.
  	The media keys allow you to play/pause () the current track, return to the previous track () or skip to the next track ().
 	The screen brightness keys allow you to decrease () or increase () the brightness of the Razer Blade’s screen.
 	The LED control keys allow you to decrease () or increase () the brightness of your keyboard’s LEDs.

MULTIMEDIA PANEL FUNCTIONS

 The Multimedia Track Panel allows you to quickly control your media. With Razer Synapse, you can change the functionality of the Multimedia Track Panel to mouse controls or even customize it to do other functions.

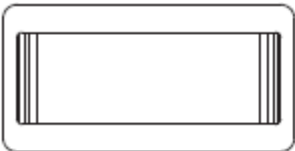
Track panel function	Description
	Return to the previous track
	Skip to the next track
	Scroll up to increase the volume, scroll down to decrease the volume, and press the scroll wheel to mute the audio output.
	Play or pause the current track
	Mute audio output

5. CONFIGURING YOUR RAZER BLADE PRO

Disclaimer: The features listed here require you to log in to Razer Synapse. These features are also subject to change based on the current software version and your Operating System.


SYSTEM TAB

 The System Tab is your default tab when you first install Razer Synapse. This tab allows you to customize your device's profiles, key assignments, trackpad options, and power saving features.

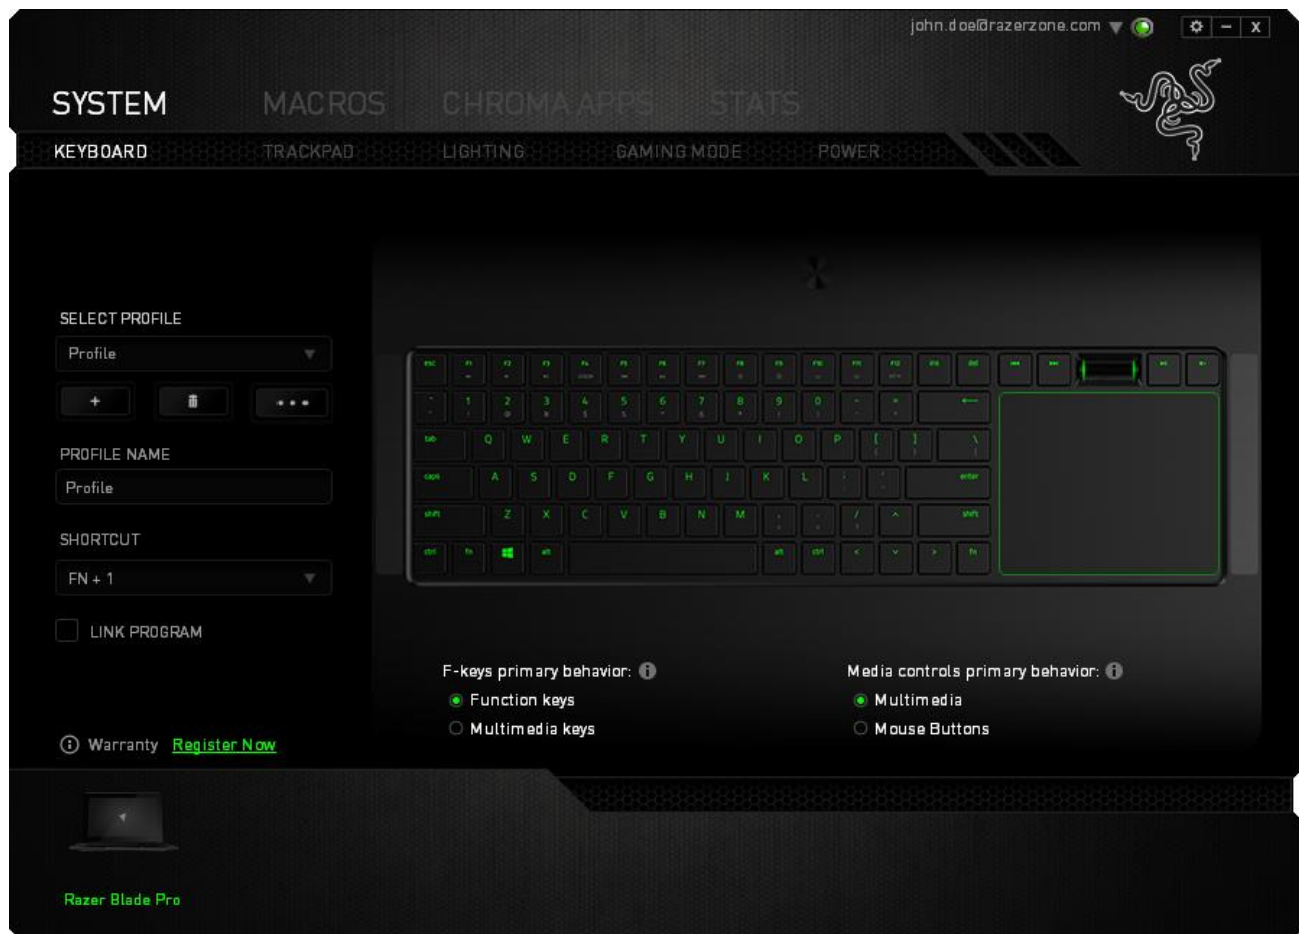

PROFILE

 A profile is a convenient way of organizing all your custom settings and you can have an infinite number of profiles at your disposal. Any changes made within each tab are automatically saved to the current profile and stored into the cloud servers.

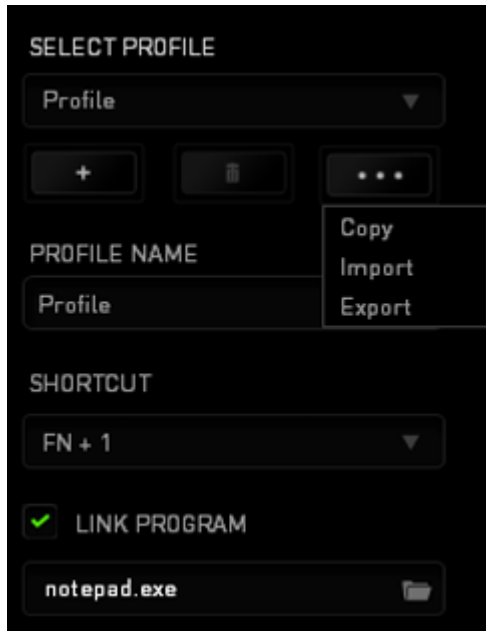


You can create a new profile by clicking the  button or delete the current profile by clicking the  button. The  button allows you to Copy, Import, and Export profiles. Your current profile by default is named "*Profile*" however; you can rename it by typing on the text field below *PROFILE NAME*.

Each profile can be set to *FN + 0 - 9* using the *SHORTCUT* dropdown menu for fast profile switching. Each profile can also be set to automatically activate when you run a program or application using the *LINK PROGRAM* option.


Keyboard Tab

 The Keyboard Tab is where you can modify the basic functionalities of your device such as key assignments and track-panel sensitivity to suit your gaming needs. The changes made in this tab are automatically saved to your current profile.

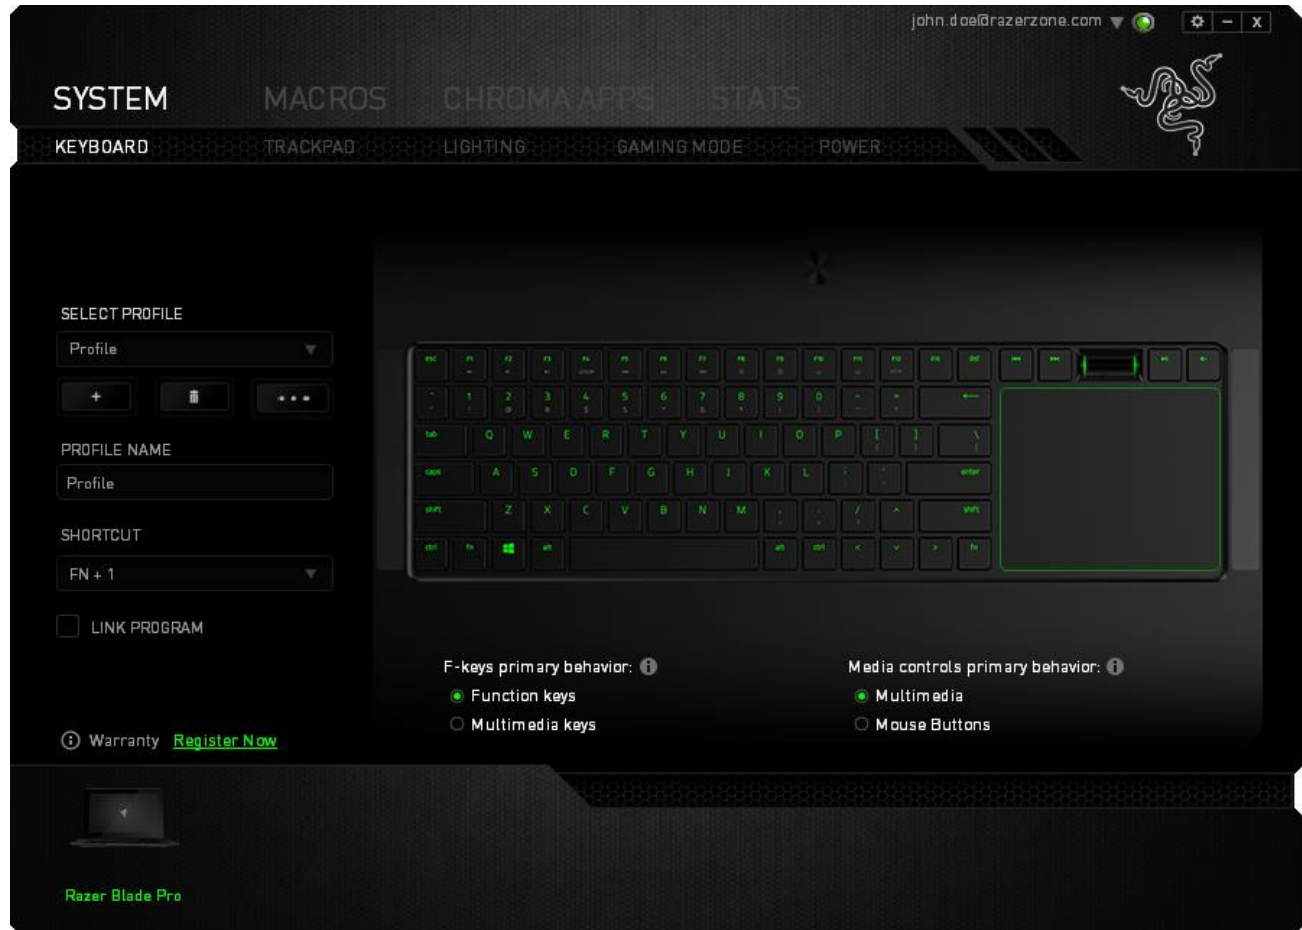

Key Assignment Menu

 Initially, each key is set to DEFAULT. However, you may change the function of this key by clicking the desired key to access the Key Assignment Menu.

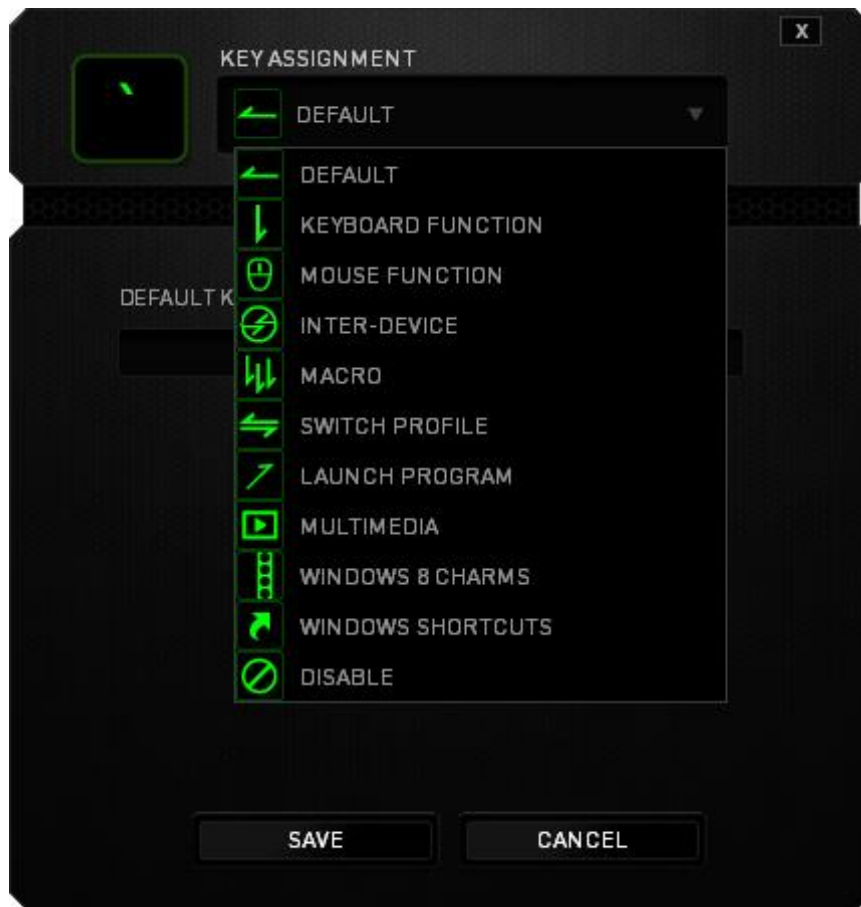

Listed below are the customization options and their description.



Default

This option enables you to return the key to its original function. To choose the DEFAULT, simply select it from the Key Assignment Menu.



Keyboard Function

This option enables you to change any key into another keyboard function. To choose a keyboard function, select KEYBOARD FUNCTION from the Key Assignment Menu and enter the key you wish to use on the given field below. You may also include modifier keys such as Ctrl, Shift, Alt or any of those combinations.



Mouse Function

This option allows you to change any key into a mouse button function. To choose a mouse function, select MOUSE FUNCTION from the Key Assignment Menu and an ASSIGN BUTTON submenu will appear. Listed below are the functions which you can choose from the Assign Button submenu:

- **Left Click** - Performs a left mouse click using the assigned button.
- **Right Click** - Performs a right mouse click using the assigned button.
- **Scroll Click** - Activates the universal scrolling function.
- **Double Click** - Performs a double left click using the assigned button.
- **Mouse Button 4** - Performs a "Backward" command for most internet browsers.
- **Mouse Button 5** - Performs a "Forward" command for most internet browsers.
- **Scroll Up** - Performs a "Scroll Up" command using the assigned button.
- **Scroll Down** - Performs a "Scroll Down" command using the assigned button.
- **Scroll Left** - Performs a "Scroll Left" command using the assigned button.
- **Scroll Right** - Performs a "Scroll Right" command using the assigned button.



Inter-device

Inter-device allows you to change the functionality of other Razer Synapse-enabled devices. Some of these functionalities are device-specific such as using your Razer gaming keyboard to change the Sensitivity Stage of your Razer gaming mouse. When you select Inter-device from the Key Assignment Menu, a sub-menu will appear.

DEVICE TO LINK allows you to choose which currently connected Razer device can be linked while FUNCTION allows you to choose which functionality you want to use for the linked device.



Macro

A Macro is a prerecorded sequence of keystrokes and button presses that is executed with precise timing. By setting a key to Macro, you can conveniently execute a chain of commands. When you select this option from the Key Assignment Menu, a submenu will appear which allows you to choose a prerecorded macro command. See the MACROS TAB to learn more about creating Macro commands.



Switch Profile

The Switch Profile enables you to change profiles on the fly and immediately load all your pre-configured settings. When you select Switch Profile from the Key Assignment Menu, a sub-menu will appear that will allow you to choose which profile to use. An on-screen display will automatically appear whenever you switch profiles.



Launch Program

Launch Program allows you to launch a program or a website using the assigned key. When you select Launch Program from the Key Assignment Menu, two options will appear which allow you to search for the specific program you want to open or write the address of the website you want to visit.



Multimedia Function

This option allows you to bind multimedia playback controls to your device. After selecting Multimedia Function, a submenu will appear. Listed below are the multimedia playback controls you can choose from the submenu:

- Volume Down - Decreases the audio output.
- Volume Up - Increases the audio output.
- Mute Volume - Mutes the audio.
- Mic Volume Up - Increases the microphone volume.
- Mic Volume Down - Decreases the microphone volume.
- Mute Mic - Mutes the microphone.
- Mute All - Mute both microphone and audio output.
- Play / Pause - Play, pause, or resume playback of the current media.
- Previous Track - Play the previous track.
- Next Track - Play the next track.



Windows Charms

This option enables you to assign the key into an Operating System shortcut command. For more information please visit: <http://windows.microsoft.com/en-us/windows-8/getting-around-tutorial>



Windows Shortcuts

This option enables you to assign the key into an Operating System shortcut command. For more information please visit: <http://support.microsoft.com/kb/126449>

 


Disable

This option renders the assigned key unusable. Use Disable if you do not want to use the key or if it interferes with your gaming.

Trackpad Tab

You can adjust the response of the trackpad by clicking the image of the trackpad on the user interface.

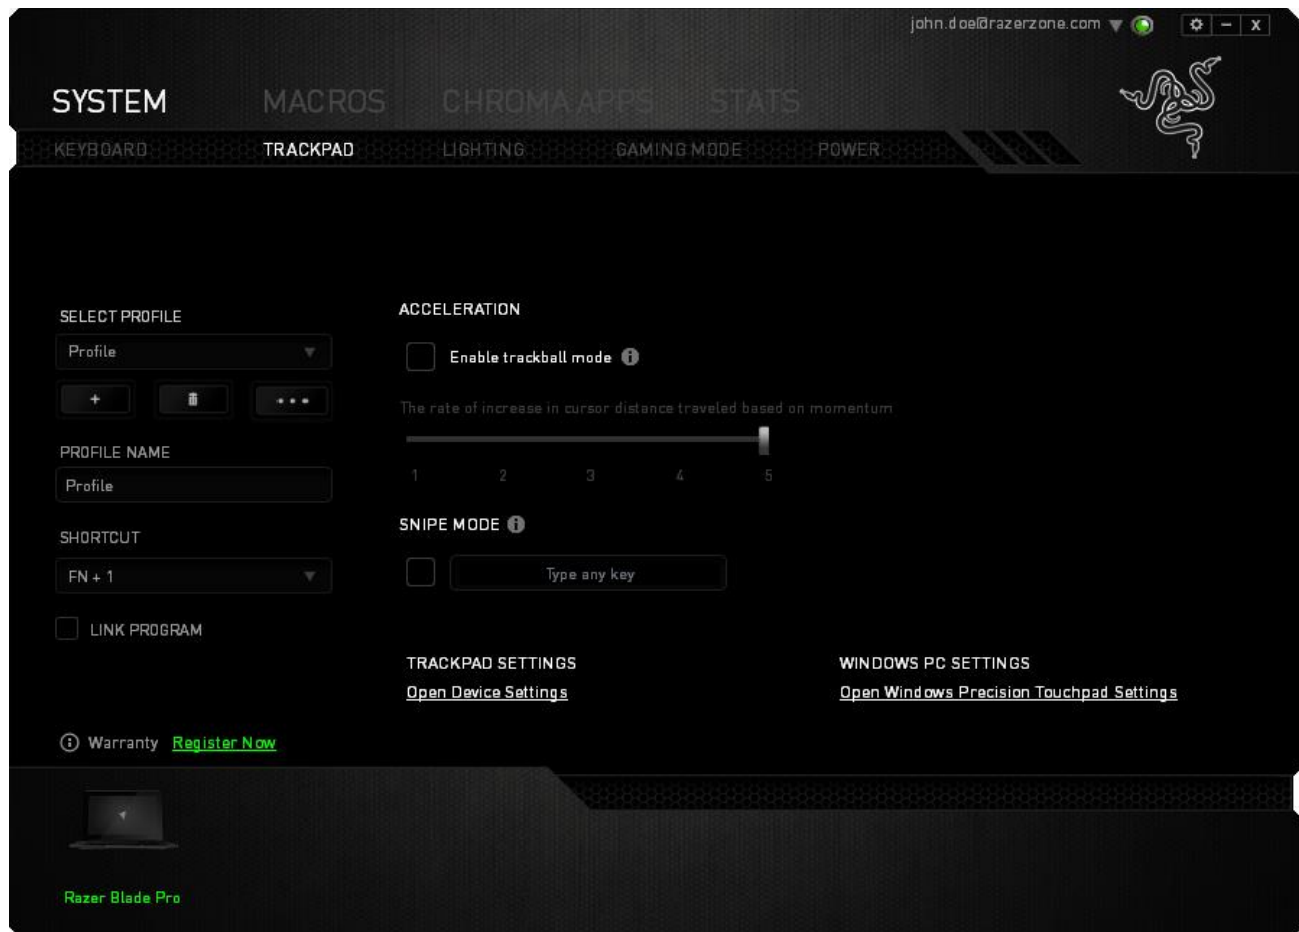


Listed below are the options and their descriptions.

- **Acceleration** - Acceleration increases the cursor's movement speed depending on how quickly you move your finger on the track-panel. The higher the value, the faster the cursor accelerates.
- **Enable Trackball Mode** - This mode imitates the scrolling of a trackball wherein gestures have momentum and cursor movement gradually slows down.
- **Snipe Mode** - When this mode is enabled, holding down the selected key will allow you to reduce the cursor speed by half, resulting in a more precise cursor movement.
- **Trackpad Settings** - Use this link to select your primary button, set the scroll behavior, and change the touchpad delay.
- **Windows PC Settings** - Use this link to edit gestures, cursor pointing options, and other advance features.

Lighting Tab

 This tab allows you to adjust the intensity of the keyboard's backlight by using the BRIGHTNESS slider. You can also enable Razer Synapse to automatically switch off all lighting on the device when the system display is turned off or when the system has been idle for a certain amount of time.

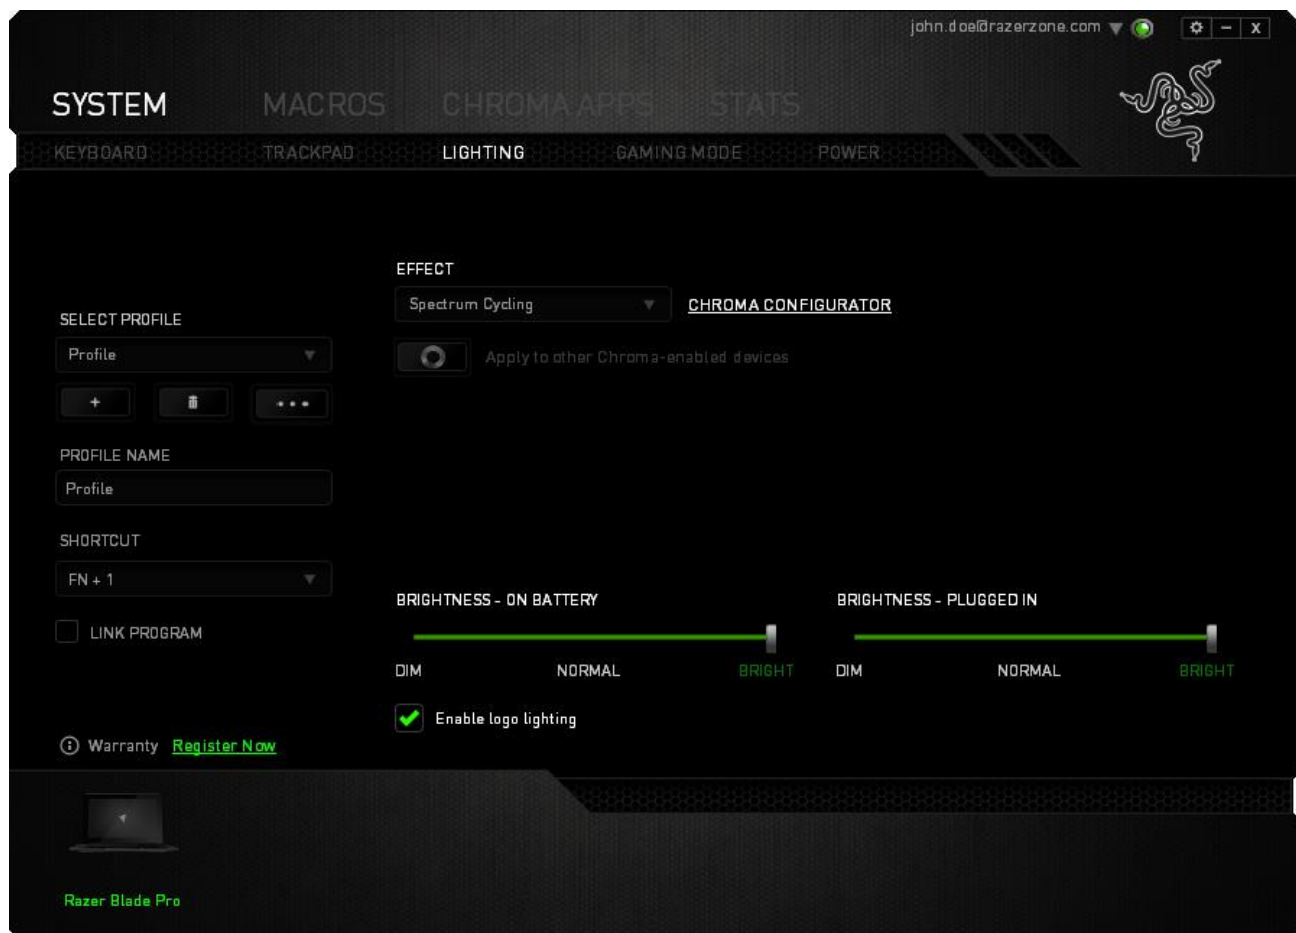

Pre-loaded lighting effects


A number of pre-loaded lighting effects can be selected and applied to your keyboard lighting as a whole, such as spectrum lighting, breathing etc. The default effect is spectrum lighting. Select your desired effect and their corresponding properties (such as color) from the bottom area of this tab.

	Name	Description	How to set up
	Spectrum cycling	The lighting will cycle between 16.8 million colors indefinitely	Default effect. No further customization required
	Wave	The lighting will scroll in the direction selected	Select either left-to-right or right-to-left wave direction
	Static	The LEDs will remain lit in the selected color	Select a color
	Breathing	The lighting fades in and out of the selected color(s)	Select up to 2 colors or randomize colors
	Reactive	The LEDs will light up when a key is pressed. The light will fade off after a specified period	Select a color and a duration
	Ripple	On key press, light will ripple away from the pressed key	Select a color
	Starlight	Each key will have a chance of fading in and out at a random time and duration	Select up to 2 colors or randomize colors and select a duration
	Fire	Each key lights up in warm colors to mimic the motion of flames	No further customization required

Advanced lighting configuration


Accessible from Razer Synapse, is an advanced Chroma configurator for your Chroma-enabled device. Click the link from the LIGHTING TAB to open this configurator.

 1. Select the zones on the keyboard to customize. You can select multiple regions with the CTRL key.
2. Add an Effect layer for the selected region.
3. Customize the effects using the various options.
4. Click the APPLY button to save and apply all configurations to your mouse mat.

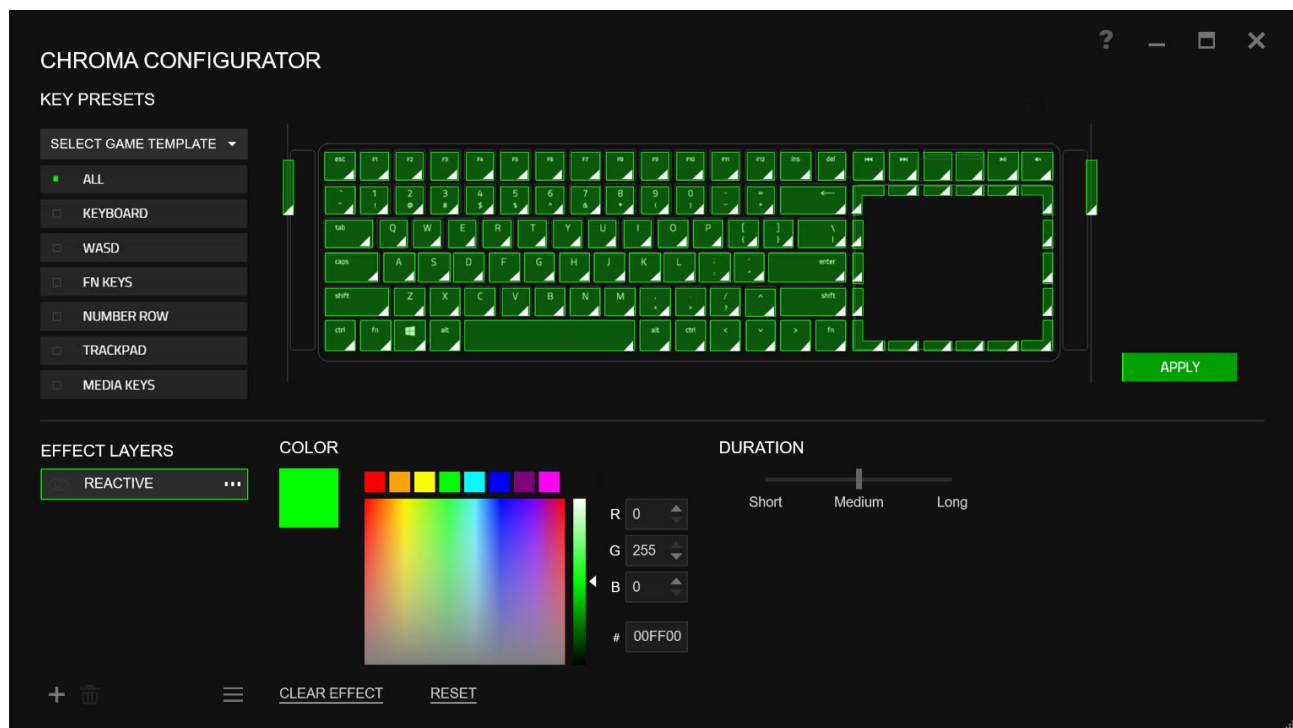


Gaming Mode Tab

 The Gaming Mode Tab helps you prevent accidental key presses. Depending on your settings, you may choose to disable the Windows key, Alt + Tab and Alt + F4. Furthermore, you can maximize the effect of Anti-Ghosting by activating the Gaming mode function.

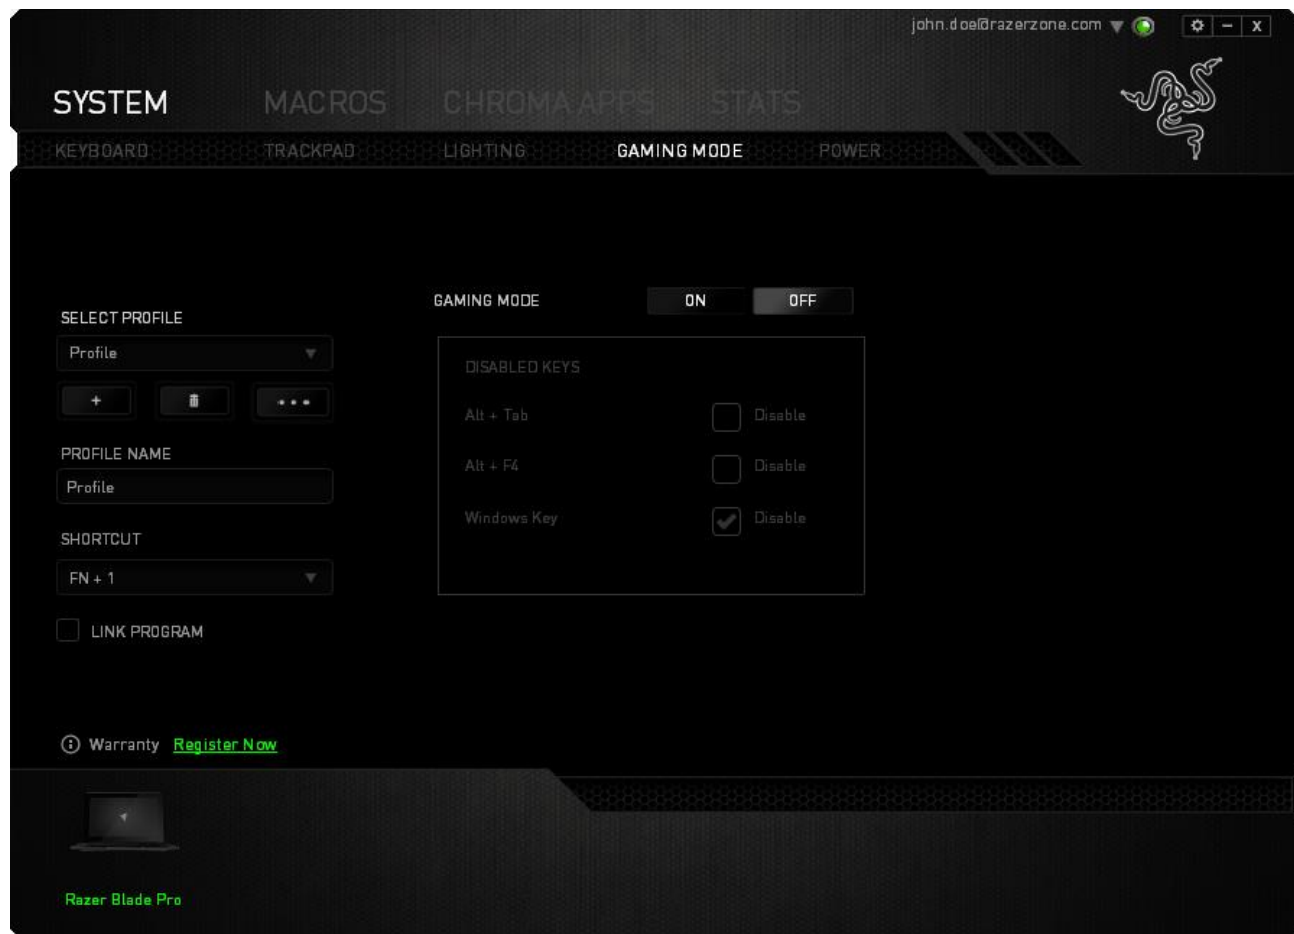


Power Tab

 The Power Tab allows you to manage your device's energy consumption when running on batteries or set your device to enter sleep mode when it has been idle for a certain amount of time. Additionally, this tab allows you to control the performance and fan speed of your Razer Blade Pro.

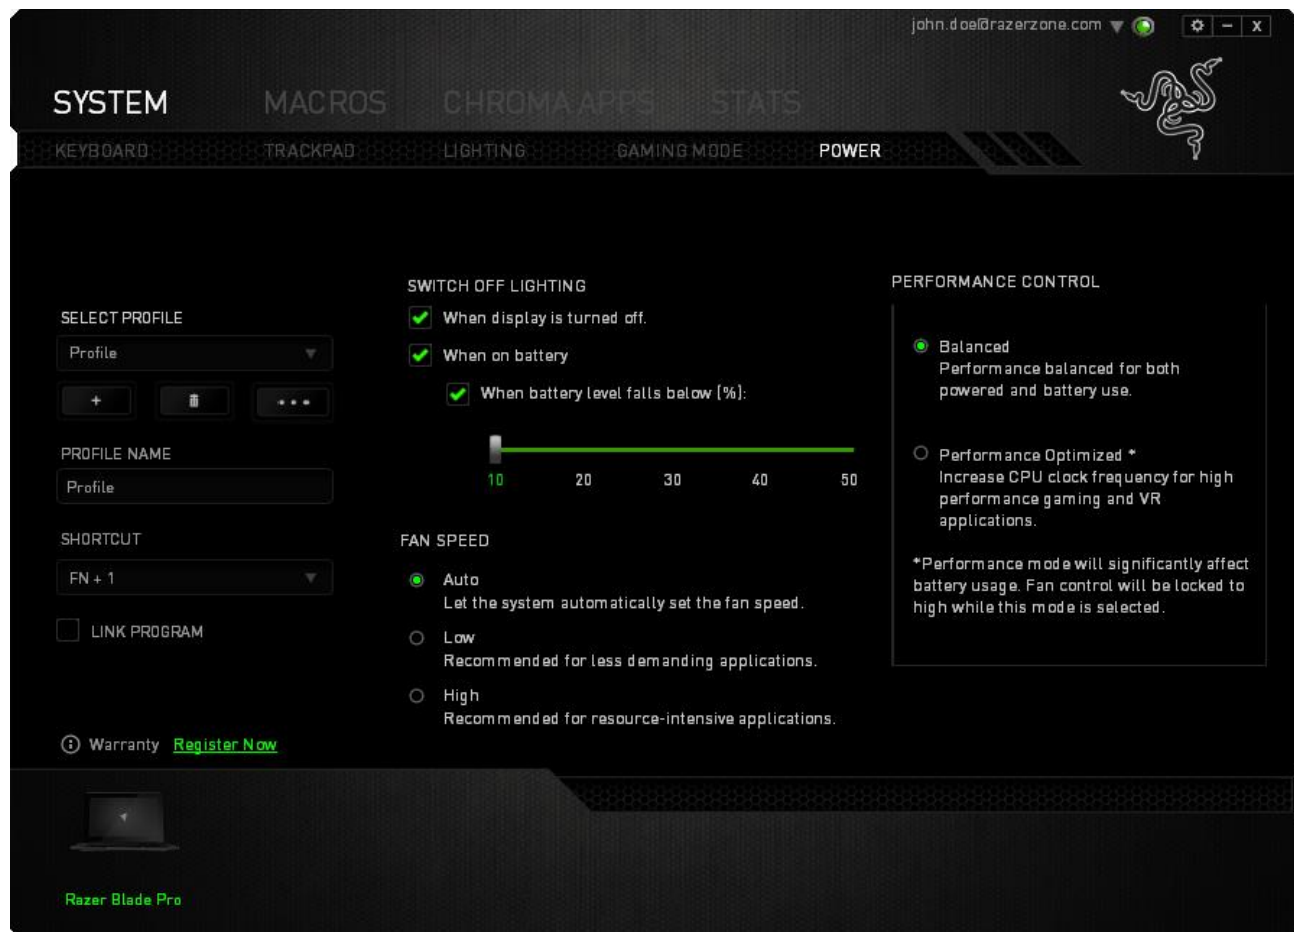

MACROS TAB

 The Macros Tab allows you to create a series of precise keystrokes and button presses. This tab also allows you to have numerous macros and extremely long macro commands at your disposal.

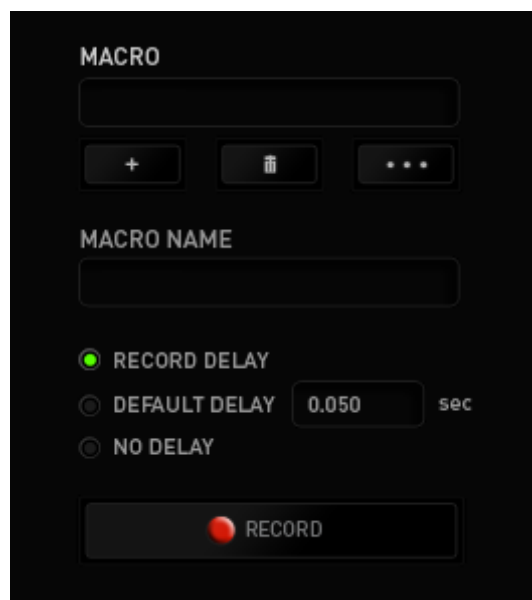


The Macro section works similarly to Profile wherein you can rename a macro by typing on the field below *MACRO NAME*. There are also other options available in the macro section such as creating a

new macro by clicking the  button and deleting the current macro by clicking the  button. The  button allows you to Copy, Import, and Export macros.

To create a macro command, simply click the  button and all your keystrokes and button presses will automatically register on the macro screen. When you are done recording your


macro commands, click on the  button to end the session.

 The Macro section allows you to input the delay in-between commands. In *RECORD DELAY* the delay in-between commands are registered as how it is entered. The *DEFAULT DELAY* uses a predefined time (expressed in seconds) as the delay. And *NO DELAY* omits all the pauses in-between keystrokes and button presses.

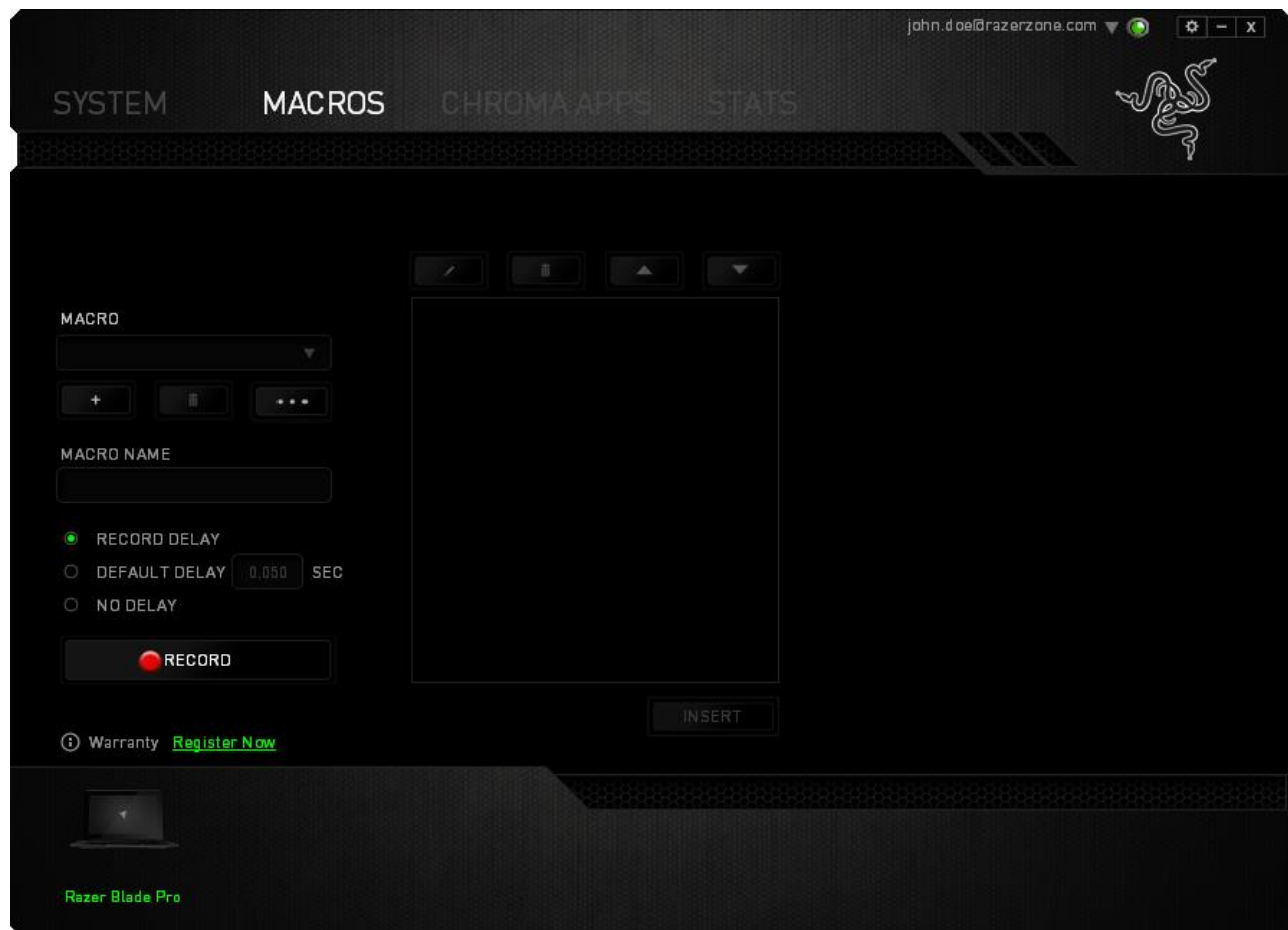


Note: You may use up to three decimal places when inserting values on the seconds (sec) field.

 
Once you have recorded a macro, you may edit the commands you have entered by selecting each command on the macro screen. Each keystroke or button press is arranged sequentially with the first command shown at the top of the screen.

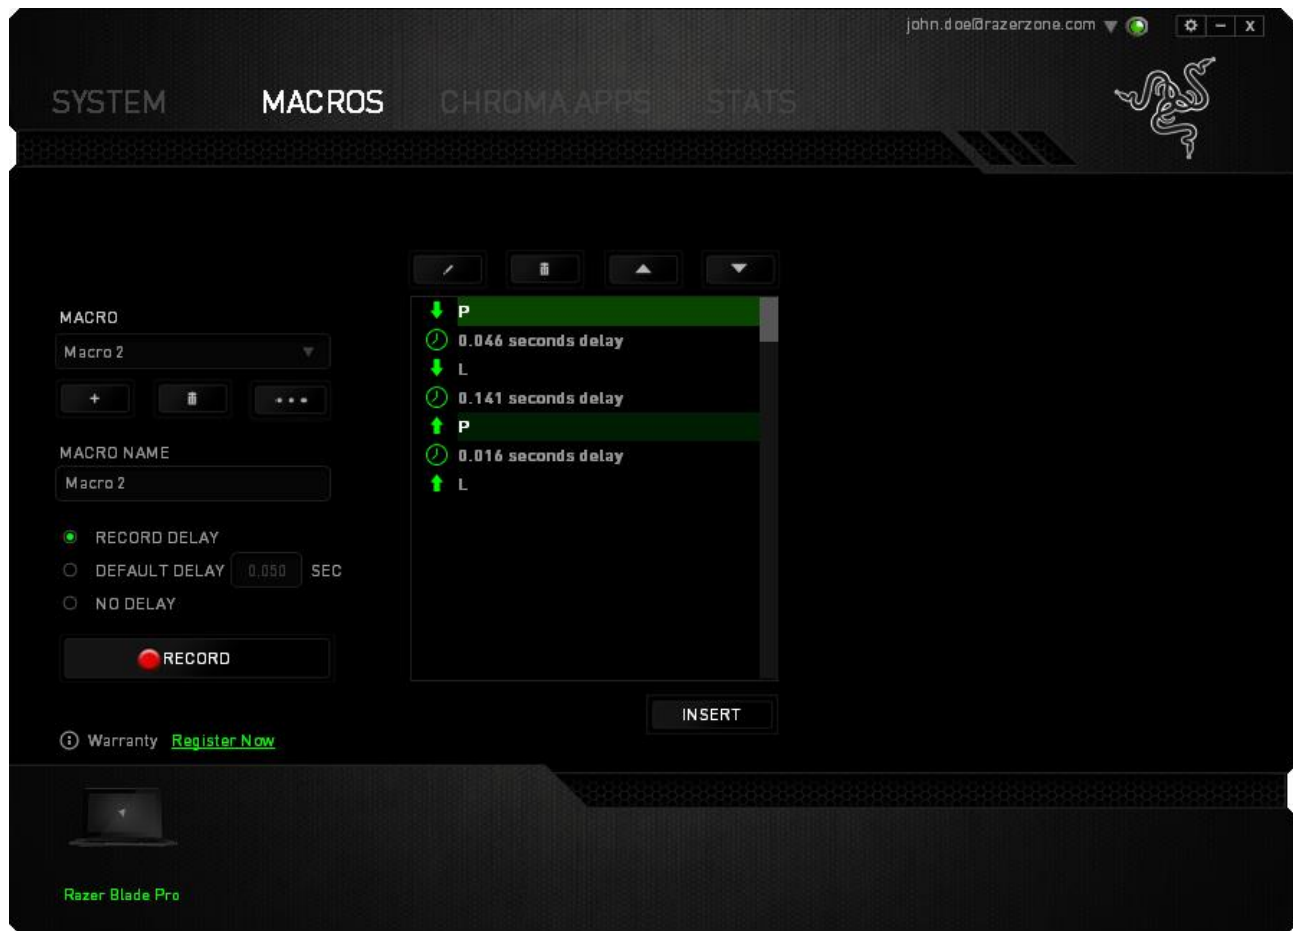


The  button allows you to edit a particular command and the  button enables you to delete a command. The  and  buttons gives you the option to move the command up or down. The  button allows you to put in additional keystrokes, button presses or time delays either before or after the selected command.

  Once you have pressed the  button, a new display window will appear beside the list of macro commands. The dropdown menu on this window allows you to choose a keystroke or a delay to be added in before or after the highlighted macro command.

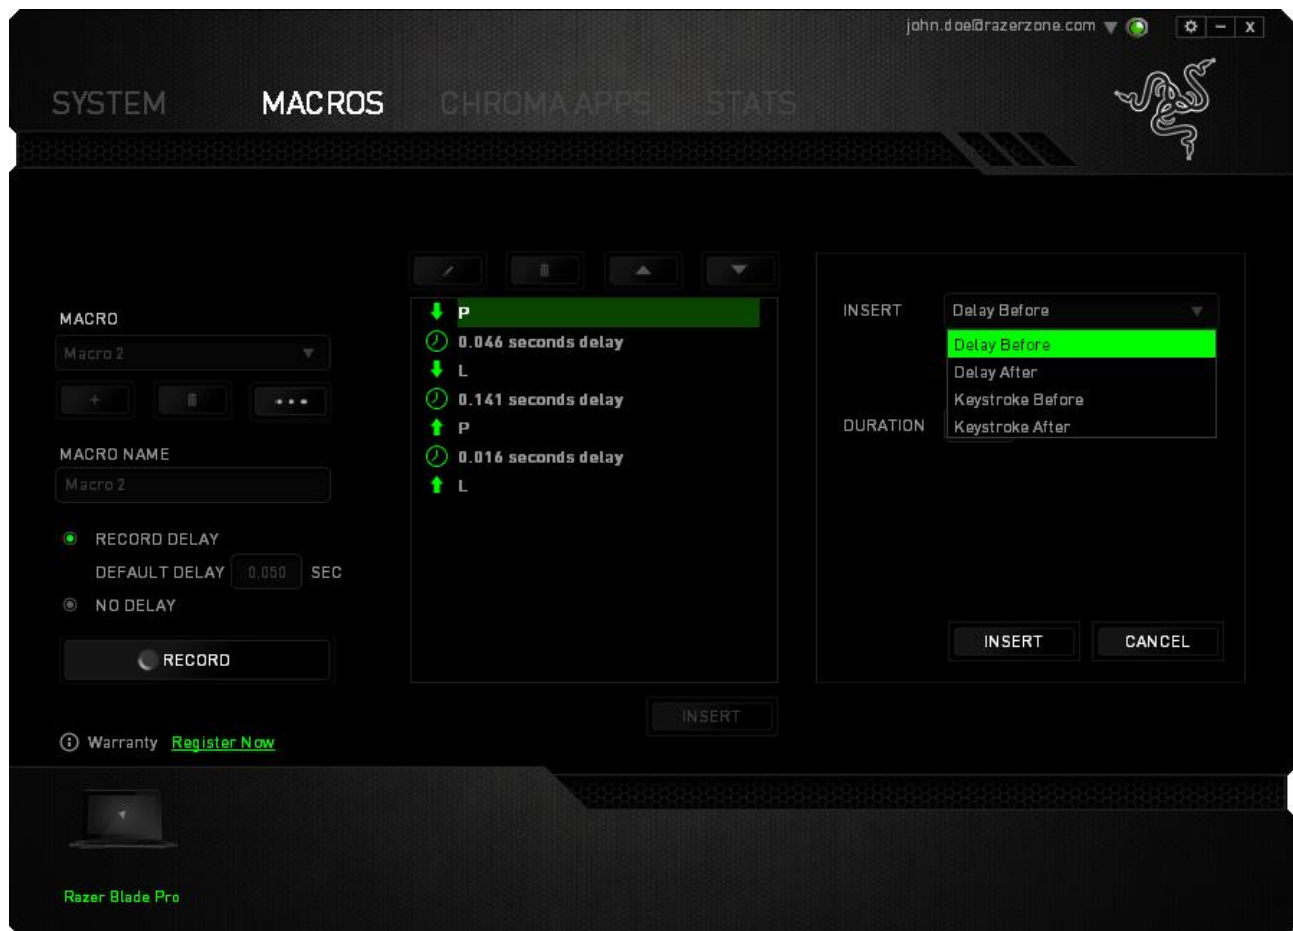

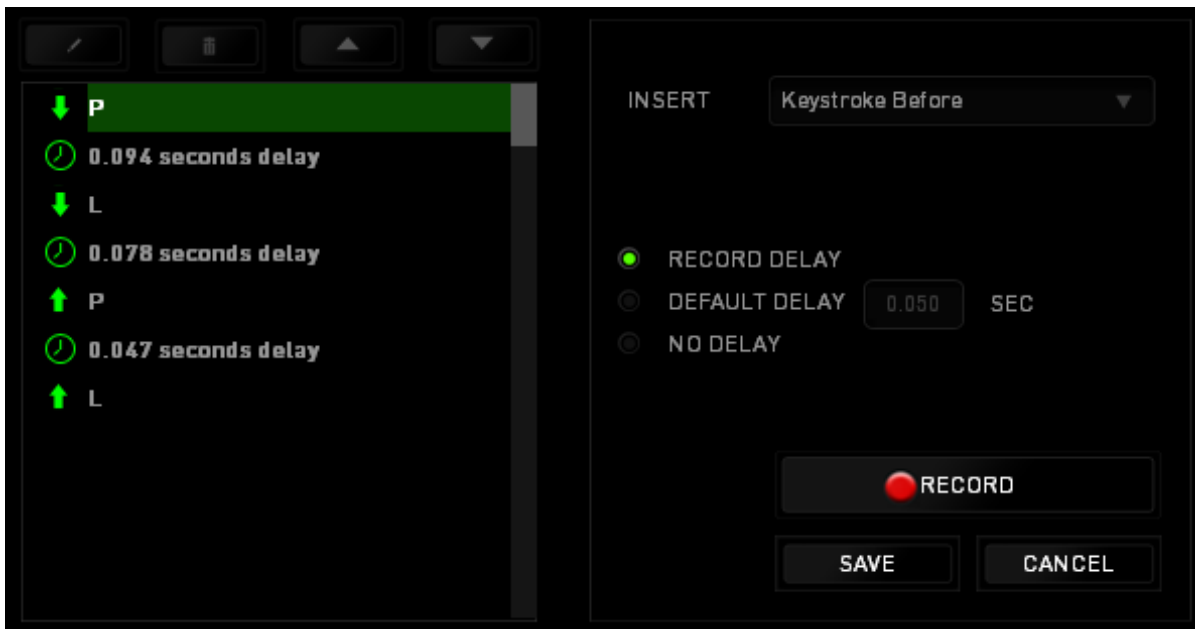

 You may add in a new set of macro commands by clicking the  button on the keystroke menu; or input time delays on the duration field using the delay menu.

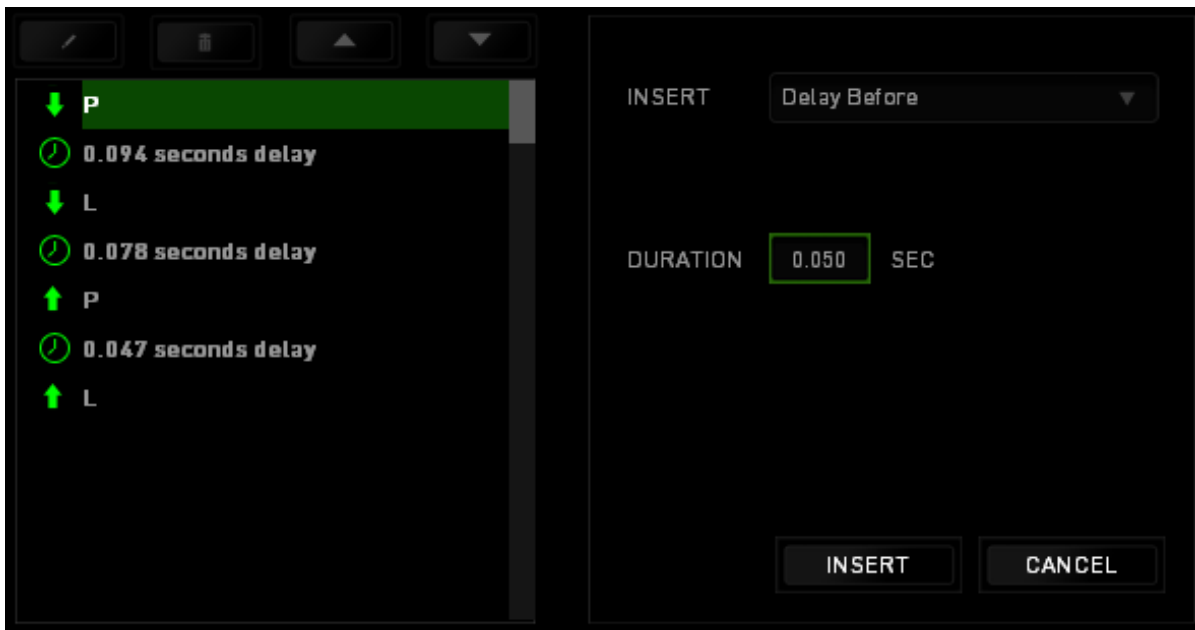


CHROMA APPS TAB

The Chroma Apps Tab allows 3rd party apps to access your Chroma-enabled devices and unlock additional features when using particular games or applications.

Settings Tab

 To enable the Chroma Apps function, click **ON** and visit razerzone.com/chroma-workshop to download an app.

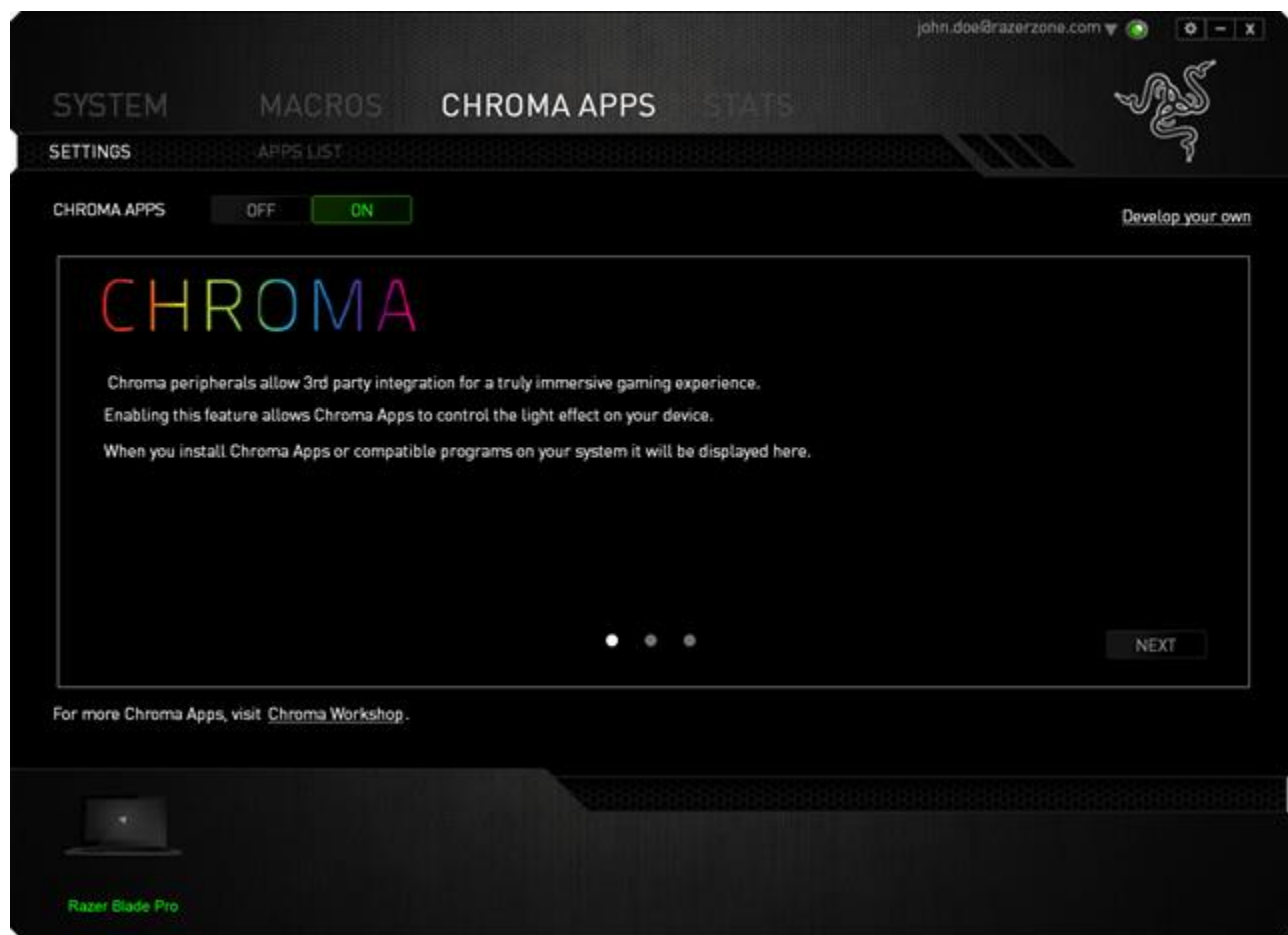


Apps List Tab


The Apps list is where all your Chroma apps are listed. From this tab you can view additional information regarding a particular Chroma app by double-clicking it on the list or selecting the

Chroma app and clicking . You can also rearrange the list using drag-and-drop or by clicking

  and .

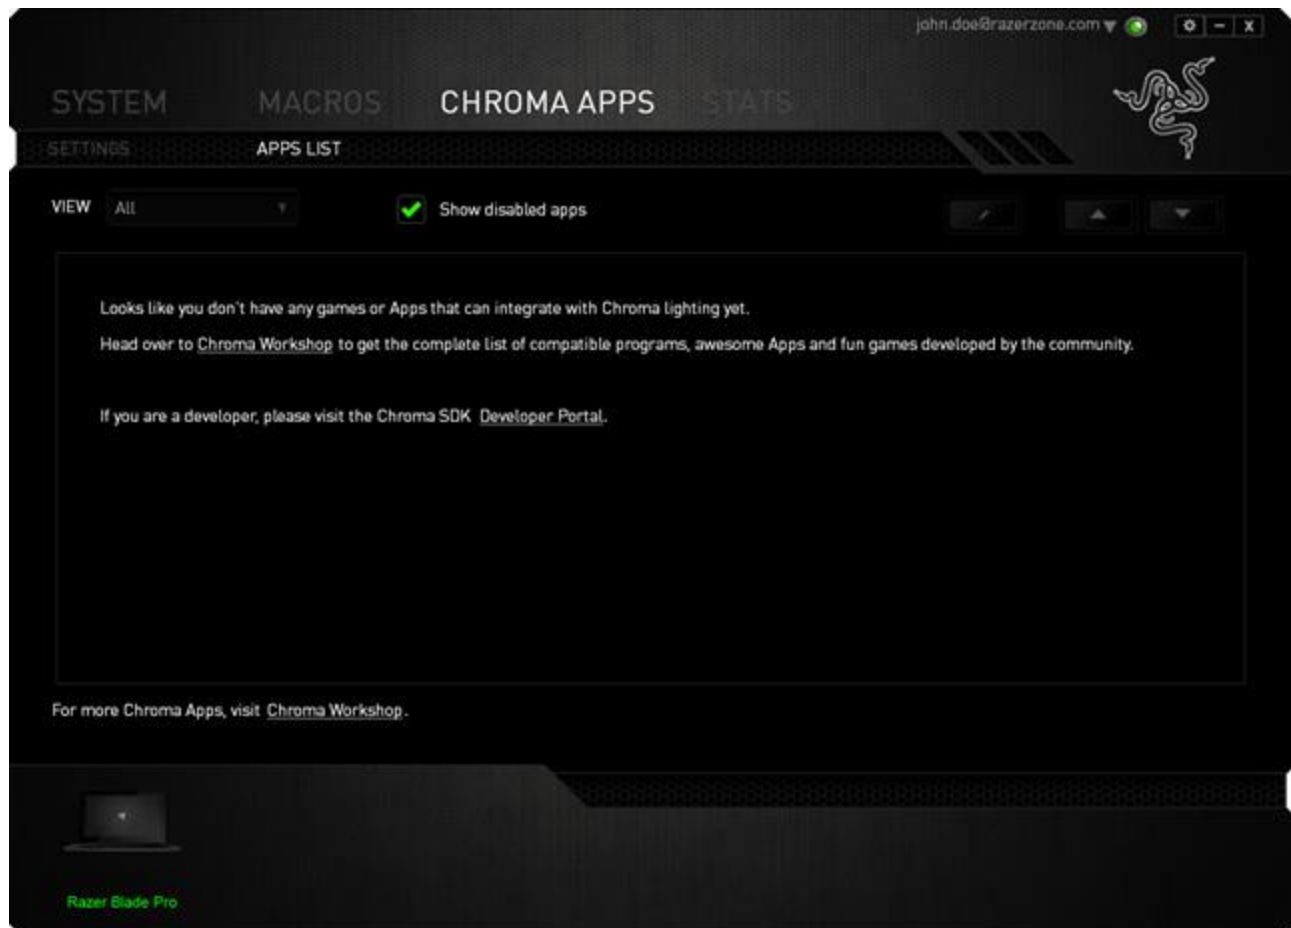

 To disable a Chroma app, open the additional information window of that app and click **OFF**.

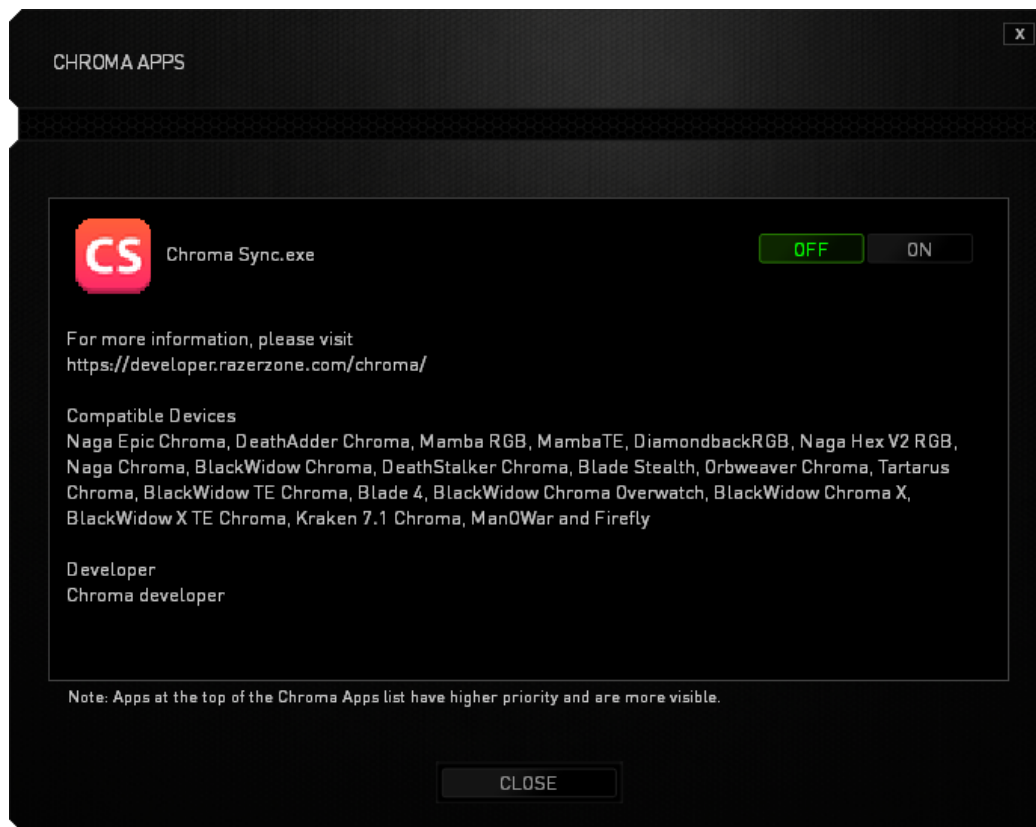

You may also disable the Chroma app by right-clicking on the app from the list and click **Disable '...'**.

STATS & HEATMAPS

 
Note: The images shown here are for reference only and may differ from the actual device.

Stats & Heatmaps help you analyze your gameplay by tracking your in-game mouse clicks, mouse movement and keyboard usage and visualizing it in form of heatmap overlays.

This function is disabled by default. To enable this function, click the notification icon next to your user name in the Razer Synapse window and select "Enable Stats & Heatmaps".




Confirm to enable the function in the dialog box that appears. Return to Razer Synapse and a new "Stats" tab will be available. Simply click the tab to open the function window.

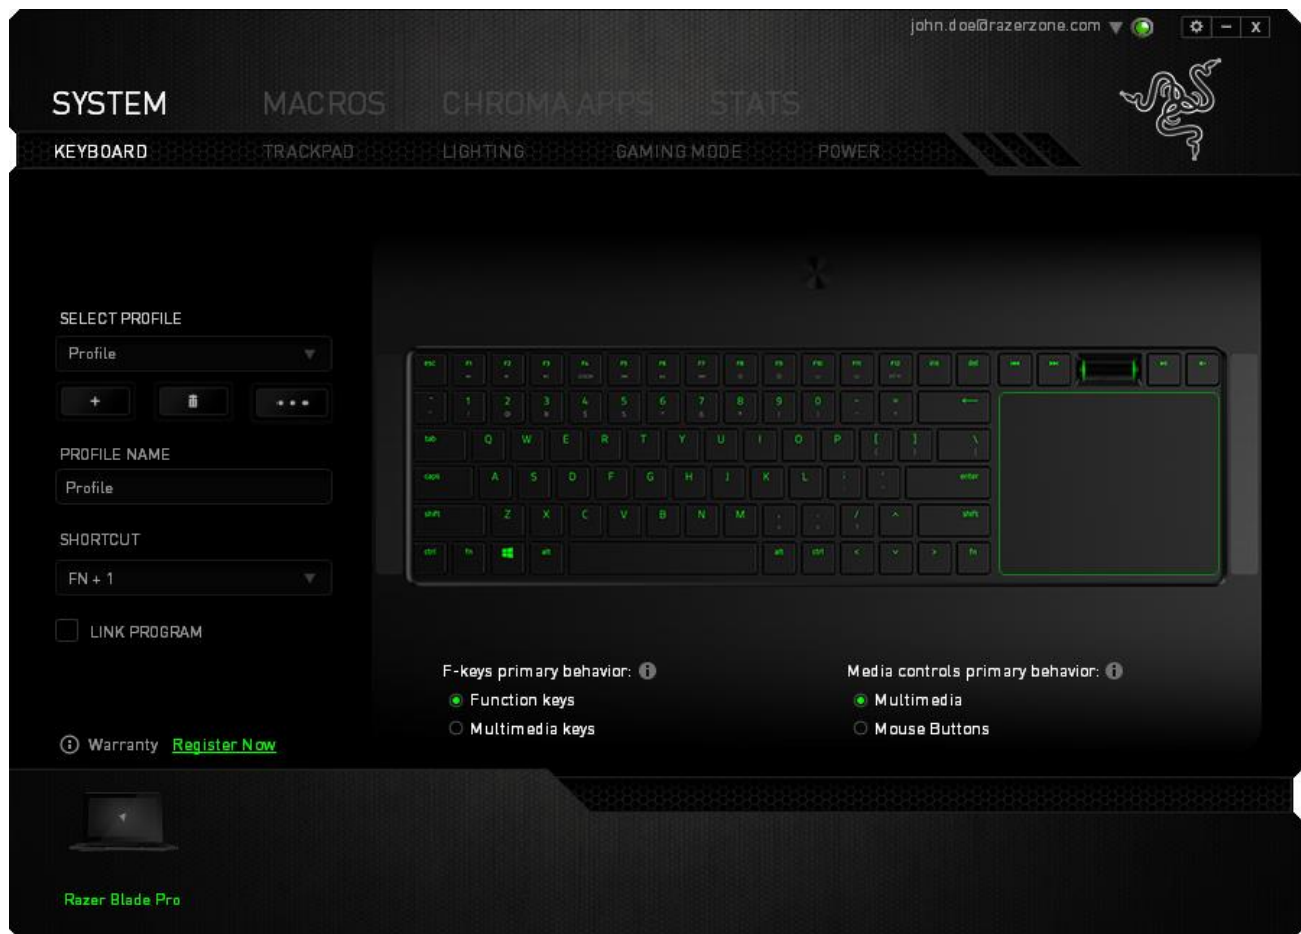

Games List

 
Stats & Heatmaps work by tracking the usage of all supported devices for each game. When the feature is enabled, it automatically scans your system for installed games and adds them to the Games List located on the left side of the screen. Click  to show or hide the Games List.

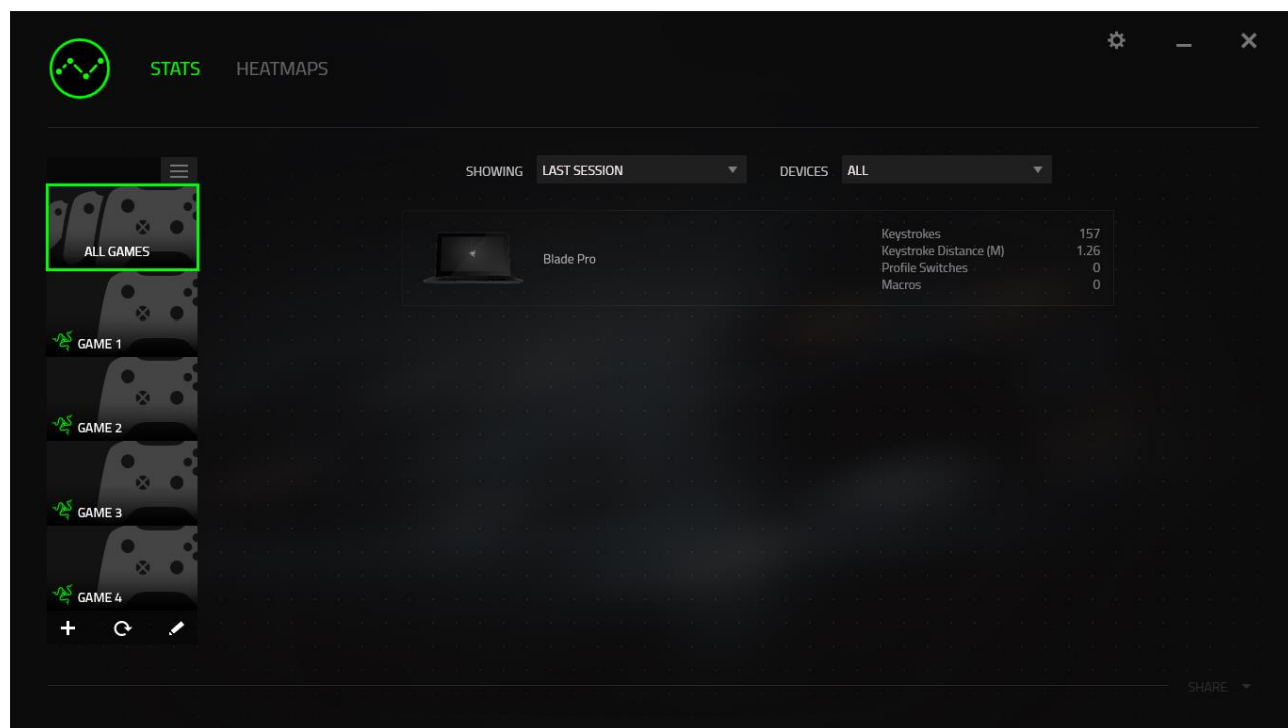

From this list, you can add more games that have not been automatically detected, using the  button, edit games with the  button or re-scan your system with the  button to search for newly installed games.


Stats Tab

 By default, the Stats Tab shows you the overall statistics of all your Razer devices for all games and all time. You can select a specific game via the game list on the left side, change the time period using the SHOWING dropdown menu, or the Razer device using the DEVICES dropdown menu.

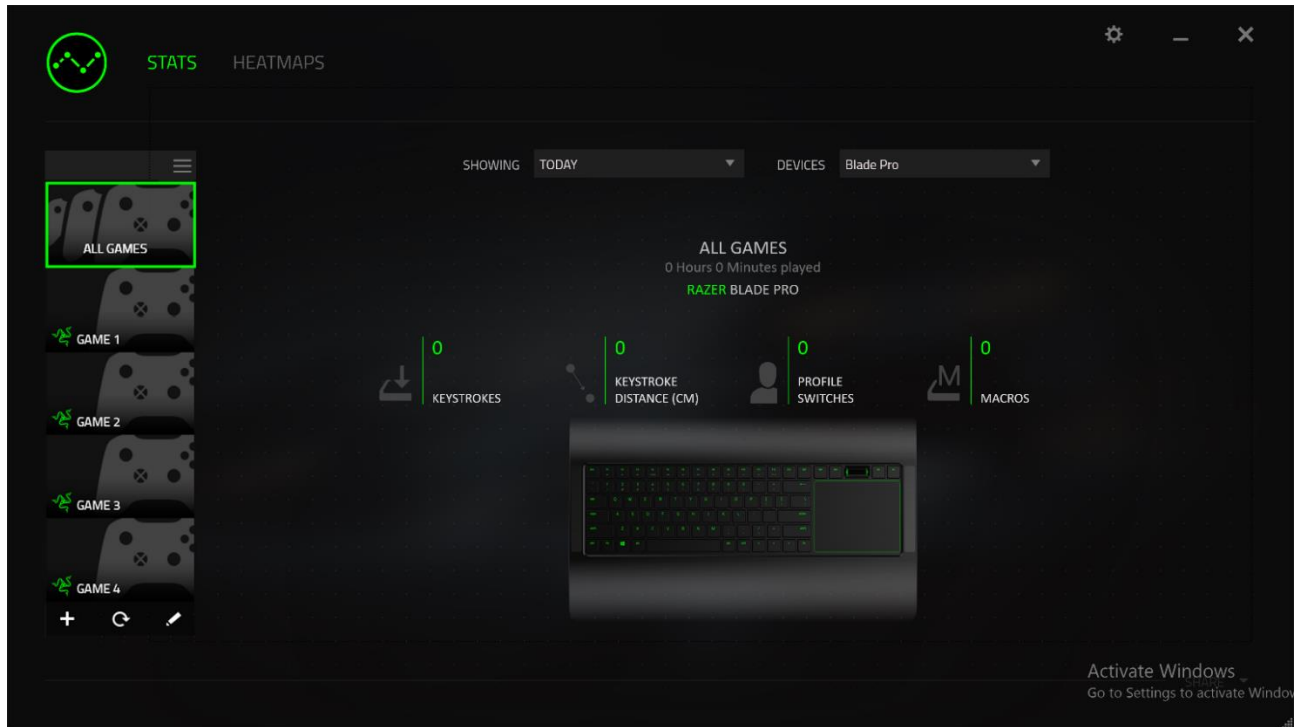

Heatmaps Tab - Keyboard

 
Heatmaps Tab shows the most frequently used keys on your Razer device for each game on your Games List.

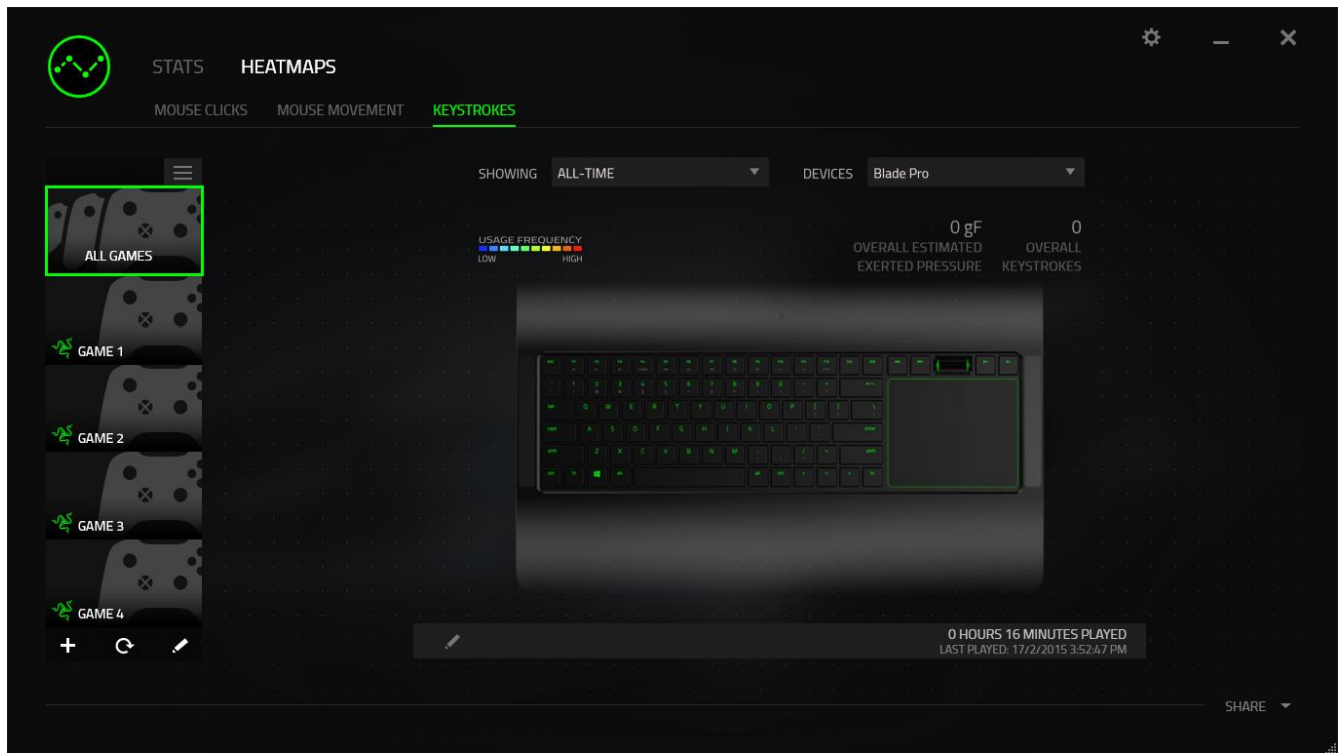


Social Media

You can share your heatmap image on social media networks such as Facebook or Twitter directly from Razer Synapse.

 From the HEATMAPS TAB, click the SHARE button on the bottom right of the screen. You will be prompted to login to the selected social media using an existing account if you have not already done so.

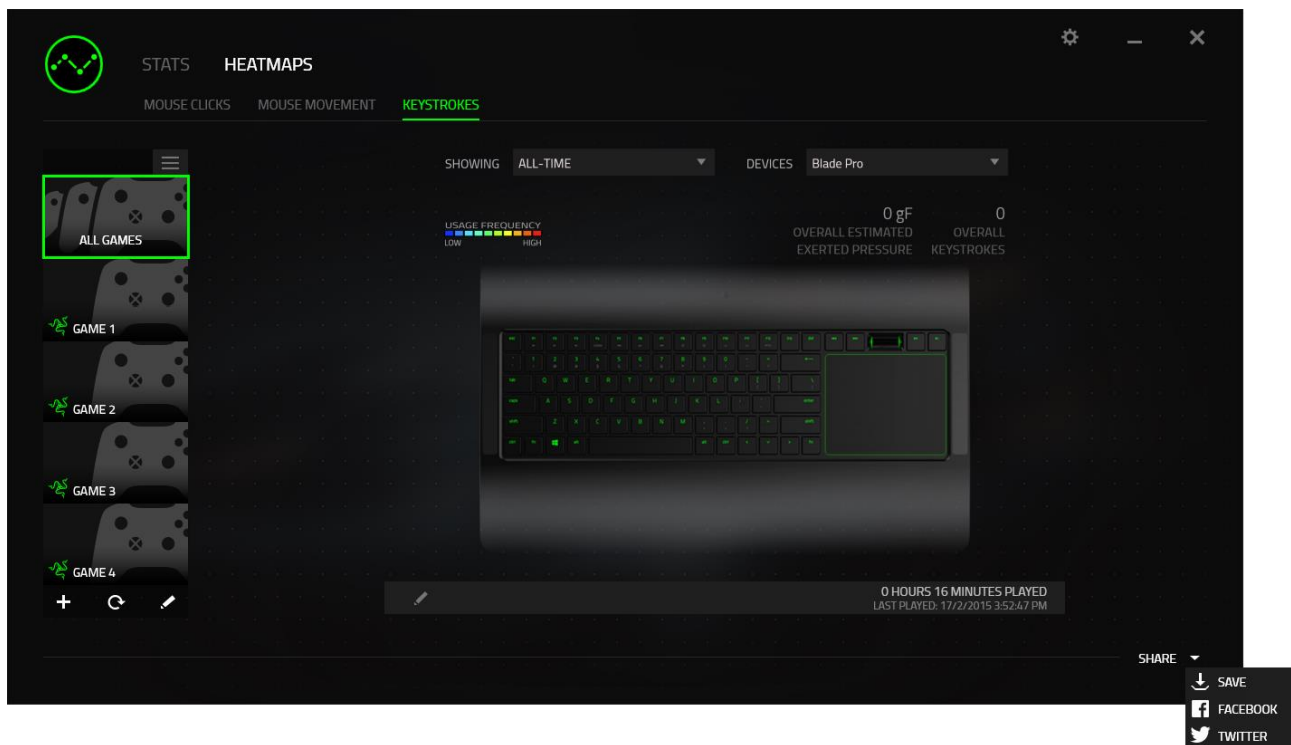

 You can also login to your social media accounts first from the "SETTINGS" screen. From the Stats & Heatmaps window, click . Select the "ACCOUNTS" tab. Click **CONNECT** next to the social media network you wish to sync with. Enter your login details and wait for the connection to complete.

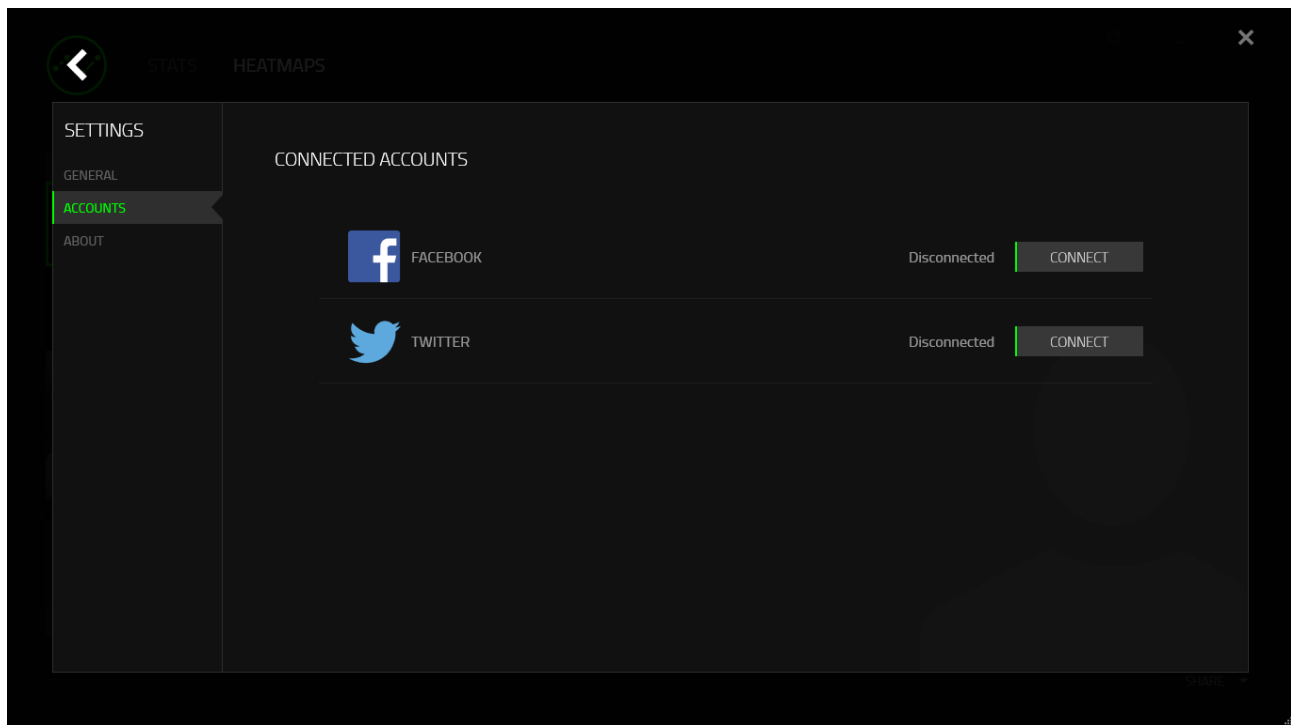

6. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Blade Pro, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to razersupport.com for support.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and switch off the device in order to let the temperature stabilize to an optimal level.

COMFORT

Research has shown that long periods of repetitive motion, improper positioning of your computer peripherals, incorrect body position, and poor habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. Below are some guidelines to avoid injury and ensure optimum comfort while using your Razer Blade Pro.

- Position your laptop directly in front of you. If you have an external mouse, position it next to the laptop. Place your elbows next to your side, not too far away and your mouse within easy reach.
- Adjust the height of your chair and table so that the laptop is at or below elbow height.
- Keep your feet well supported, posture straight and your shoulders relaxed.
- During gameplay, relax your wrist and keep it straight. If you do the same tasks with your hands repeatedly, try not to bend, extend or twist your hands for long periods.
- Do not rest your wrists on hard surfaces for long periods. When using an external mouse, use a wrist rest to support your wrist while gaming.
- Do not sit in the same position all day. Get up, step away from your desk and do exercises to stretch your arms, shoulders, neck and legs.

If you should experience any physical discomfort while using your laptop, such as pain, numbness, or tingling in your hands, wrists, elbows, shoulders, neck or back, please consult a qualified medical doctor immediately.

BATTERY

The Razer Blade Pro contains an internal, lithium-ion rechargeable battery. In general, the life expectancy of such batteries is dependent upon usage. Heavy daily usage will result in shorter battery life. Casual use will extend battery life. If you suspect that the lithium-ion rechargeable battery inside the Razer Blade Pro may be drained (has a low charge), try charging it. If the battery does not recharge after several attempts, it may be non-operational. Dispose of batteries according to your local environmental laws and guidelines.

7. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2017 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, "For Gamers. By Gamers.", and "Powered by Razer Chroma" logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries.

Windows and the Windows logo are trademarks or registered trademarks of the Microsoft group of companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this Master Guide. Furnishing of this Master Guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Blade Pro (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razerzone.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

COSTS OF PROCUREMENT

For the avoidance of doubt, in no event will Razer be liable for any costs of procurement unless it has been advised of the possibility of such damages, and in no case shall Razer be liable for any costs of procurement liability exceeding the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.

FCC DECLARATION OF CONFORMANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

For more information, refer to the online help system on razerzone.com.

FCC CAUTION STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

USAGE RESTRICTIONS

This Razer device was developed and designed to comply with the various wireless and telecom agency requirements throughout the world. This ensures that the device do not cause any harm to Public Switching Telecommunication Networks (PSTN) and do not violate any power and frequency spectrum allocations on a country by country basis. This device was also designed to be compliant with regulatory agency limits for Electromagnetic Compatibility (EMC).

IMPORTANT NOTICE FOR USE IN HEALTHCARE ENVIRONMENTS

This Razer device is not a medical device and is not listed under UL or IEC 60601 (or equivalent). This device should be kept at a certain distance to avoid harmful effects to patients or medical equipment.

AVIATION USAGE RESTRICTIONS

Certain restrictions apply to this device while on-board an aircraft. Razer encourages you to understand these restrictions to ensure the flight's safety and security.