



RAZER THRESHER FOR PS4

MASTER GUIDE

The pressure's on to perform—so bring out the big guns. The **Razer Thresher for PS4** fulfills your dream of total console domination: a headset decked out with ultimate control whether it's cranking up the audio to match your adrenaline, or making sure every command is heard by your team. It's the only way to win.

The Razer Thresher for PS4 allows you to choose from a wired 3.5 mm analog connection, or a 2.4 GHz wireless connection. On-headset controls provide instant access to controls like mic monitoring and controlling master volumes, while the retractable digital mic allows clear and true-to-life communication. Experience total comfort with lightweight, leatherette ear cushions — complete with an indentation for added flexibility even when wearing glasses.

CONTENTS

1. PACKAGE CONTENTS / SYSTEM REQUIREMENTS.....	3
2. REGISTRATION / TECHNICAL SUPPORT.....	4
3. TECHNICAL SPECIFICATIONS.....	5
4. DEVICE LAYOUT.....	6
5. SETTING UP YOUR RAZER THRESHER FOR PS4.....	8
6. USING YOUR RAZER THRESHER FOR PS4.....	13
7. SAFETY AND MAINTENANCE	19
8. LEGALESE.....	20

1. PACKAGE CONTENTS / SYSTEM REQUIREMENTS

PACKAGE CONTENTS

- Razer Thresher For PS4 gaming headset
- 2.4 Ghz USB dongle
- 3.5mm audio cable with in-line controls
- Important Product Information Guide

SYSTEM REQUIREMENTS

- Systems or gaming consoles with a free USB port*
- Devices with 3.5mm audio + mic combined jack

**Setup and features may vary*

 
2. REGISTRATION / TECHNICAL SUPPORT

REGISTRATION

Register your product online at razerid.razer.com/warranty to get real-time information on your product's warranty status.

If you haven't registered for a Razer ID yet, register now at razerid.razer.com to get a wide range of Razer benefits.

Your product's serial number can be found underneath the leatherette cushion, as shown here.

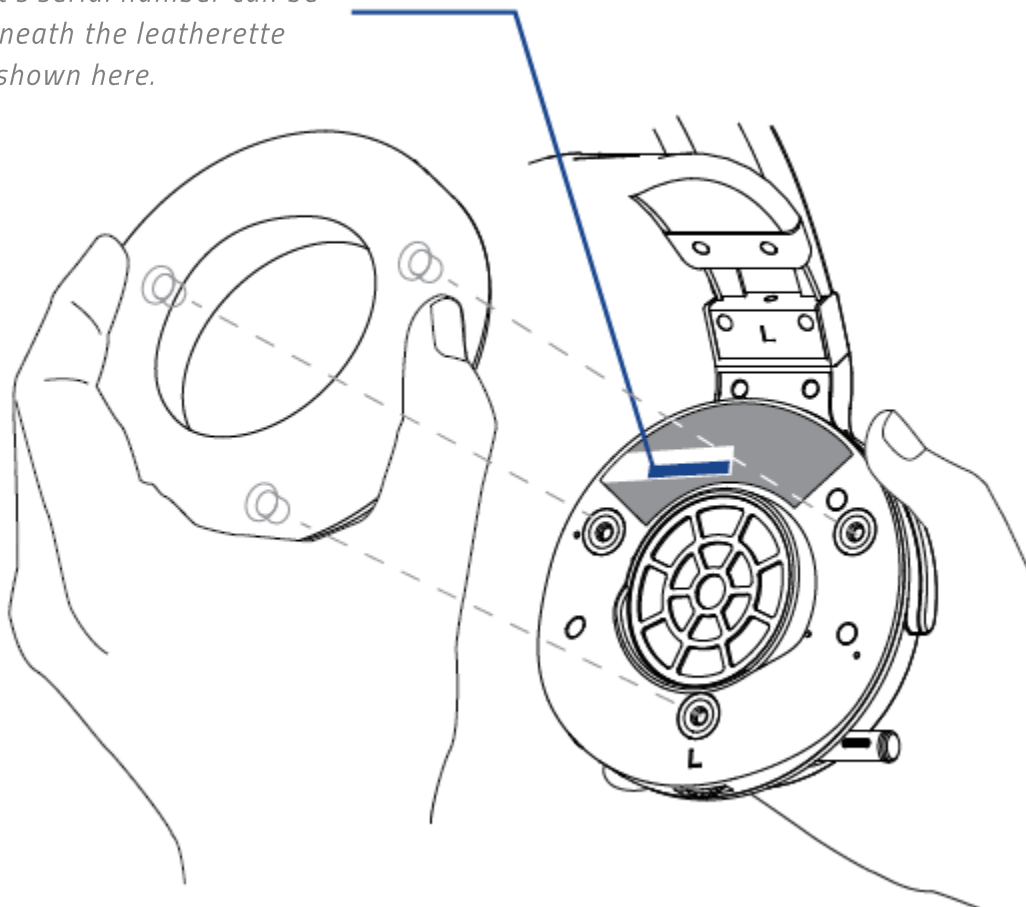

TECHNICAL SUPPORT

- 1 year limited manufacturer's warranty.
- Free online technical support at support.razer.com.

3. TECHNICAL SPECIFICATIONS

COMPATIBLE DEVICES

- PlayStation 4, PC, Nintendo Switch, devices with a 3.5 mm audio port

AUDIO

- Frequency Response: 12 - 28,000 Hz
- Drivers: 50 mm, with Neodymium Magnets
- Impedance: 32Ω at 1 kHz

CONNECTIVITY

- Wired Connection, Analog 3.5 mm
- Wireless Connection, RF 2.4 GHz, up to 40 ft / 12m

CONTROLS

- Master Volume Controls on headset
- Mic Monitoring Controls on headset

MICROPHONE

- Retractable Uni-directional Boom Microphone

- Frequency Response: 100 - 10,000 Hz
- Sensitivity (@1kHz, 1V/Pa): -38 ± 3 dB
- Signal-to-Noise Ratio: >55 dB

BATTERY LIFE FOR WIRELESS CONNECTION

- Up to 16 hours on one single charge

OTHERS

 
- Comes with USB Dongle for wireless transmission

APPROXIMATE SIZE AND WEIGHT

GAMING HEADSET


- Length: 196 mm / 7.7 in
- Width: 214 mm / 8.4 in
- Height: 104.8 mm / 4.12 in
- Weight: 402 g / 0.89 lbs

4. DEVICE LAYOUT

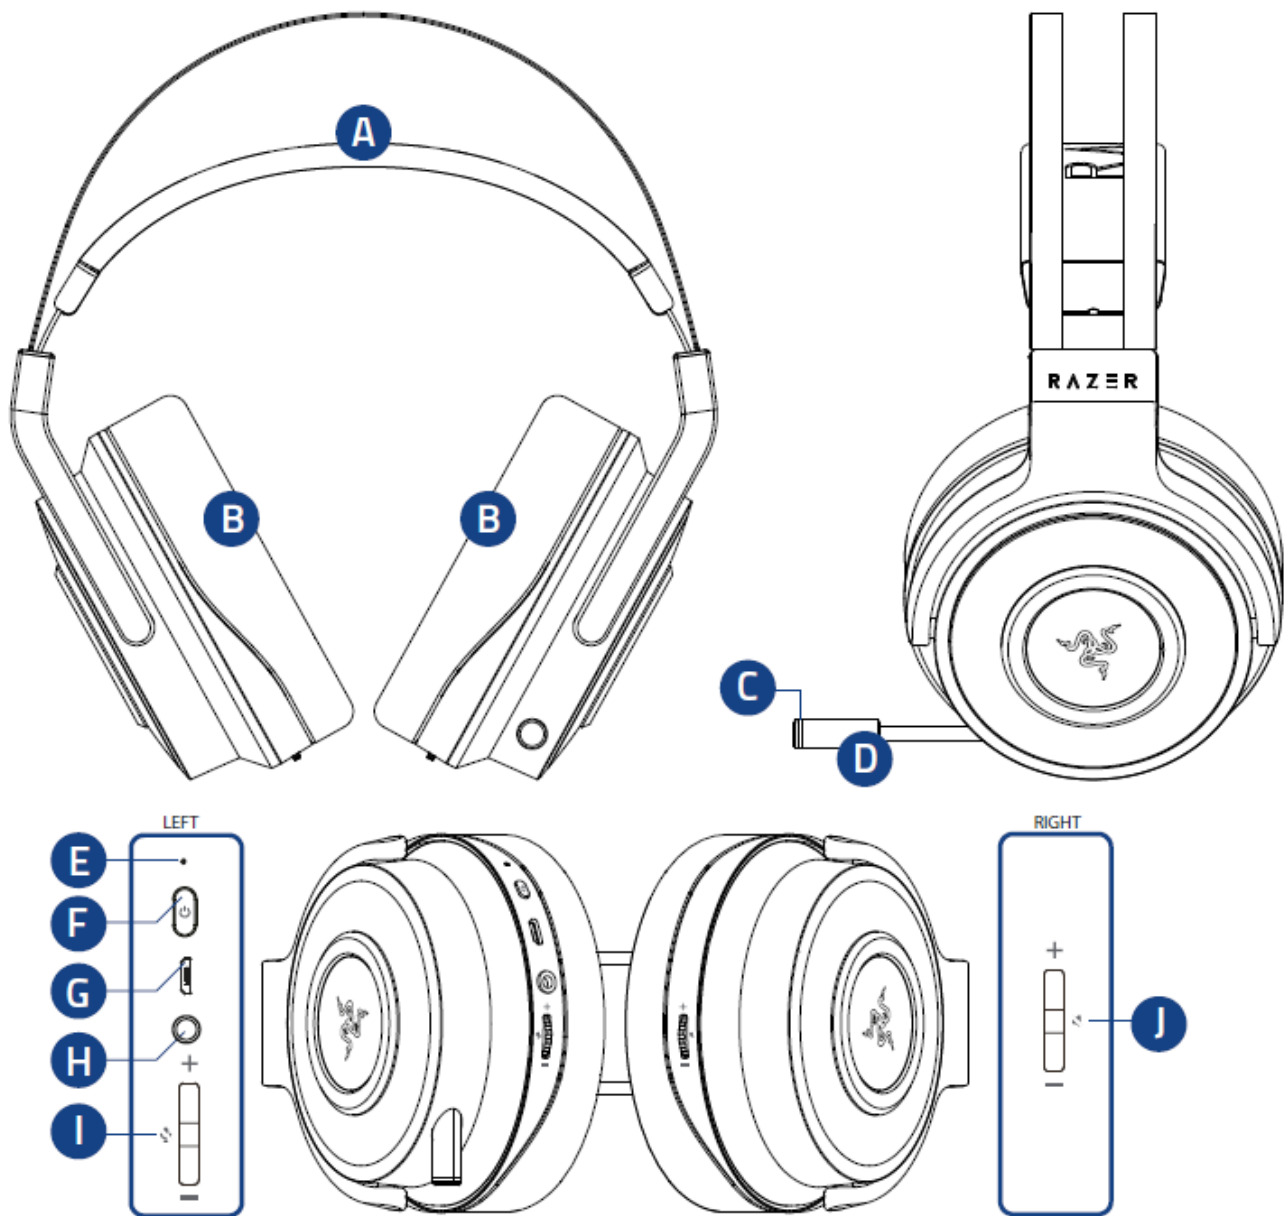

- A. Adjustable padded headband
- B. Circumaural, leatherette ear cushions
- C. Microphone LED
- D. Retractable microphone
- E. Headset LED indicator
- F. Headset power button

 - G. Micro-USB charging port
- H. 3.5mm audio jack
- I. Mic monitoring control
- J. Audio volume control

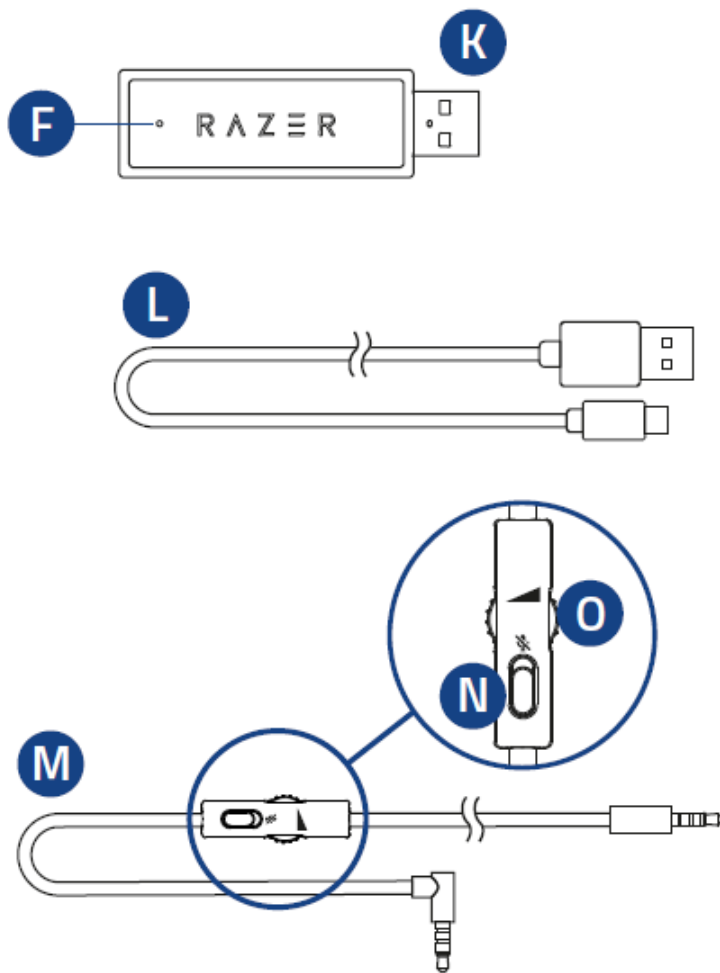


- K. 2.4 Ghz USB dongle
- L. USB dongle LED indicator
- M. Micro-USB to USB cable
- N. 3.5mm audio cable with in-line controls
- O. Microphone mute toggle
- P. Volume control wheel

5. SETTING UP YOUR RAZER THRESHER FOR PS4

CONNECTING TO YOUR PS4

 1. Plug the USB dongle to your PS4.

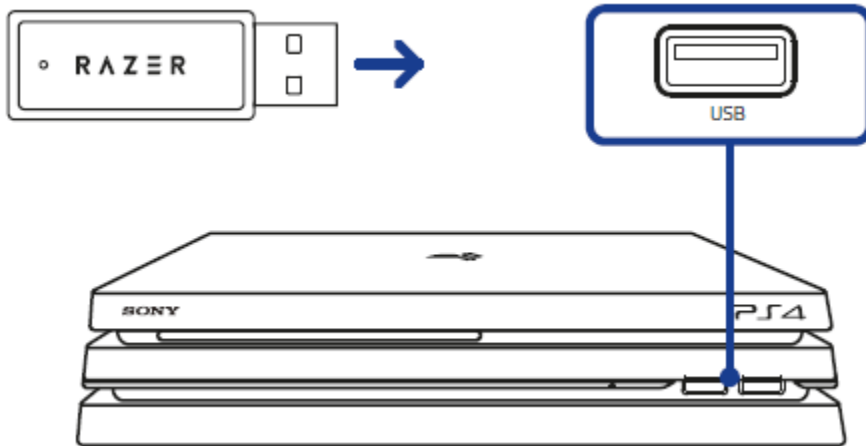


2. Go to **Settings** > **Devices** > **Audio Devices**, and then select your **Razer Thresher For PS4** for the **Input Device** and **Output Device** options.




Note: It is recommended to set Volume Control and Adjust Microphone Level to maximum then use the headset controls to fine-tune the settings.

 3. On the **Output to Headphones**, select **All Audio**.

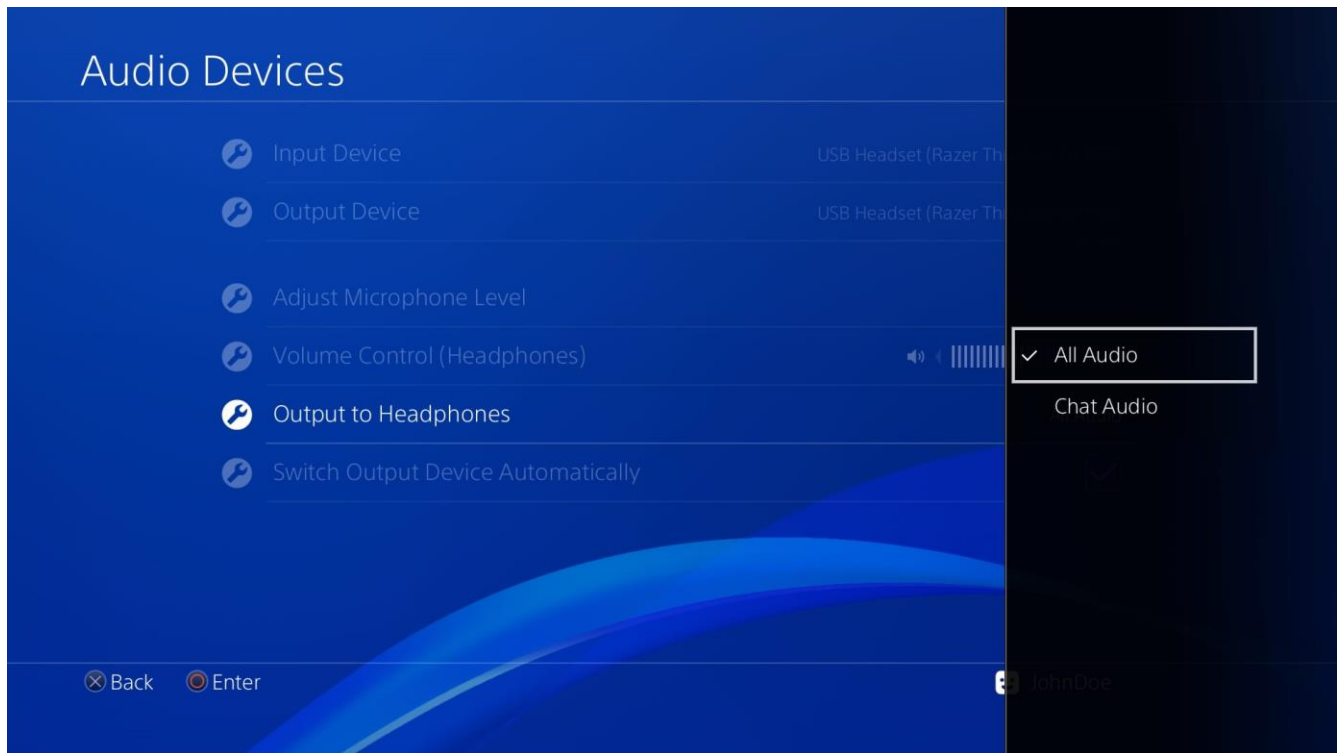


CONNECTING TO YOUR PC

 
1. Plug the USB dongle to your PC.

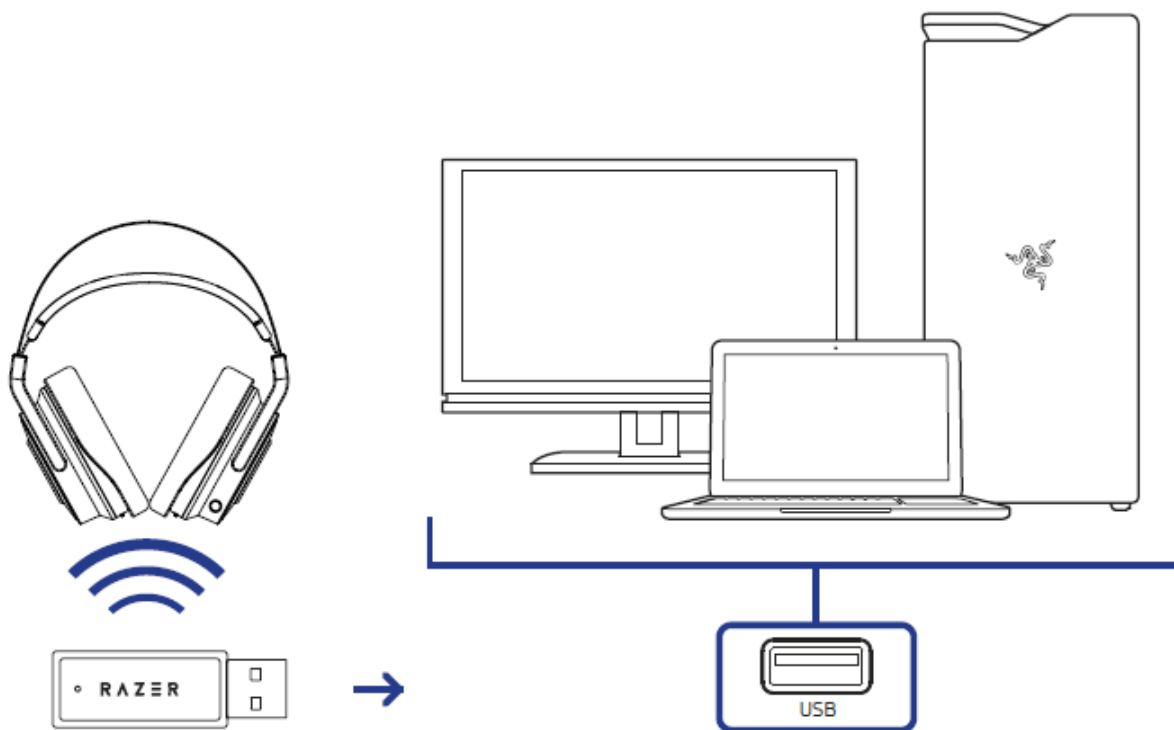

 2. Right-click on the sound icon on the system tray, and then select **Playback devices**.

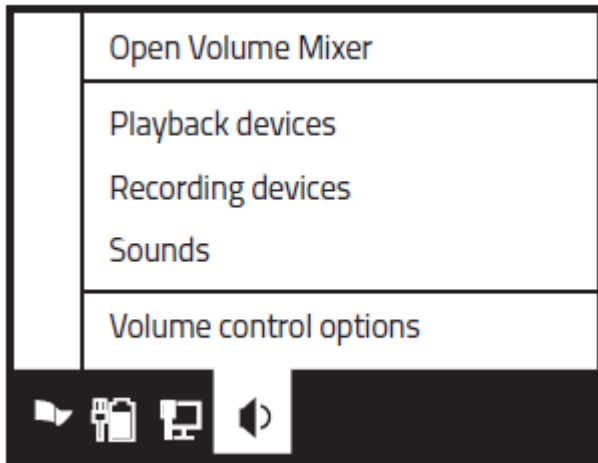


 3. In the Playback tab, select Razer Thresher For PS4 from the list, and then click the **Set Default** button.

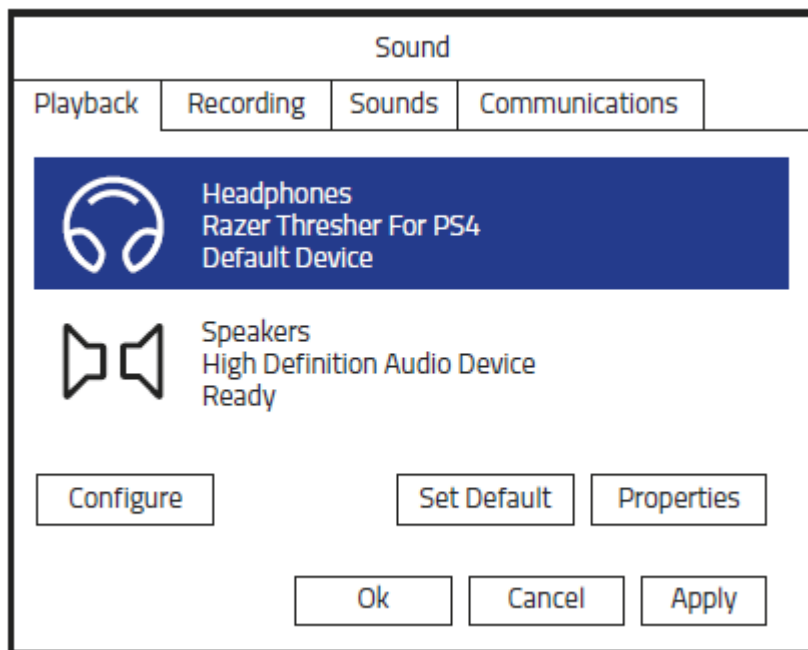


CONNECTING TO YOUR MAC

 - 1. Plug the USB dongle to your Mac.

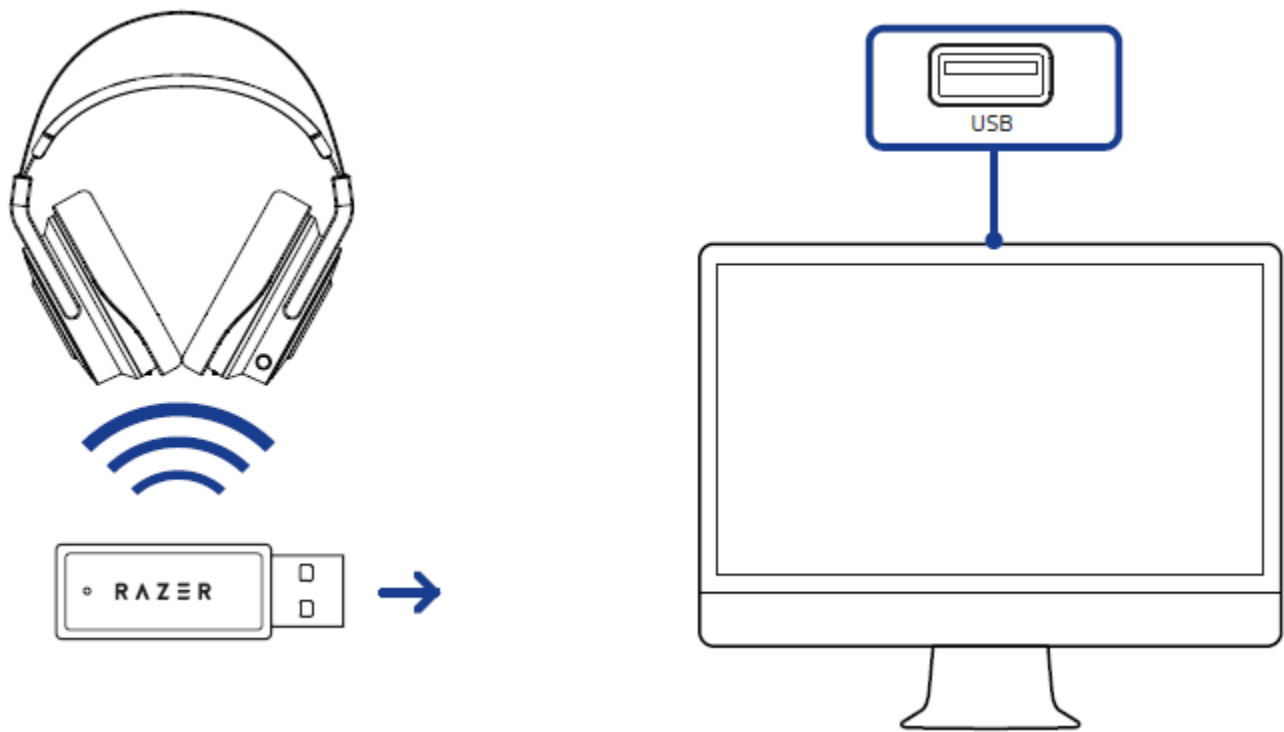

 - 2. Open your Sound settings from System Preferences > Sound.

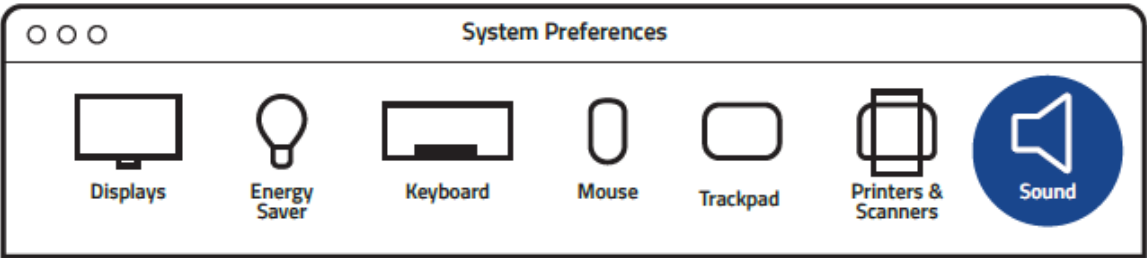

- 3. In the Output tab, select Razer Thresher For PS4 from the list.


Sound Effects

Output

Input

Name	Type
Headphones	Built-in Output
Line Out	Built-in Line Output
Razer Thresher For PS4	USB

 
4. In the Input tab, select Razer Thresher For PS4 from the list.



Name	Type
External Microphone	Microphone port
Line In	Audio line-in port
Razer Thresher For PS4	USB


CONNECTING TO YOUR PS4 CONTROLLER

 To connect your Razer Thresher For PS4, simply plug the 3.5mm audio cable from your headset to your PS4 controller's stereo headset jack.

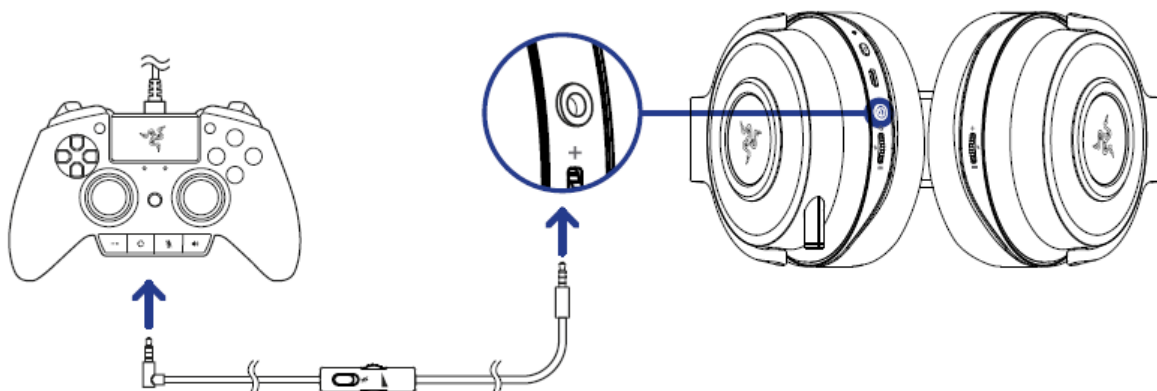

CONNECTING TO YOUR OTHER DEVICES

 
If your device does not have a USB port but instead have a 3.5mm audio + mic combined jack, simply plug the 3.5mm audio cable from your headset to your device's audio jack.

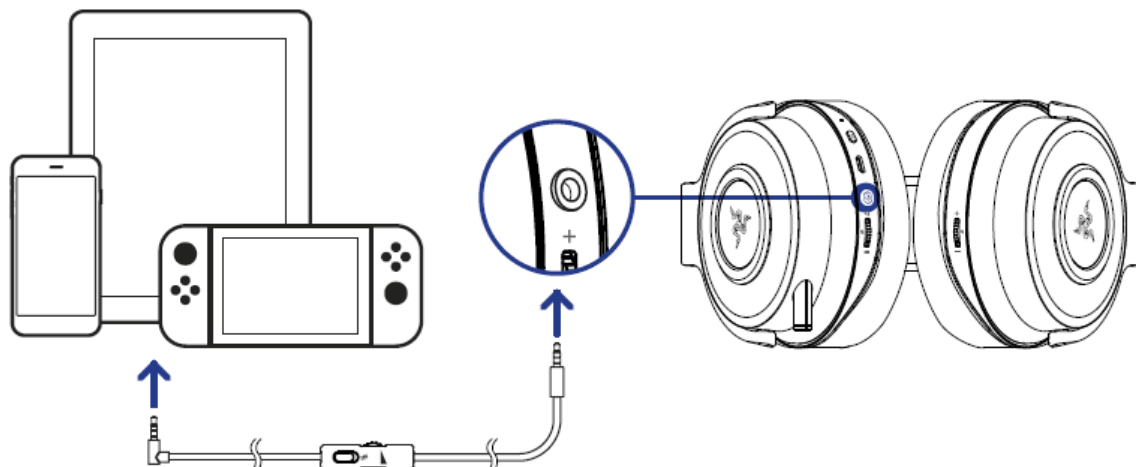

6. USING YOUR RAZER THRESHER FOR PS4

CHARGING YOUR HEADSET

 
Plug your Razer Thresher For PS4 to a powered USB port using the Micro-USB to USB cable.

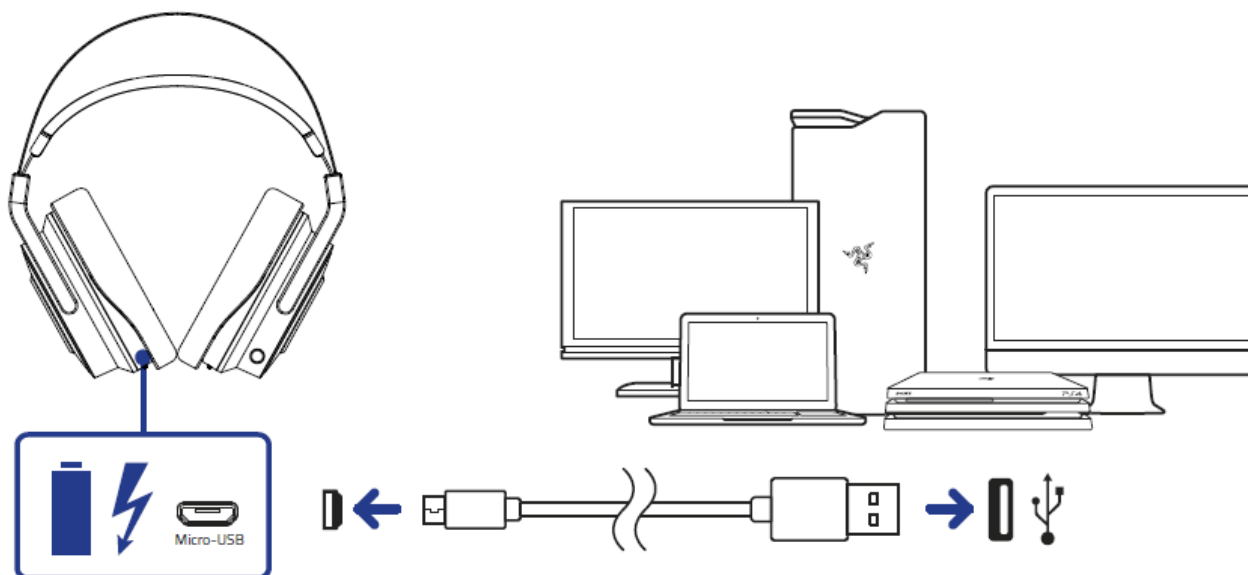










For best results, please fully charge the headset before using it for the first time. A depleted unit will fully charge in about **4 hours**.

UNDERSTANDING THE CHARGING NOTIFICATIONS


The LED indicator on the headset will send out notifications depending on its current charging status, as shown here:



LED NOTIFICATION	SOUND NOTIFICATION	STATUS
Blinking green 	None 	Charging 
Static green 	None 	Charged 
Static red 	Warning tone 	Battery Low 

 
Blinking red 

Warning tone every 5
minutes 

Battery Critical 

POWER ON


Press and hold the headset power button until you hear the ON tone and the LED indicator is lit.

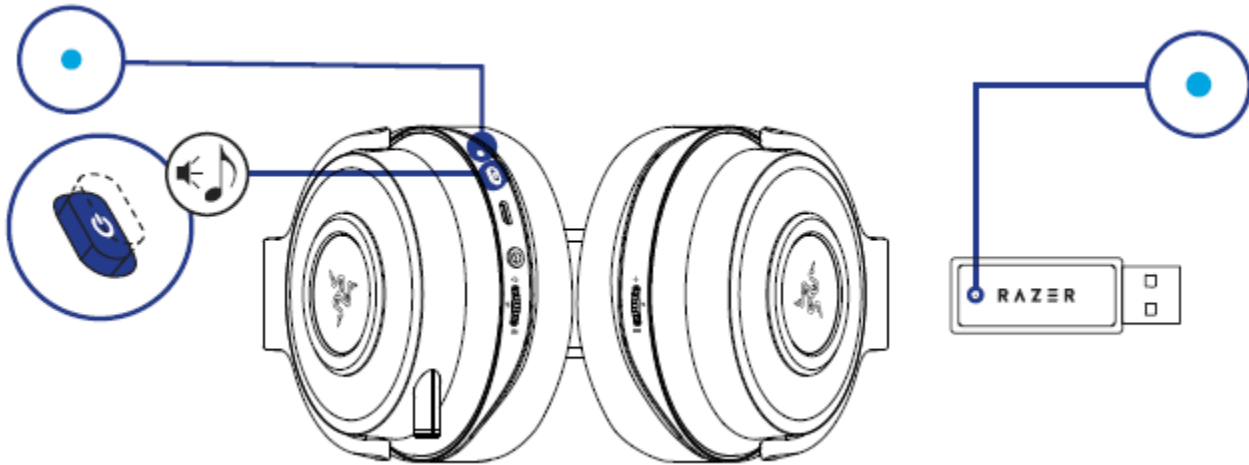

Note: Keep the devices within close proximity of each other for a faster and more stable connection.


POWER OFF

 Press and hold the headset power button until you hear the OFF tone and the LED indicator is turned off.

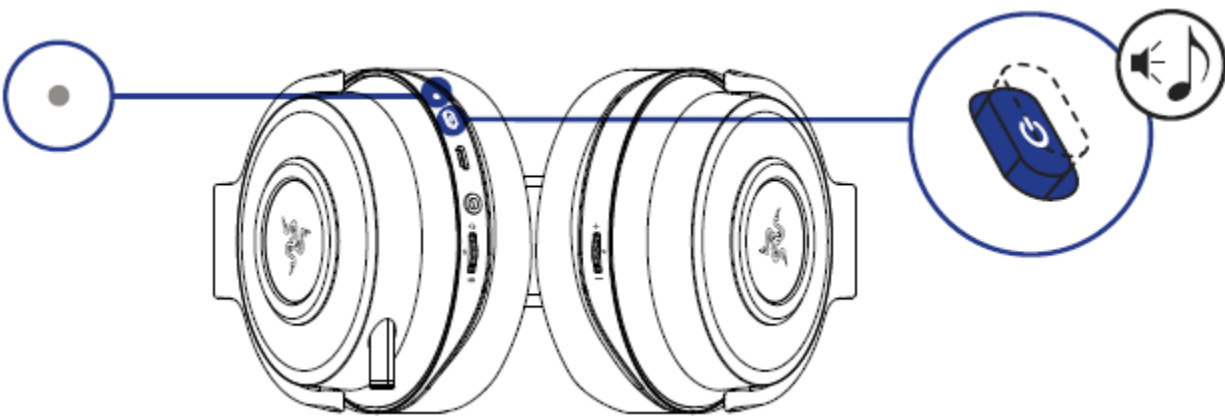

CONNECTING NOTIFICATIONS

 
The headset and the USB dongle will display notifications depending on its current status, as shown here:

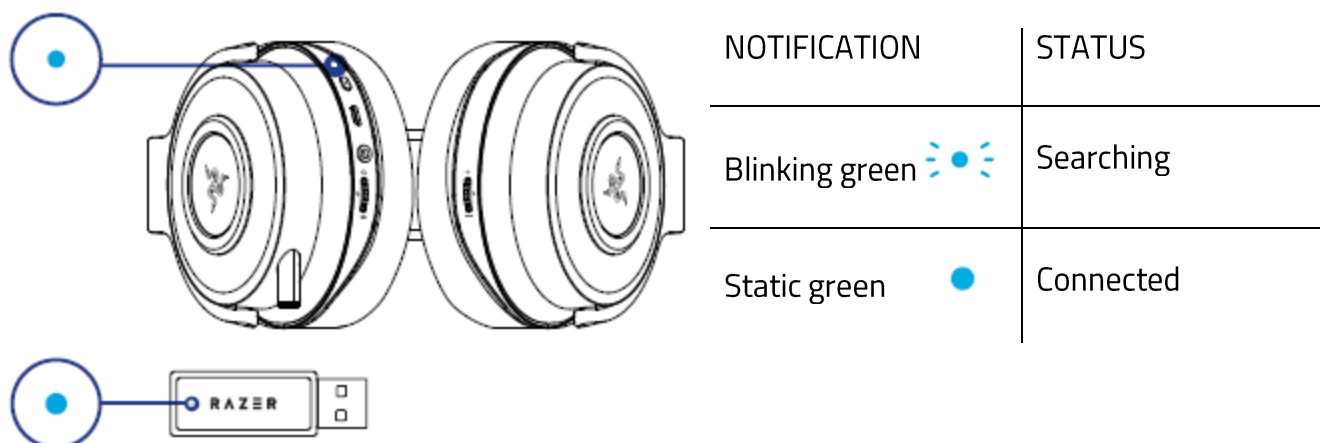


Note: If the headset is not connected, it will automatically power off after a few minutes.

USING THE AUDIO VOLUME CONTROL

 Rotate the audio volume control to increase or decrease the volume. You will hear a short beep when you reach the minimum or maximum volume.

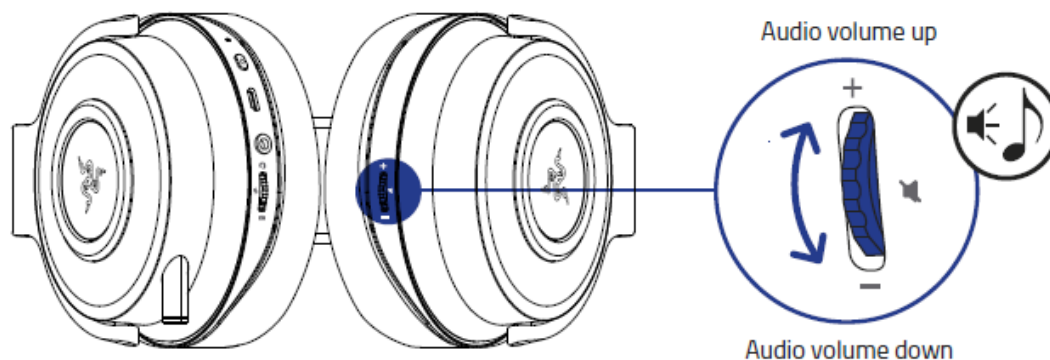


 Press the audio volume button to mute or unmute the in-game audio.

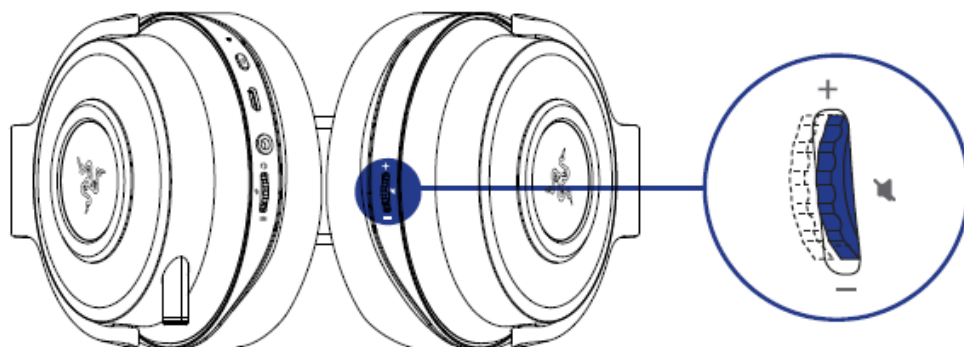


USING THE RETRACTABLE MICROPHONE

 Pull the tip of the microphone until it is fully extended.

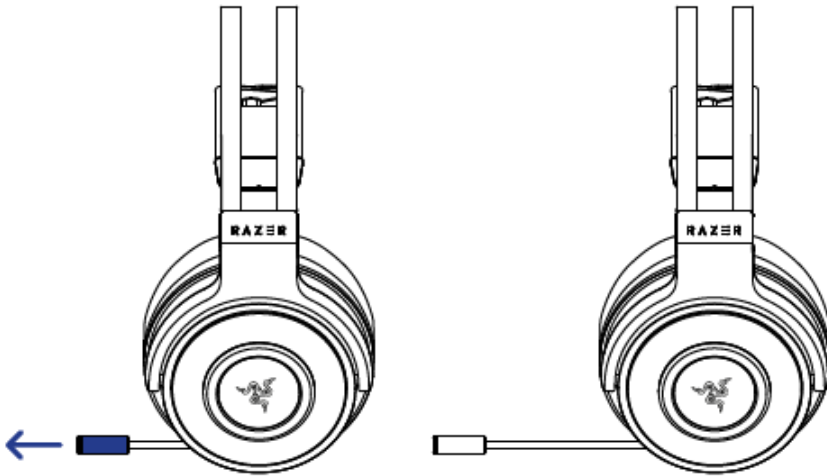


 Bend the microphone until it is in front of your mouth, then adjust the length as preferred.

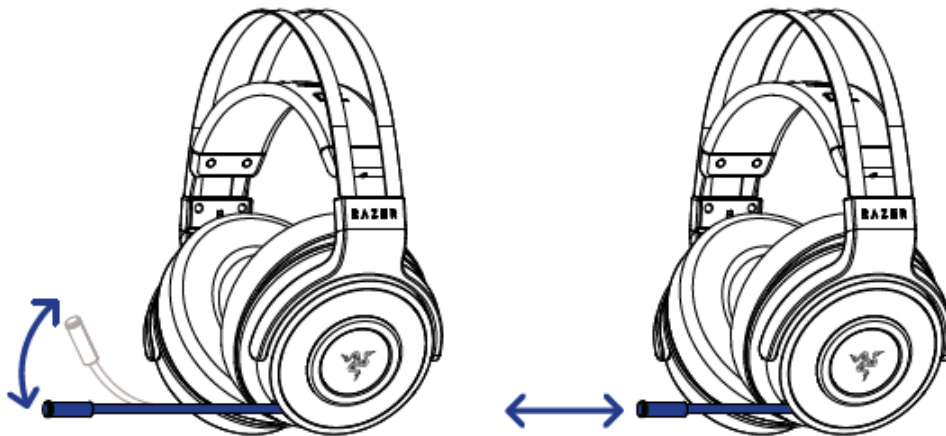


USING THE MIC MONITORING CONTROL

 Rotate the volume control to increase or decrease the mic monitoring volume. You will hear a short beep when you reach either the minimum or maximum volume.

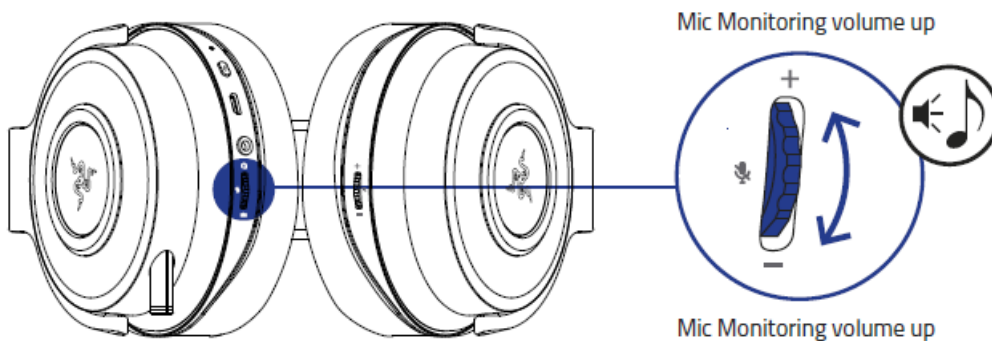


 Press the mic monitoring control to mute or unmute the microphone. The microphone LED will light up when muted.

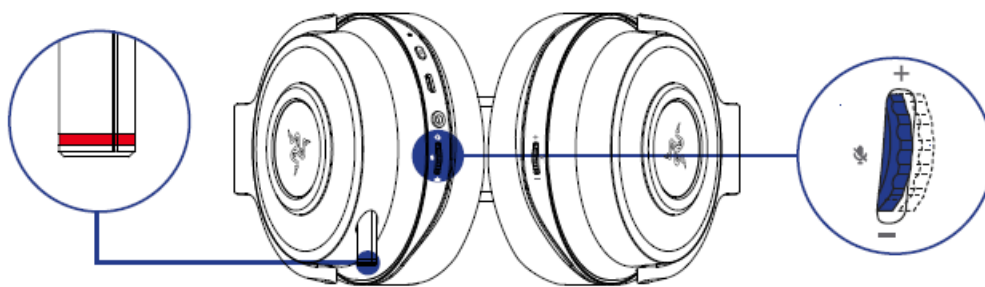

USING THE IN-LINE CONTROLS

 
Rotate the volume control wheel to increase or decrease the volume.

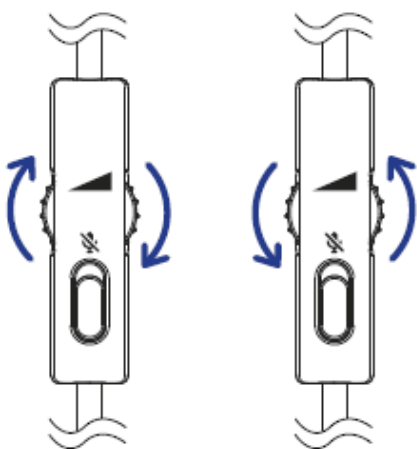

Increase

Decrease

 Use the microphone mute toggle to enable or disable the microphone.

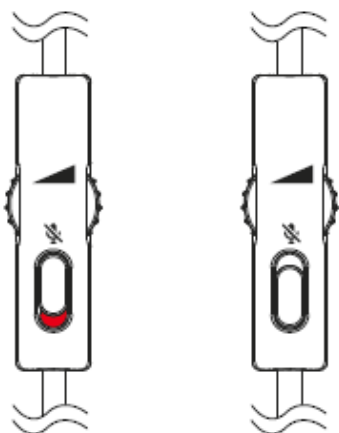


Mute

Unmute

EXTENDING YOUR HEADSET'S LIFESPAN

 We recommend stretching the headset gently apart before placing them over your head to minimize headband stress. However, please avoid overstretching the headset beyond its technical limits.

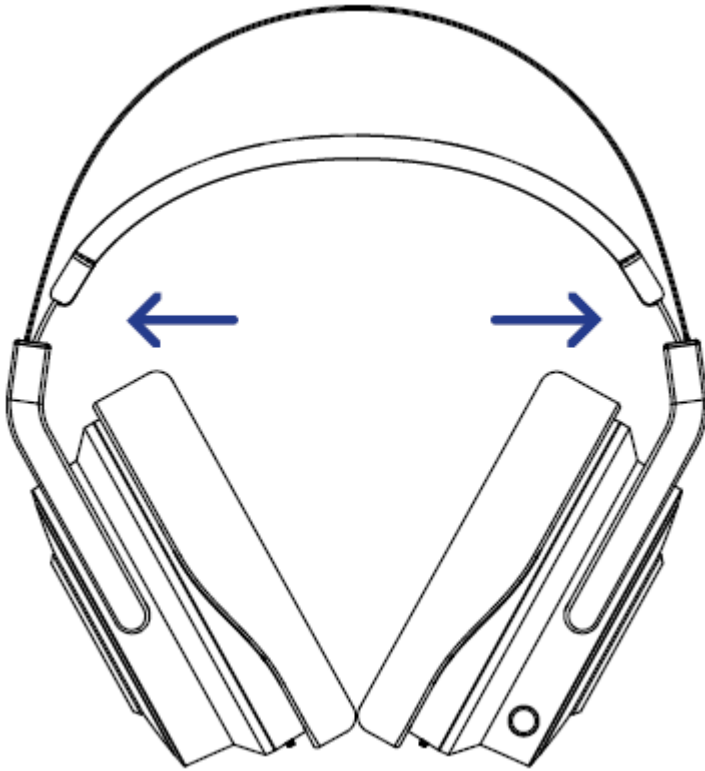

7. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Thresher For PS4, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for support.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

The device isolates external ambient sounds even at low volumes, resulting in lowered awareness of your external surroundings. Please remove the device when engaging in any activities that requires active awareness of your surroundings.

Listening to excessively loud volumes over extended periods of time can damage your hearing. Furthermore, legislation of certain countries permits a maximum sound level of 86db to affect your hearing for 8 hours a day. We therefore recommend that you reduce the volume to a comfortable level when listening for prolonged periods of time. Please, take good care of your hearing.


MAINTENANCE AND USE

The Razer Thresher For PS4 requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device from the computer and clean it using a soft cloth or cotton swab with a bit of warm water to prevent dirt buildup. Do not use soap or harsh cleaning agents.

8. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2018 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and "For Gamers. By Gamers." are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks and trade names are the property of their respective owners and other company and product names mentioned herein may be trademarks of their respective companies.

", "PlayStation", and "PS4" are registered trademarks of Sony Interactive Entertainment Inc. All rights reserved.

Windows is a trademark or a registered trademark of the Microsoft group of companies.

OS X, Mac and the Mac logo are trademarks or registered trademarks of Apple.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Thresher For PS4 (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit: [razer.com/warranty](https://www.razer.com/warranty).

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.