



DRIVER INSTALLATION INSTRUCTIONS

RAZER BLADE 15" (2019) ADVANCED - REALTEK ALC298 DRIVER

DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

- RZ09-02886
- RZ09-02887
- RZ09-02888

DRIVER NAME AND VERSION

Realtek ALC298 Driver Version 6.0.1.8586

INSTRUCTIONS

Note: This download is only intended for the Razer Blade Laptop(s) listed above. Updates for this driver may be available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.


- Ensure your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
- Please save any open documents on your computer and close all other programs before attempting this update.
- Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to a location of your choosing (such as your desktop) to locate the files for the installation process.

<http://rZR.to/vzzZi>


- Once you have extracted the file proceed to the installation steps below.

INSTALLATION PROCESS

1. To begin the installation process, click on the InstallPacakge.bat (Windows Batch File) as shown in the image below:

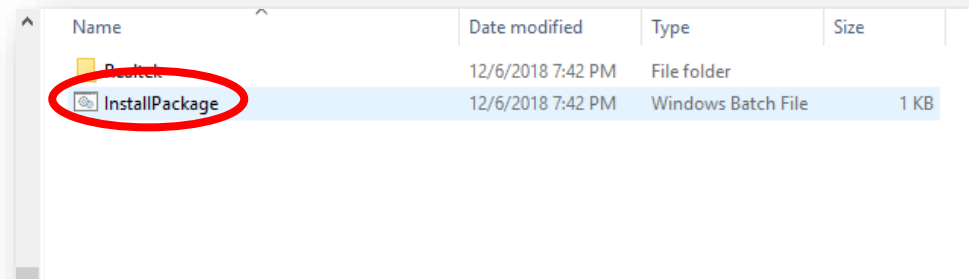

2. A windows terminal shell window will appear (as shown in the image below). Allow it to run, and once complete, you will be prompted to 'Press any key to continue. . . '

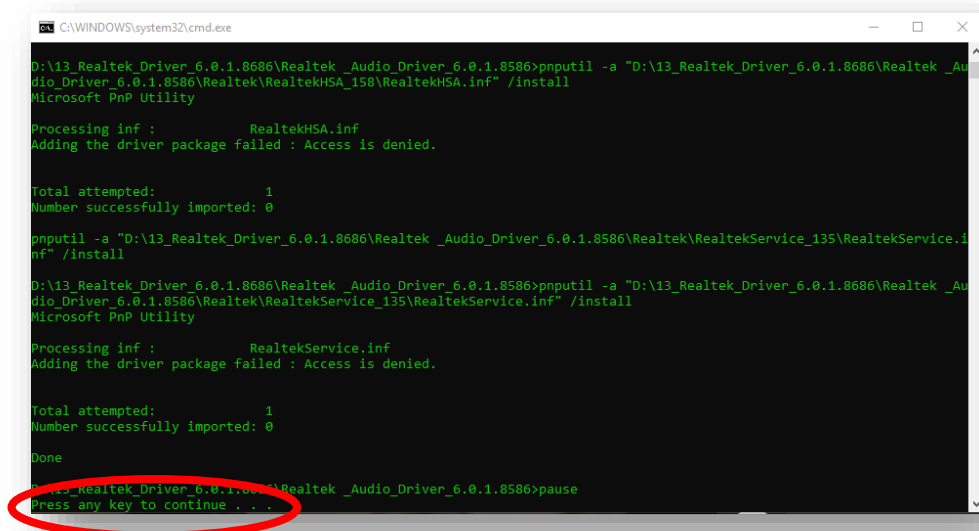

3. The installation is now complete.
4. End