

---

## DRIVER INSTALLATION INSTRUCTIONS

### APPLICABLE MODEL NUMBERS

- RZ09-03009

### DRIVER NAME AND VERSION

Intel Serial IO Driver Version 30.100.1902.3

### INSTRUCTIONS

**Note:** This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade, please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
2. Save any open documents on your computer and close all other programs before attempting this update.
3. Ensure that you have downloaded the Intel Serial IO Driver first before proceeding to the installation. You can download the driver through the link below:

<http://rZR.to/bol0t>

4. Once you have extracted the file proceed to the installation steps below.


---

## INSTALLATION PROCESS

1. Double-click on the "InstallPackage.bat" file to initiate the installation process.

<input type="checkbox"/> Name	Date modified	Type
Win10	3/15/2019 1:52 AM	File folder
<input checked="" type="checkbox"/> InstallPackage	3/15/2019 1:53 AM	Windows Batch Fi
Intel(R) Serial IO - Bring Up Guide and ...	2/22/2019 4:36 AM	PDF File
ReadMe	2/22/2019 4:38 AM	Text Document
Software License Agreement (PV)	11/7/2017 4:29 PM	PDF File
WiXLicenseNote	8/31/2016 12:28 AM	Text Document

2. A CMD window will pop up. Wait for the installation process to complete.

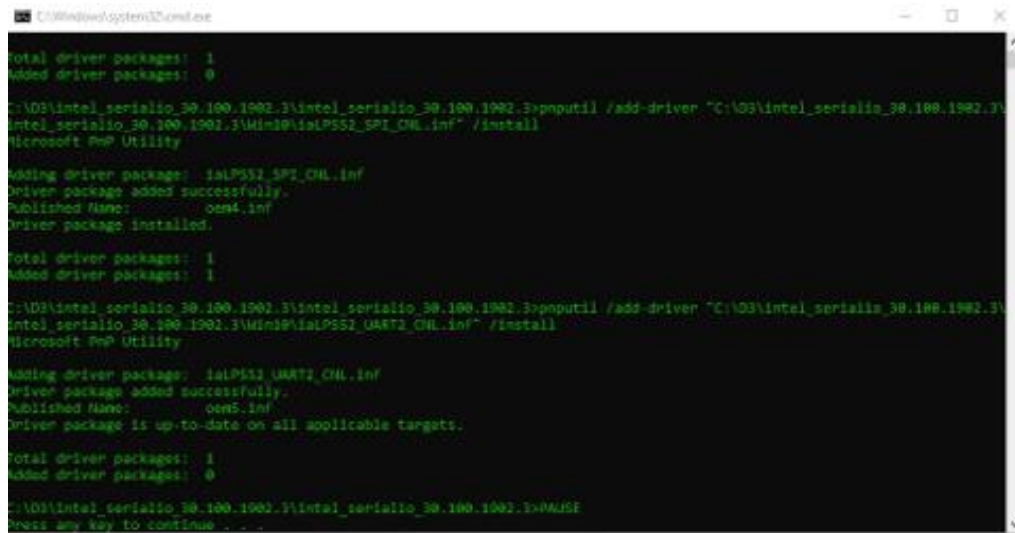

```
C:\Windows\system32\cmd.exe

Total driver packages: 1
Added driver packages: 0

C:\D3\intel_serialio_30.100.1002.3\intel_serialio_30.100.1002.3>pnputil /add-driver "C:\D3\intel_serialio_30.100.1002.3\intel_serialio_30.100.1002.3\Win10\iaLPSS2_SPI_CNL.inf" /install
Microsoft PnP Utility

Adding driver package: iaLPSS2_SPI_CNL.inf
Driver package added successfully.
Published Name: oem4.inf
Driver package installed.

Total driver packages: 1
Added driver packages: 1

C:\D3\intel_serialio_30.100.1002.3\intel_serialio_30.100.1002.3>pnputil /add-driver "C:\D3\intel_serialio_30.100.1002.3\intel_serialio_30.100.1002.3\Win10\iaLPSS2_UART2_CNL.inf" /install
Microsoft PnP Utility

Adding driver package: iaLPSS2_UART2_CNL.inf
Driver package added successfully.
Published Name: oem5.inf
Driver package is up-to-date on all applicable targets.

Total driver packages: 1
Added driver packages: 0

C:\D3\intel_serialio_30.100.1002.3\intel_serialio_30.100.1002.3>PAUSE
Press any key to continue . . .
```

3. Once the installation process is complete, press any key to close the window.