
DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

- RZ09-03009

DRIVER NAME AND VERSION

Intel ME Driver Version 1914.12.0.1256

INSTRUCTIONS

Note: This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
2. Save any open documents on your computer and close all other programs before attempting this update.
3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to a location of your choice.

<http://rZR.to/QalcQ>

4. Once you have extracted the file, proceed to the installation steps below.


INSTALLATION PROCESS

For New Install


1. Double-click on the "SetupME.exe" file to initiate the installation process.




2. In the Setup screen, click "Next" to proceed with the installation.

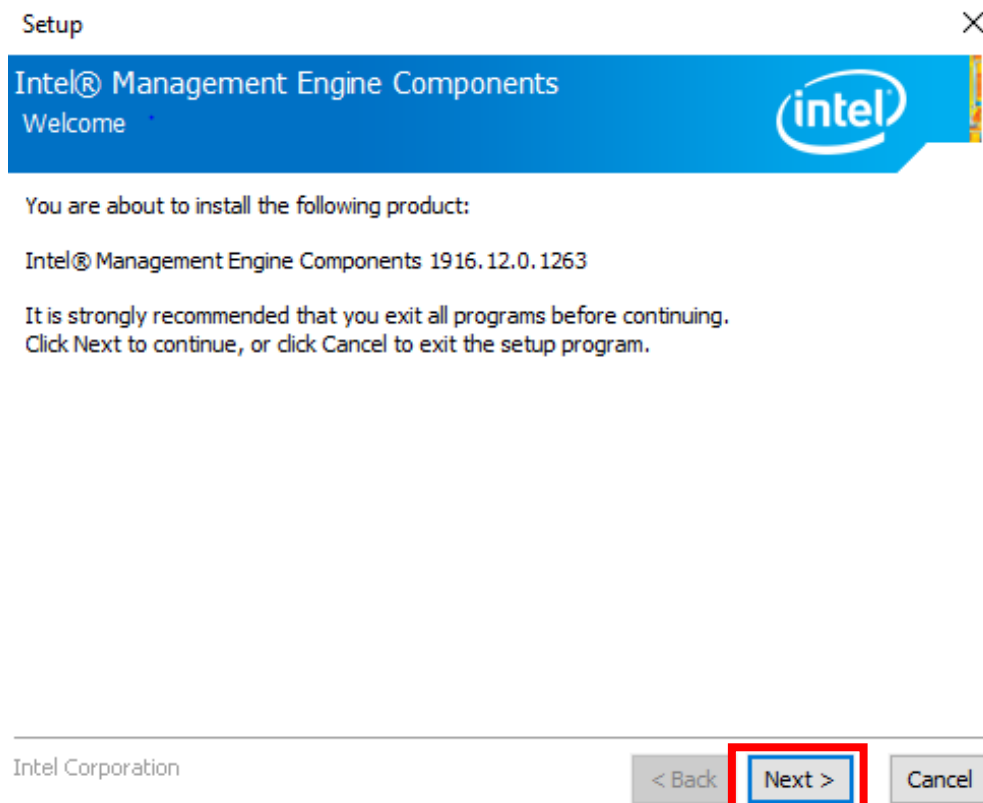


3. Tick "I accept the terms in the License Agreement" and click "Next".

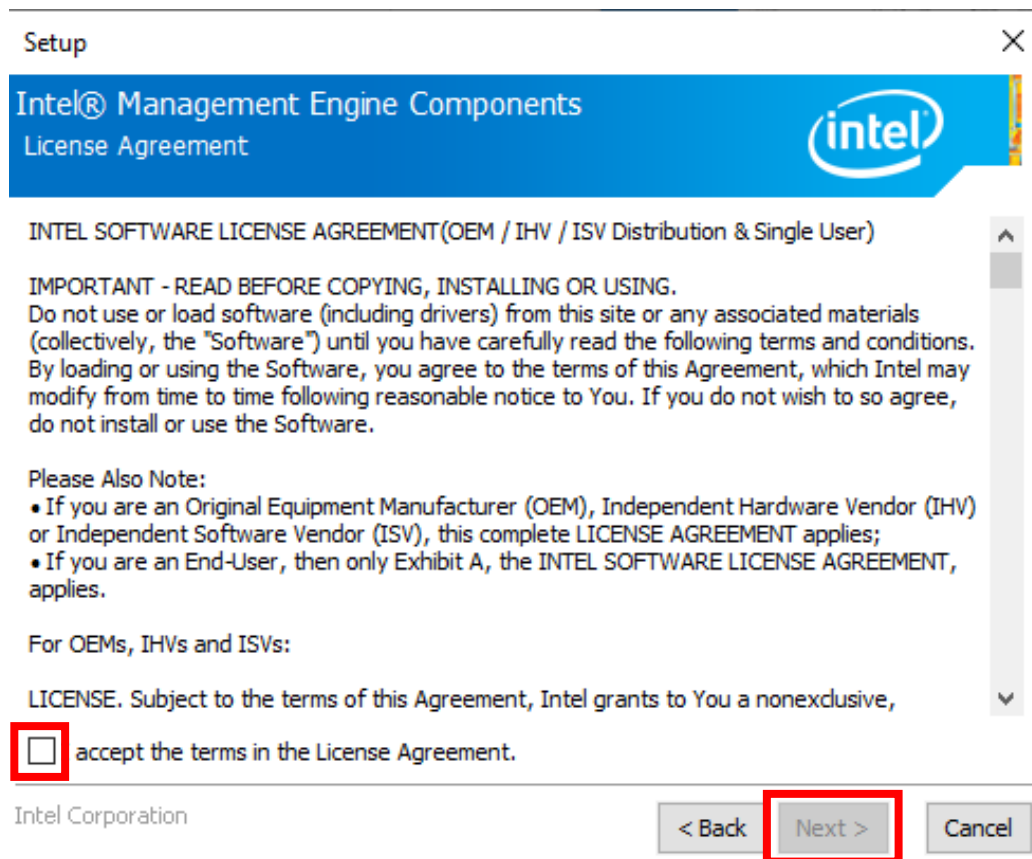

4. You will be asked to choose a setup destination folder. In this example, we are going to use the default setting and click "Next".

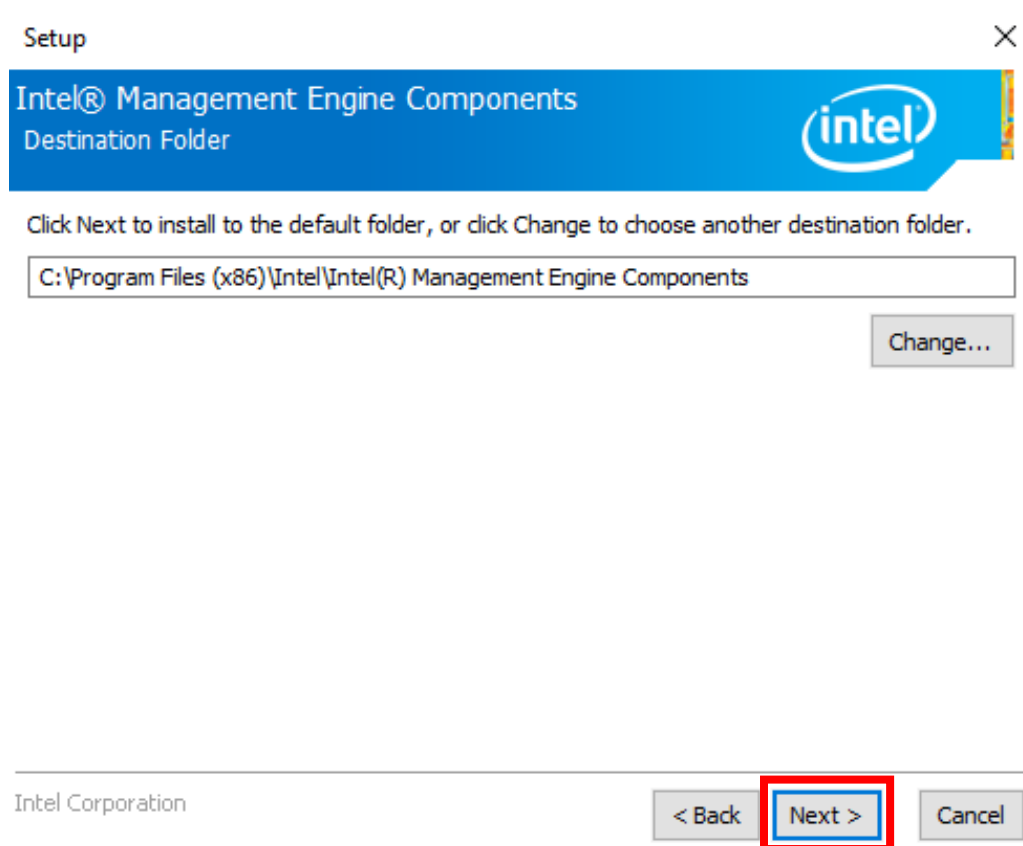


5. Once the installation process is complete, click "Finish" to close the window.

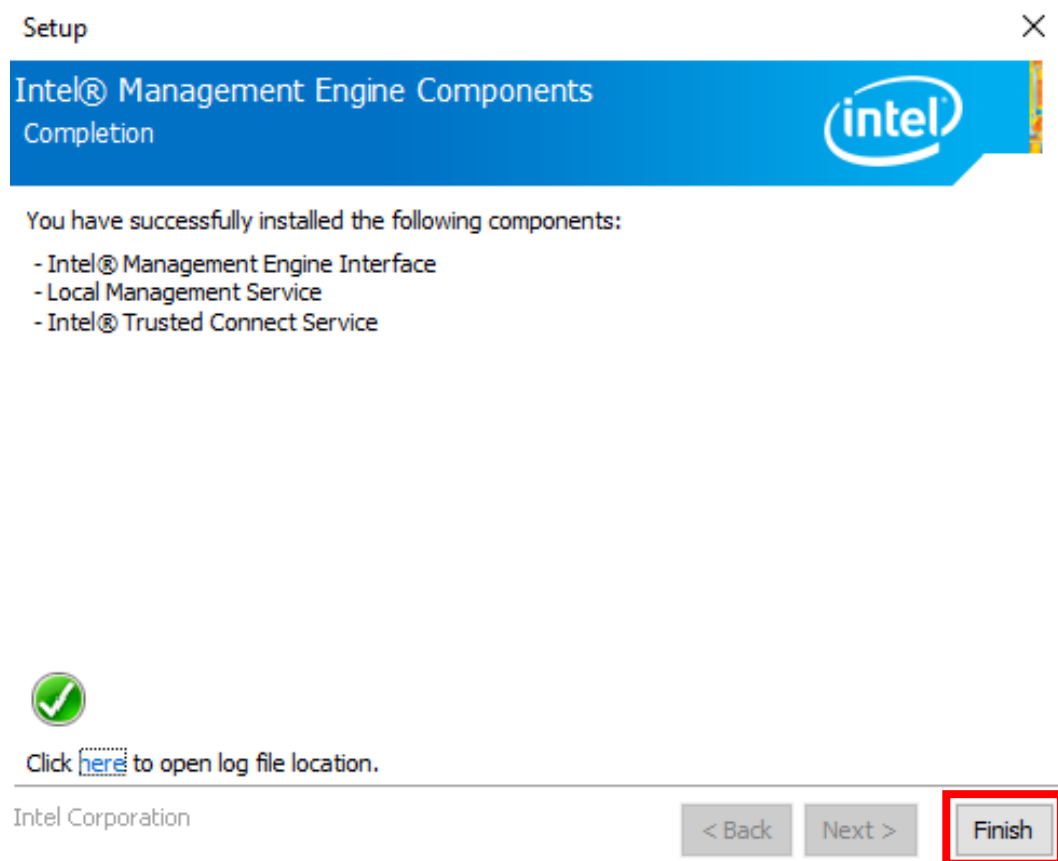


For Repair

1. Double-click on the "SetupME.exe" file to initiate the repair process.

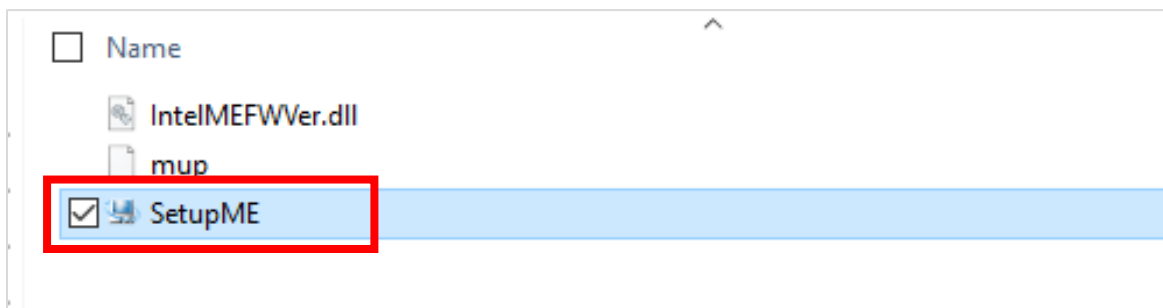

2. In the Setup screen, select the second option then click "Next" to proceed with the repair.

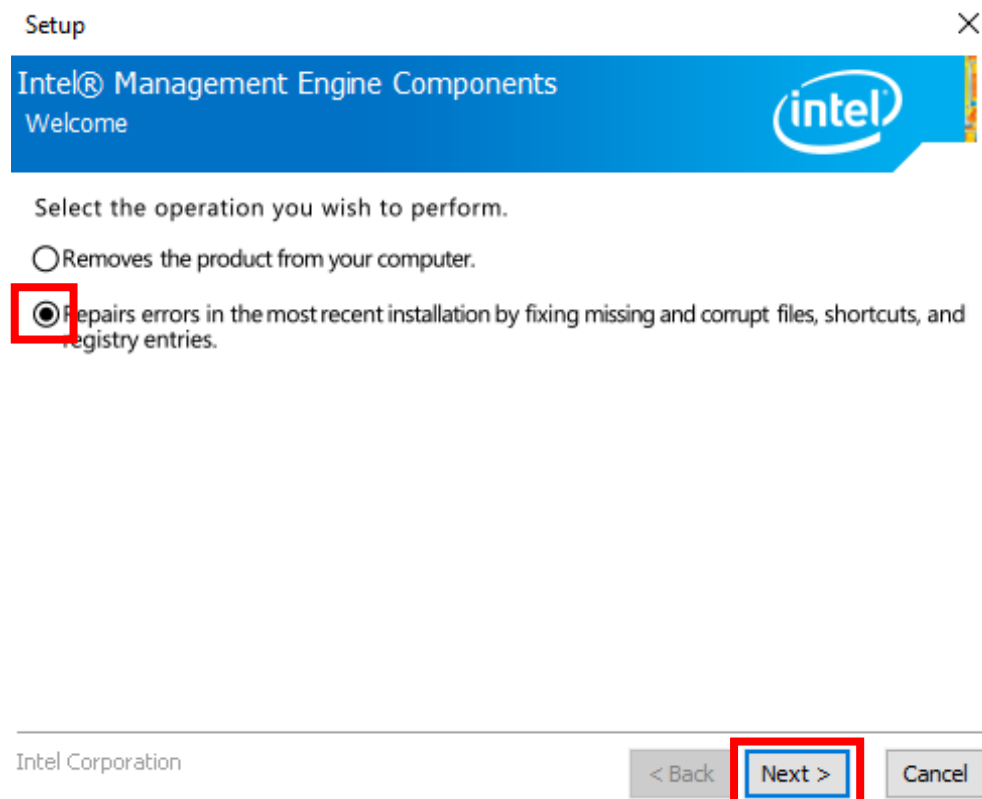

3. Once the repair process is complete, click "Finish" to close the window.

