
DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

- RZ09-03009

DRIVER NAME AND VERSION

Intel Display Driver 25.20.100.6577

INSTRUCTIONS

Note: This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

 
1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
2. Save any open documents on your computer and close all other programs before attempting this update.
3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to a location of your choice.

<http://rZR.to/YIEhc>


4. Once you have extracted the file, proceed to the installation steps below.

INSTALLATION PROCESS


1. Double-click on the "igxpin.exe" file to initiate the installation process.

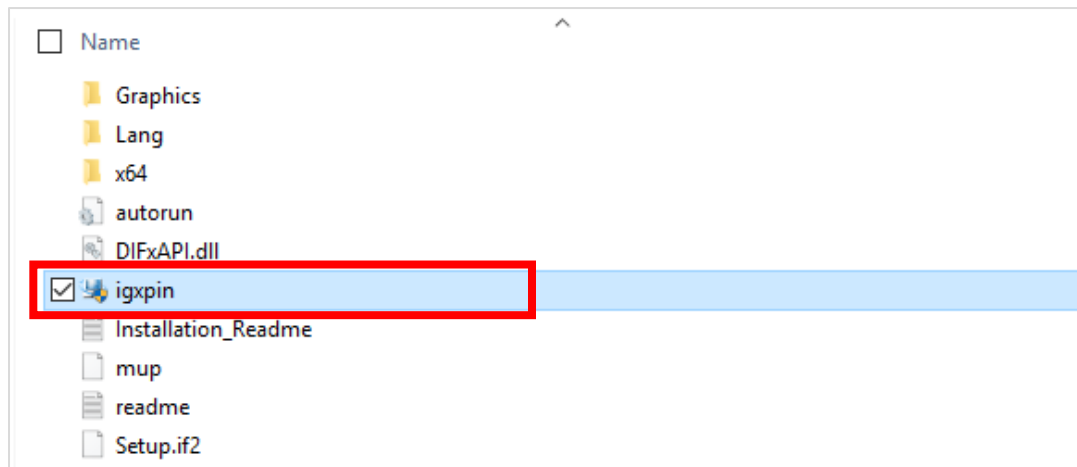

 
2. In the welcome screen, click "Next" to proceed with the installation.

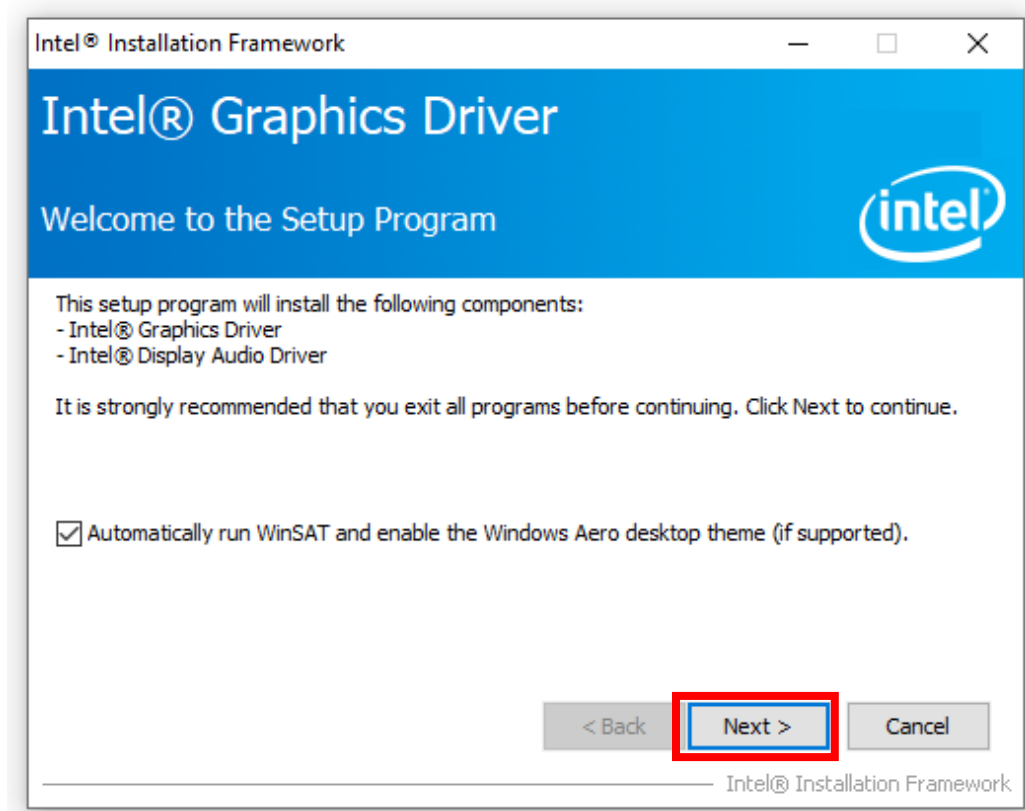

 
3. After clicking "Next" you will be asked to read and confirm the license agreement of the driver. Click "Yes" to proceed.

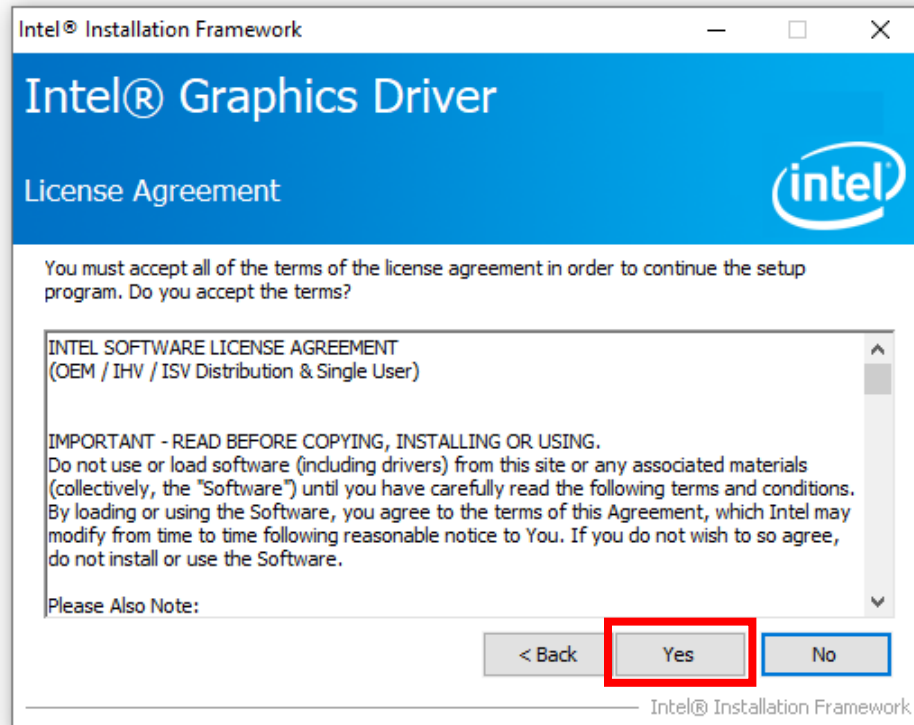

 4. A ReadMe file will appear for you to review the system requirements and other installation information. Click "Next" to begin installation.

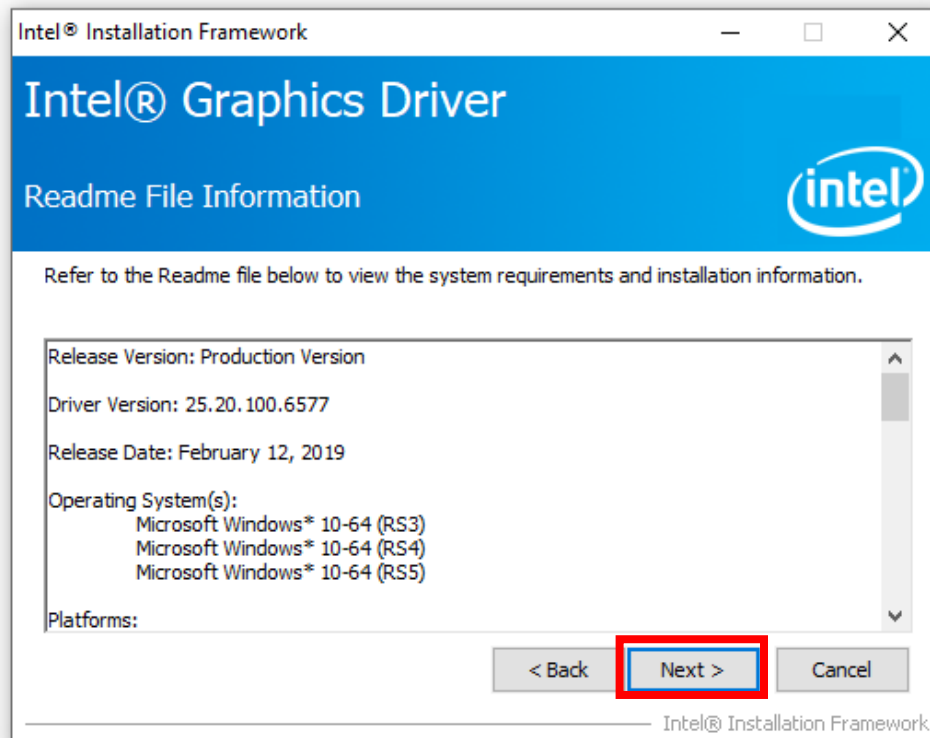

 5. A progress bar will appear. Wait for the installation process to complete. Then, click the "Next" button when it becomes active or clickable.

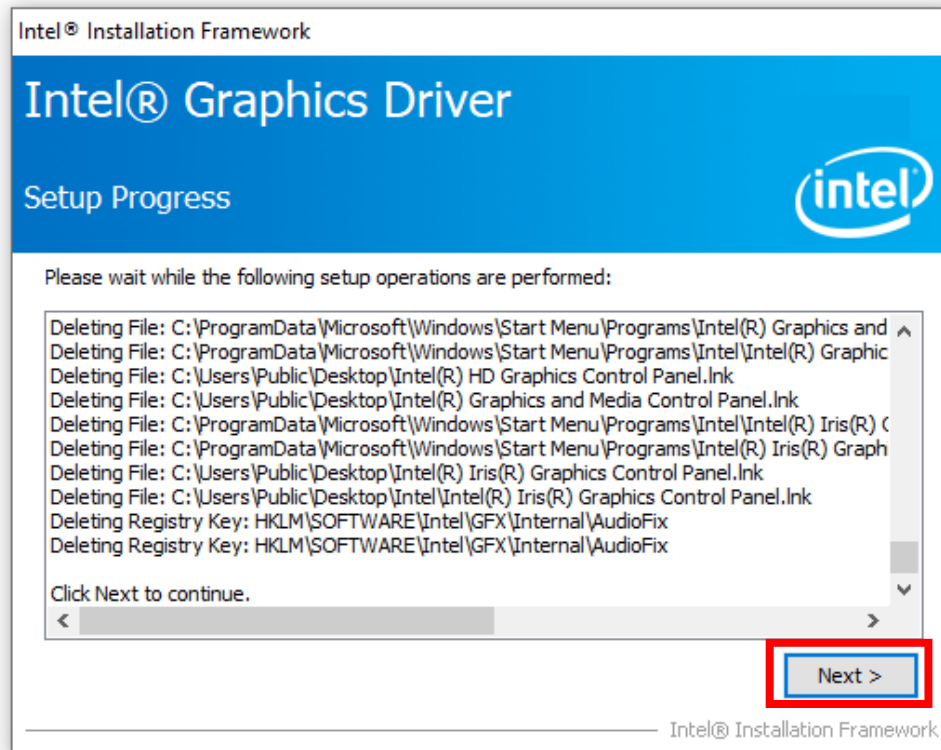

6. Once the installation process is complete, select "Yes" to restart and for the changes to take effect then click "Finish" to close the window.

