DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

RZ09-03148

DRIVER NAME AND VERSION

Intel Chipset Driver Version 10.1.16.7

INSTRUCTIONS

Note: This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

 
- 1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
- 2. Save any open documents on your computer and close all other programs before attempting this update.
- 3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to a location of your choice(such as your desktop).

http://rzr.to/XnEPG


4. Once you have extracted the file proceed to the installation steps below.

INSTALLATION PROCESS


1. To initiate the initial process, click on the SetupChipset.exe (Application) as shown in the image below:




2. The Intel® Chipset Device Software will prompt you to exit all other programs. Once done with the message, click "Next".

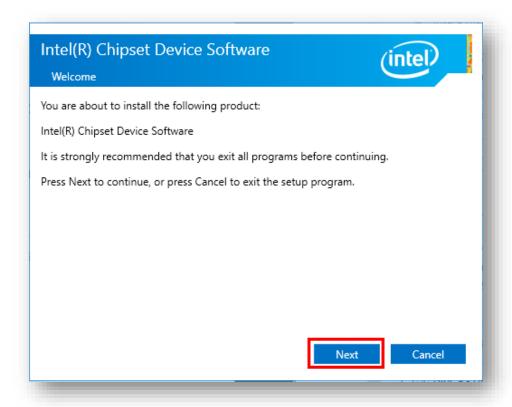


3. A license agreement will appear on the screen. Read the terms of the agreement and once done, click "Accept".

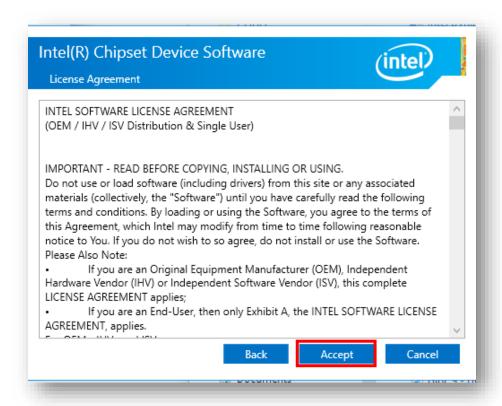

4. A confirmation of the Installation will appear, click "Install".

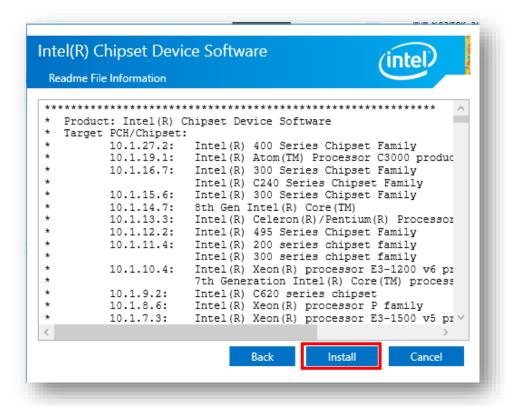

5. After

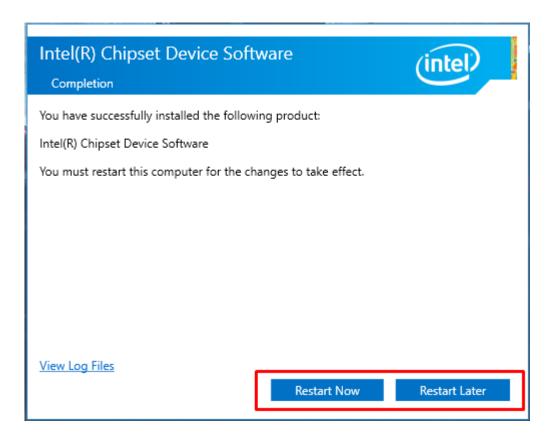

- 6. A progress bar will appear indicating the status and progression of the installation process. During the install process, you will not have access to other applications. This update may take 15 minutes or longer to complete. Do not interrupt the installation process.
- 7. Once the progress bar reaches 100% completion, your Razer Blade will restart automatically. No further action or steps are required after the progress bar reaches 100%. Once your Blade has restarted your system will be updated.