DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

RZ09-03148

DRIVER NAME AND VERSION

Intel ME Driver Version 1914.12.0.1256

INSTRUCTIONS

Note: This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.


- 1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
- 2. Save any open documents on your computer and close all other programs before attempting this update.
- 3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to a location of your choice (such as your desktop).

http://rzr.to/Hf9iZ


4. Once you have extracted the file proceed to the installation steps below.

INSTALLATION PROCESS

1. To initiate the initial process, click on the "setup.exe" (Application) as shown in the image below:

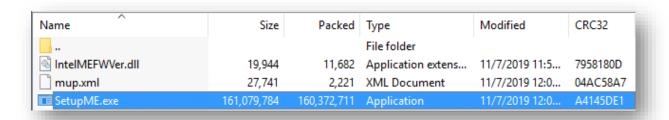


- 2. Upon clicking the SetupME.exe (Application), you will be prompted to confirm changes to be used for your system by the User Account Control. Click "Yes" to confirm these changes.
- 3. The Intel® Management Engine Components Setup will pop up. You may choose to remove the product from your computer on repair any error in the most recent installation.

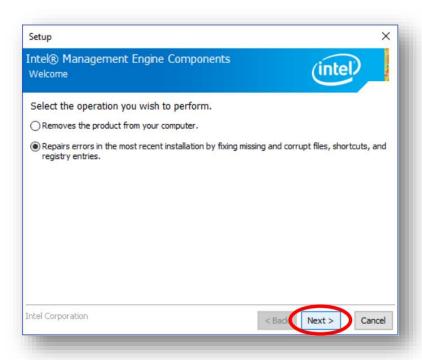

Note: It is recommended that you repair errors, as this guide instructs. Click "Next"

4. You will be met with a progress bar, advising to wait while the product is being repaired.

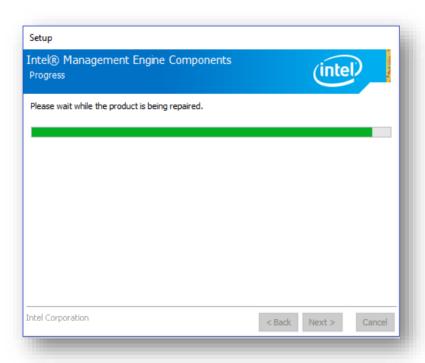

5. Upon completion of the installation, click "Finish" as shown in the image below:

