
DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

- RZ09-03148

DRIVER NAME AND VERSION

Realtek LAN Driver Version 10.35.510.2019

INSTRUCTIONS

Note: This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.




1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
2. Save any open documents on your computer and close all other programs before attempting this update.
3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to the location of your choice (such as your desktop).

<http://rZR.to/855zh>


4. Once you have extracted the file proceed to the installation steps below.

INSTALLATION PROCESS

1. Right click on the "setup.exe" file and select "Run as administrator" from the menu to initiate the installation process.

<input type="checkbox"/> Name	Date modified	Type	Size
 setup.ini	11/14/2018 4:12 PM	Configuration sett...	4 KB
<input checked="" type="checkbox"/>  setup.exe	12/12/2018 4:02 PM	Application	1,176 KB
 readme.txt	4/17/2019 3:02 PM	Text Document	4 KB

2. The User Account Control window may pop up to confirm changes that will be made by the application. Click "Yes" to allow the application to launch.
3. The Realtek Ethernet Controller Driver Wizard will pop up. Wait for the installation setup to complete loading. Follow the on-screen installation guide.

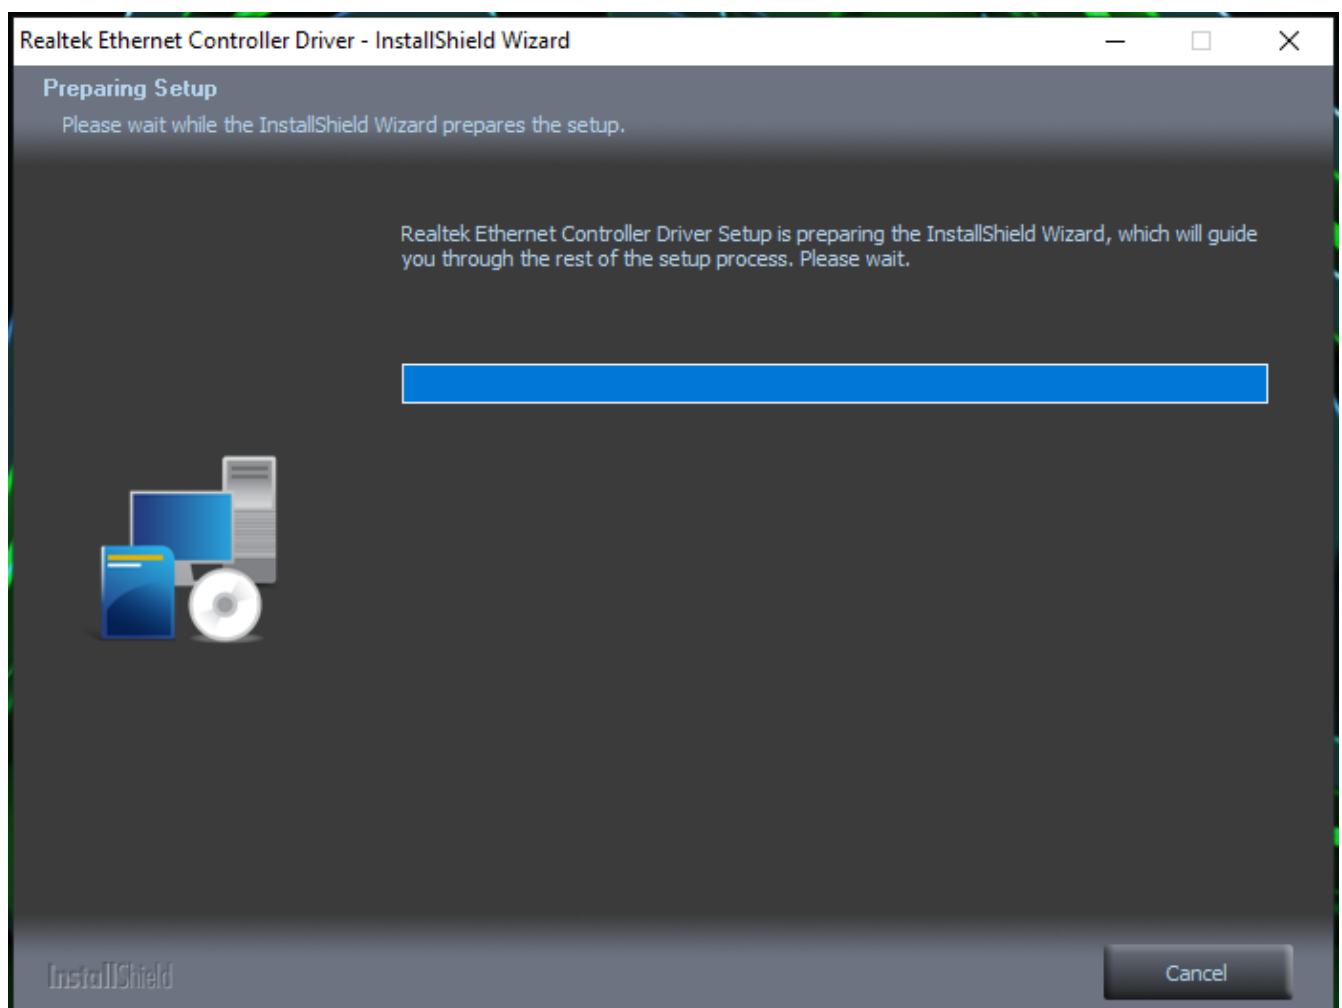

4. After the installation is complete, click "Finish".

