



RAZER RAION

MASTER GUIDE

Attention fighting game fans: here comes a new challenger. With a 6 face buttons layout using Razer™ Mechanical Switches, and a Mecha-Tactile 8-way D-pad, the **Razer Raion** is a top-tier pick that oozes arcade feel and is optimized to give you the control and execution you need to thrive in the fighting game community.

 
CONTENTS

1. WHAT'S INSIDE / WHAT'S NEEDED	3
2. LET'S GET YOU COVERED	5
3. TECHNICAL SPECIFICATIONS.....	6
4. SETTING UP YOUR CONTROLLER.....	7
5. USING THE RAZER RAION	8
6. SAFETY AND MAINTENANCE	10
7. LEGALESE.....	11

1. WHAT'S INSIDE / WHAT'S NEEDED

WHAT'S INSIDE

- Razer Raion

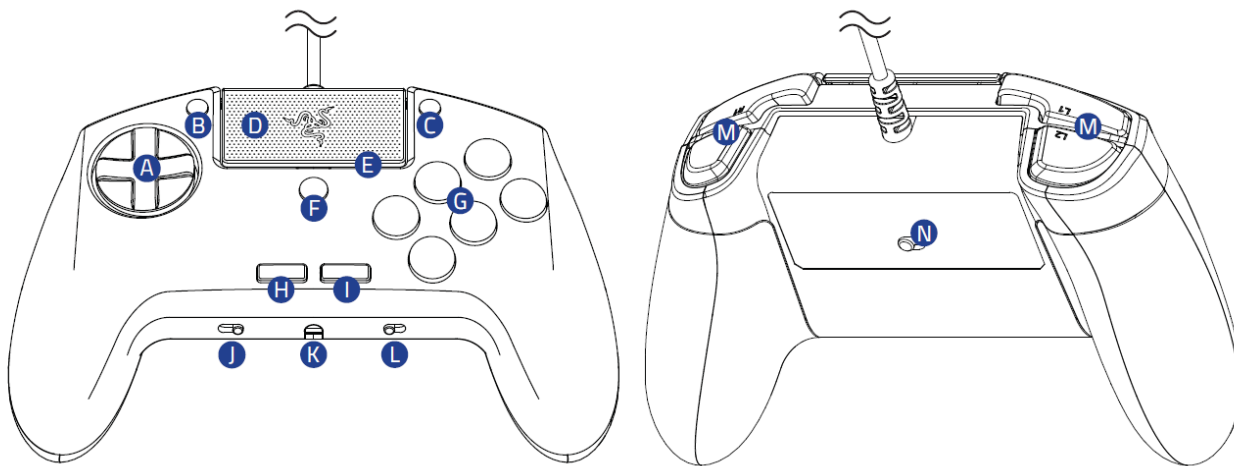

A. Razer™ Mecha-Tactile D-pad

B. SHARE button

C. OPTIONS button

D. Touchpad button

E. Status indicator

F. PS button

G. Razer™ Mechanical Switch
pushbuttons

H. Mic mute button

I. Volume control button

J. D-pad mode switch
(Directional Pad, Left Analog Stick,
Right Analog Stick)

K. Stereo headset port*

L. Bumper mode switch

M. Bumpers (L1/L2/R1/R2)

N. Mode switch

**Audio function only available in PS4™ mode.*

- Important Product Information Guide



The dedicated non-detachable 3 m / 9.8 ft cable with strain relief is a proprietary cable for this wired controller.

 
WHAT'S NEEDED

- PlayStation®4 or PC (Windows 7 or higher)
- A free USB port

 *PC compatibility not tested nor endorsed by Sony Interactive Entertainment Inc.*

2. LET'S GET YOU COVERED

You've got a great device in your hands, complete with a 1-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at razerid.razer.com

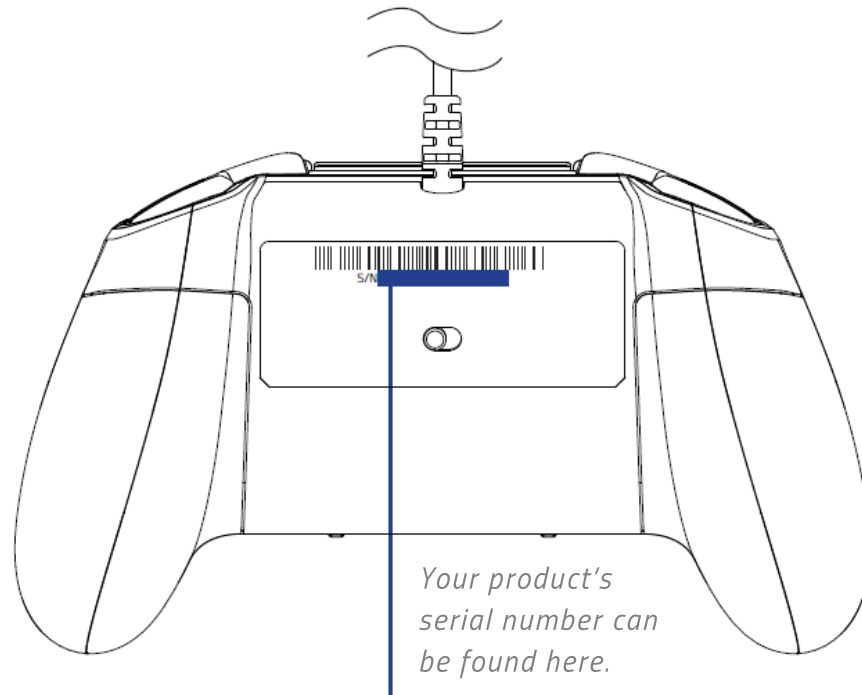

Got a question? Ask the Razer Support Team at support.razer.com

3. TECHNICAL SPECIFICATIONS

AT-A-GLANCE

- Razer Mecha-tactile D-Pad
- Razer Mechanical Switch pushbuttons
- 3.5mm analog audio port compatible for PS4™
- 9.8 ft/ 3 m wired cable with strain relief
- Wired connection

 
APPROXIMATE SIZE & WEIGHT

- Length: 173 mm / 6.8 in
- Width: 103 mm / 4.0 in
- Height: 58 mm / 2.3 in
- Weight: 275 g / 0.6 lbs

4. SETTING UP YOUR CONTROLLER


Before connecting the Razer Raion to your PC or PS4™, set the Mode switch to the corresponding system (PC or PS4) you'll be using it with. Once connected, the status indicator will turn solid green.

i *As a safety feature for your gameplay, any mode will only be applied when you unplug and reconnect the controller.*

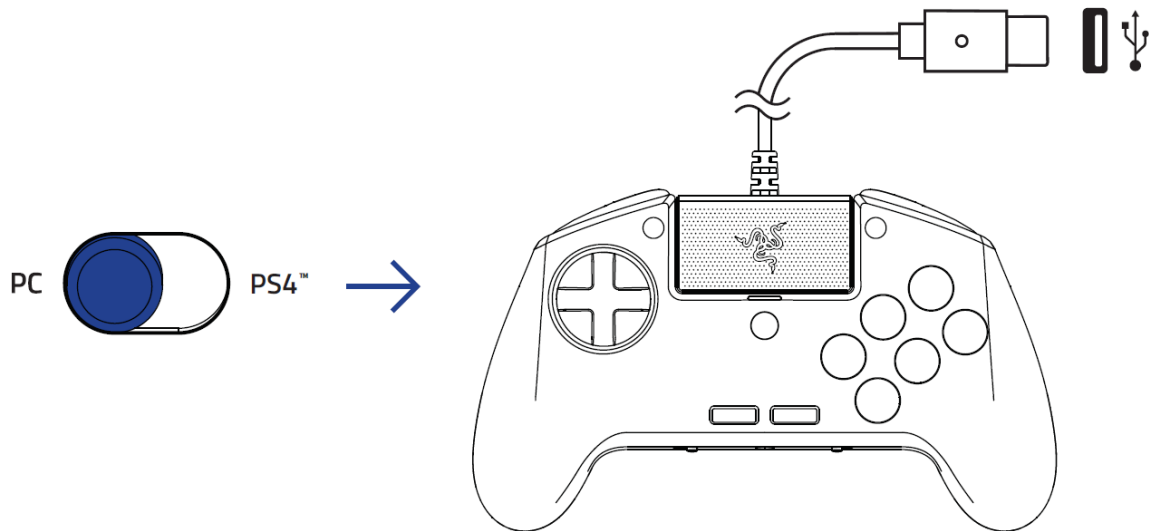

On PS4™

Press the PS button to begin using the controller.

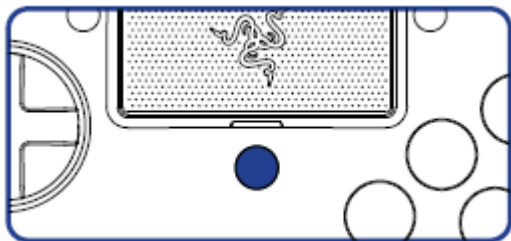

On PC

Wait until its drivers are automatically installed or manually update them through the Device Manager.




i *PC compatibility not tested nor endorsed by Sony Interactive Entertainment Inc.*

5. USING THE RAZER RAION


MUTING MICROPHONE INPUT

Press the Mic mute button to mute or unmute microphone input from the connected headset.

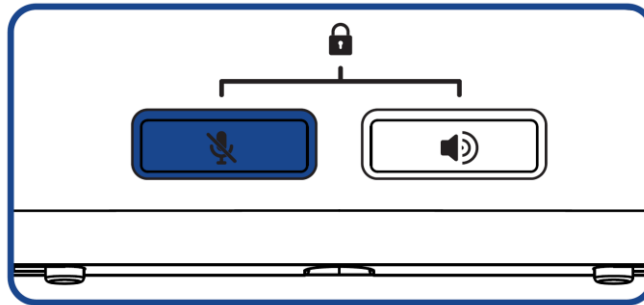

ADJUSTING THE VOLUME

Press the Volume control button to cycle through the volume levels of the Stereo headset port. You may also press and hold the Volume control button, and then press the up or down buttons of the D-pad to increase or decrease the audio volume of the Stereo headset port respectively. You will hear a notification tone when the Stereo headset port volume reaches its lowest or highest setting.

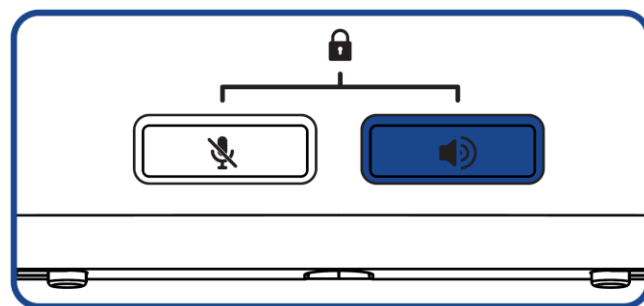


USING THE D-PAD MODE SWITCH

Use the D-pad mode switch to shift the controller function to either directional pad (DP), left analog stick (LS), or right analog stick (RS).




ACTIVATING COMPETITION MODE

Press the Mic mute and Volume control buttons simultaneously while in-game to activate Competition Mode. The status indicator will turn solid white, indicating that the mode is active. Under this mode, the PS, SHARE, and OPTIONS buttons are disabled.

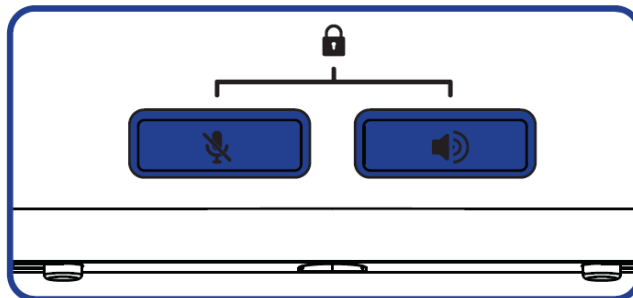


CHANGING BUMPER MODES

By default, the left bumpers are set to L1 / L2 and the right bumpers are set to R1 / R2.

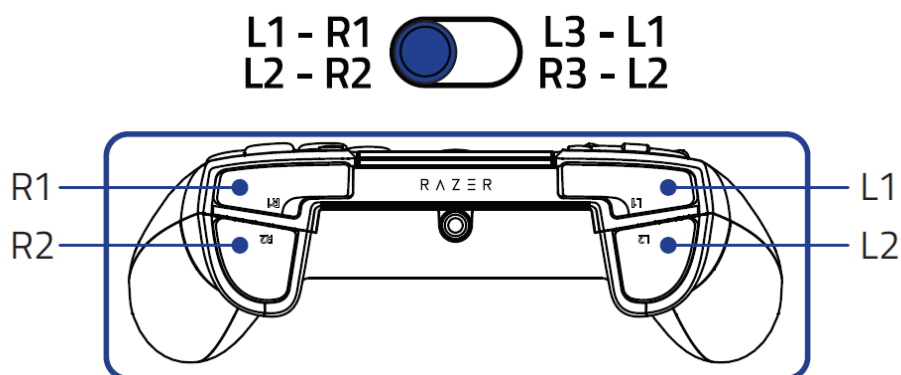

If your game requires the L3 and R3 analog stick buttons, set the Bumper mode switch to **L3-L1/R3-L2**. This will set the left bumpers to L3/R3, and the L1/L2 replacing the right bumpers.

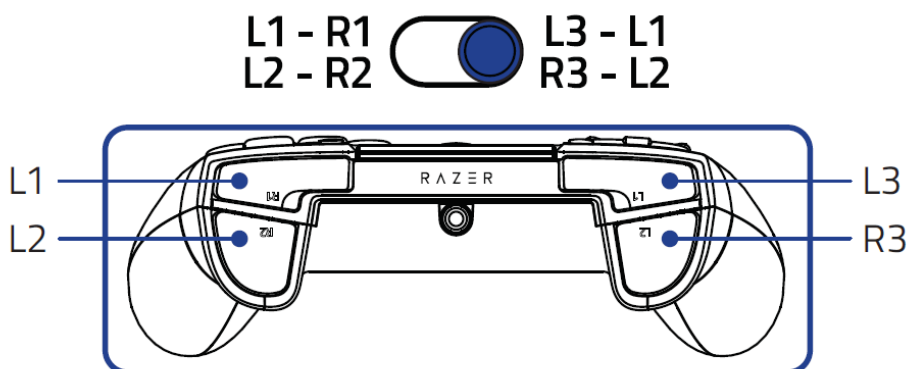

6. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Raion, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for assistance.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug the device in order to let the temperature stabilize to an optimal level.

MAINTENANCE AND USE

The Razer Raion requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device and clean it using a soft cloth or cotton swab to prevent dirt buildup. Do not use soap or harsh cleaning agents.

Do not clean the Razer Raion with alcohol-based solutions or other solvents. Doing so may tarnish the exterior surface of the controller.

7. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2019 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, "For Gamers. By Gamers.", and "Powered by Razer Chroma" logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks and trade names are the property of their respective owners and other company and product names mentioned herein may be trademarks of their respective companies.

, "PlayStation", "△OX□", and "PS4" are registered trademarks of Sony Interactive Entertainment Inc. All rights reserved.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Raion (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://www.razer.com/warranty).

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without

invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.