
DRIVER INSTALLATION INSTRUCTIONS

APPLICABLE MODEL NUMBERS

- RZ09-03137
- RZ09-03138

DRIVER NAME AND VERSION

Intel Dynamic Tuning Driver Version 8.6.10400.9366

INSTRUCTIONS

Note: This download is for the original driver that was installed on your Razer Laptop. Updates for this driver are available via standard Windows Updates. To ensure you have the latest driver installed on your Blade please make sure to apply all available updates from Windows.

Please follow the instructions below to download and install the original driver for your Blade. Following the installation, it is recommended to search for any available Windows Updates.

 
1. Ensure that your Blade is plugged into a wall outlet and not running on battery alone before proceeding.
2. Save any open documents on your computer and close all other programs before attempting this update.
3. Download the driver from the link below. You will need to right click the .zip folder and choose to extract the files to location of your choosing (such as your desktop) to locate the files for the installation process.

<http://rZR.to/n5J0b>


4. Once you have extracted the file proceed to the installation steps below.

INSTALLATION PROCESS


1. Double-click "setup.exe" (Application) as shown in the image below:

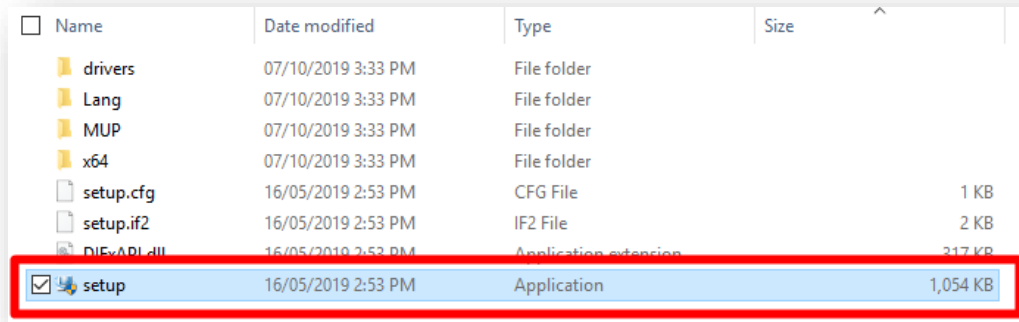

 
2. The User Account Control window may pop up to confirm changes that will be made by the application. Click "Yes" to allow the application to launch.
3. The Intel® Dynamic Tuning Installer will prompt you to exit all other programs. Once done, click "Next".

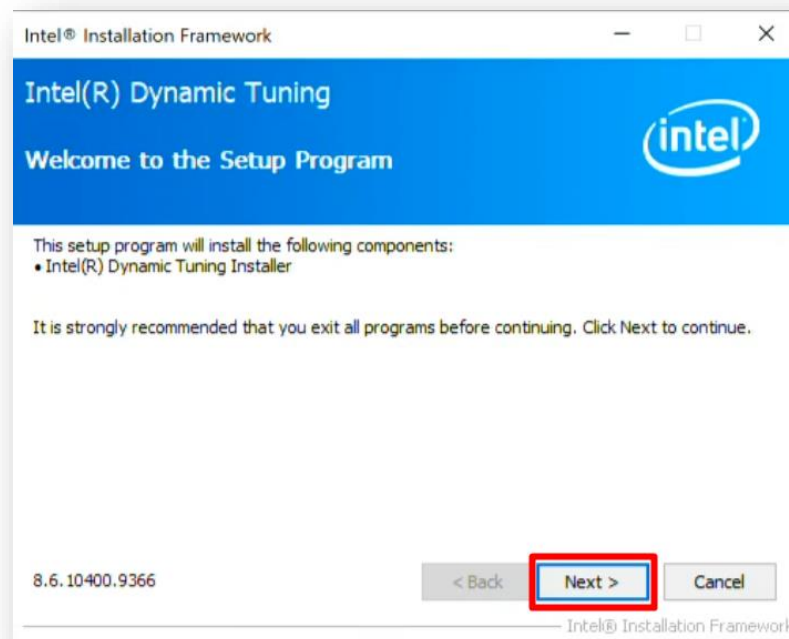

 4. A license agreement will appear on the screen. Read the terms of the agreement, then click "Yes".

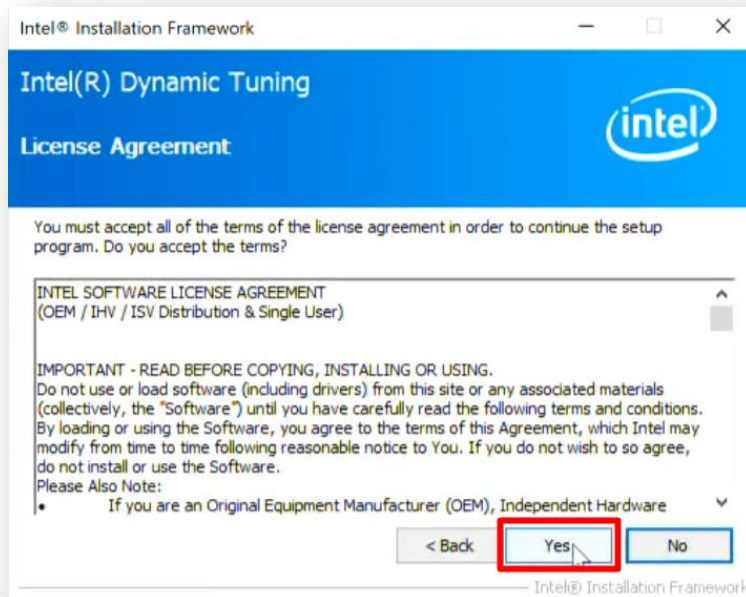

 5. Wait for the setup operations to be performed and completed. Once done, click "Next" to continue.

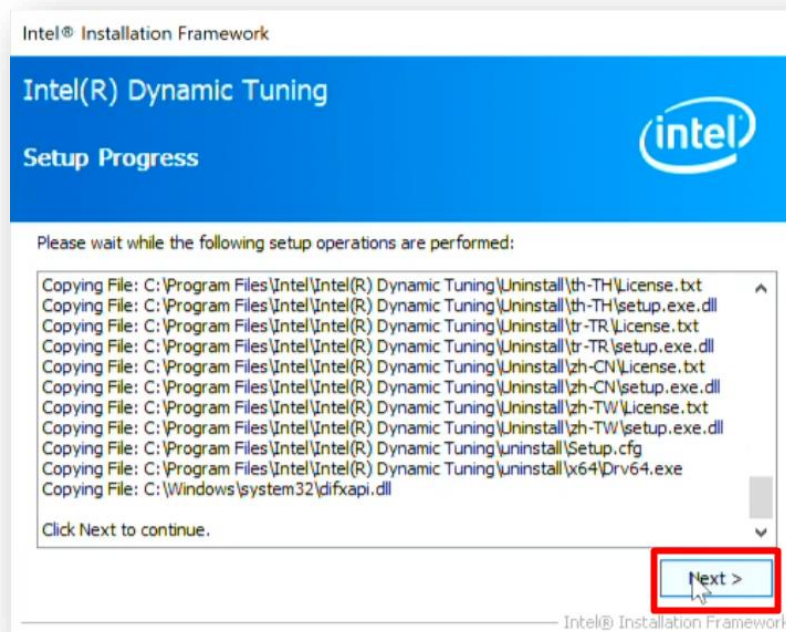

6. Upon completion of the installation, click "Finish".

