



FIRMWARE INSTALLATION INSTRUCTIONS

RAZER NOMMO PRO FIRMWARE UPDATER GUIDE

UPDATER INFORMATION

APPLICABLE MODEL NUMBERS

- RZ05-02470

DRIVER NAME AND VERSION

NommoPro_FirmwareUpdater_v1.03.00.049_r1

Download Link: <http://rZR.to/nommoprofwu>

RELEASE NOTES:

 
- Fixed issue where the LED on satellite speakers may stop working during usage.
- Enhanced power consumption of Network standby mode.

PREPARATIONS


1. Save any open documents on your computer and close all other programs before attempting the update.
2. Close Razer Synapse 3 by right-clicking Synapse 3 icon on the taskbar and selecting "Exit Synapse".
3. Make sure the USB cable, Control Pod, and power cord are connected to the subwoofer, and the subwoofer to your PC using the USB cable.
4. Turn ON the subwoofer and Control Pod.
5. Run updater and follow the installation steps below.

INSTALLATION PROCESS

1. Download the latest firmware to an available PC by following the links above.
2. After completing the download launch the downloaded updater.
3. Click "UPDATE".

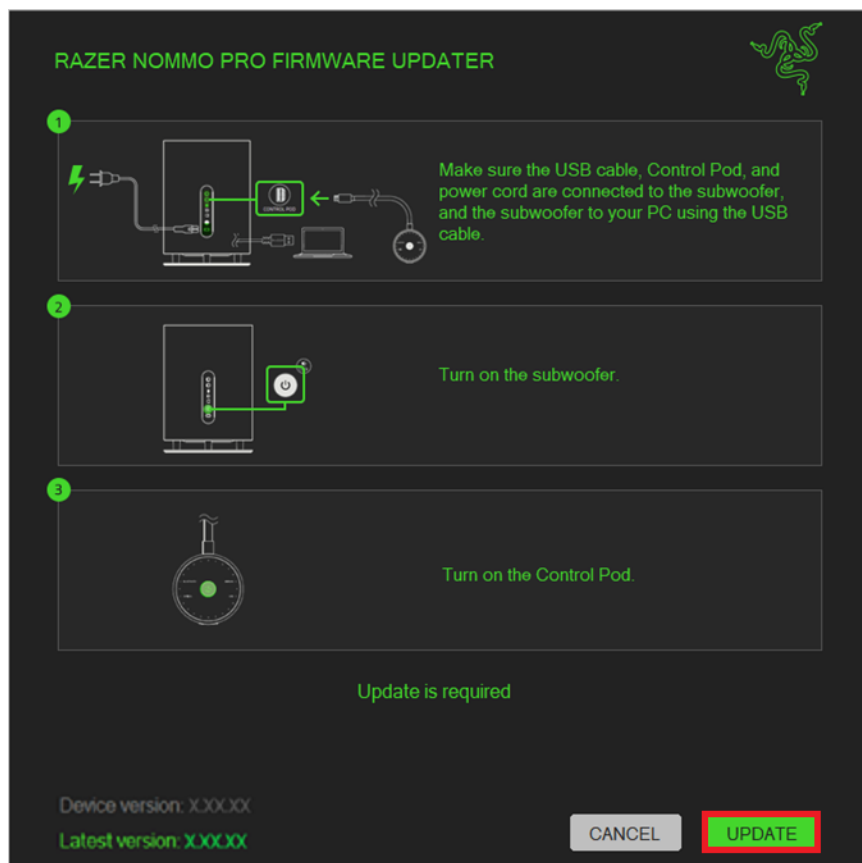

4. Wait for the updater to complete the process.

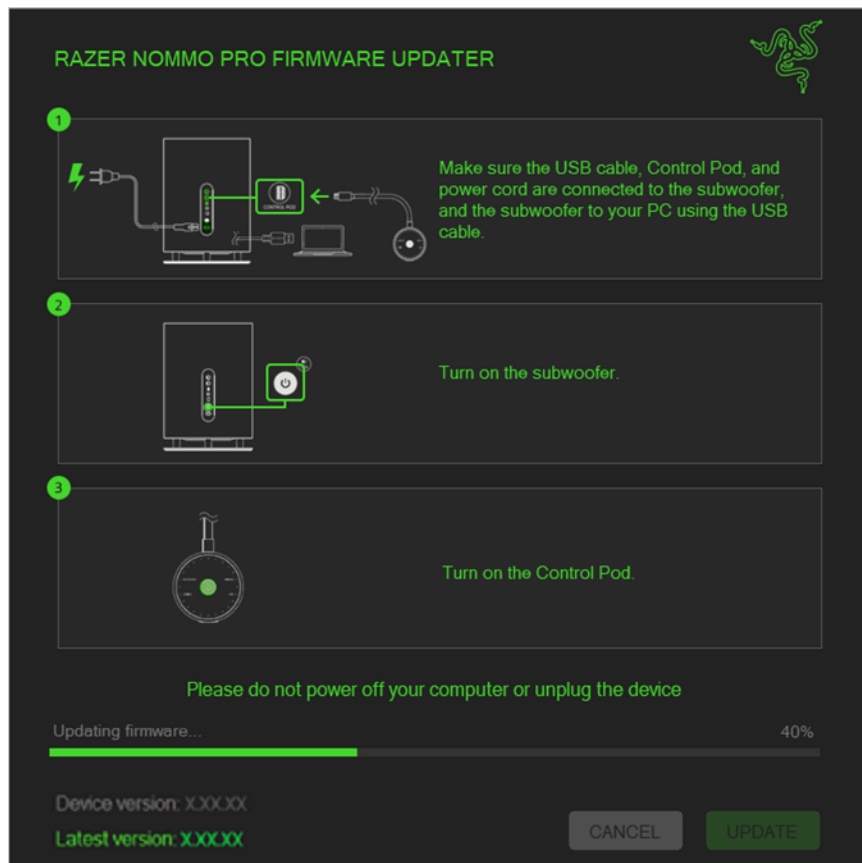

5. A confirmation message will come up when the update is complete.

