



RAZER LAPTOP STAND CHROMA V2

MASTER GUIDE

Rise to every occasion and connect like never before with the **Razer Laptop Stand Chroma V2**. Supporting 13", 15" and 17" Razer Blade laptops, this ergonomic laptop stand features a unique 4-port USB-C hub to connect a variety of devices to keep your setup clean and ready to win.

 
CONTENTS

| | |
|--|----|
| 1. WHAT'S INSIDE / WHAT'S NEEDED | 3 |
| 2. LET'S GET YOU COVERED | 5 |
| 3. GETTING STARTED | 6 |
| 4. USING THE LAPTOP STAND..... | 7 |
| 5. PERSONALIZING YOUR LAPTOP STAND | 9 |
| 6. SAFETY AND MAINTENANCE | 17 |
| 7. LEGALESE..... | 18 |

1. WHAT'S INSIDE / WHAT'S NEEDED

WHAT'S INSIDE

- Razer Laptop Stand Chroma V2

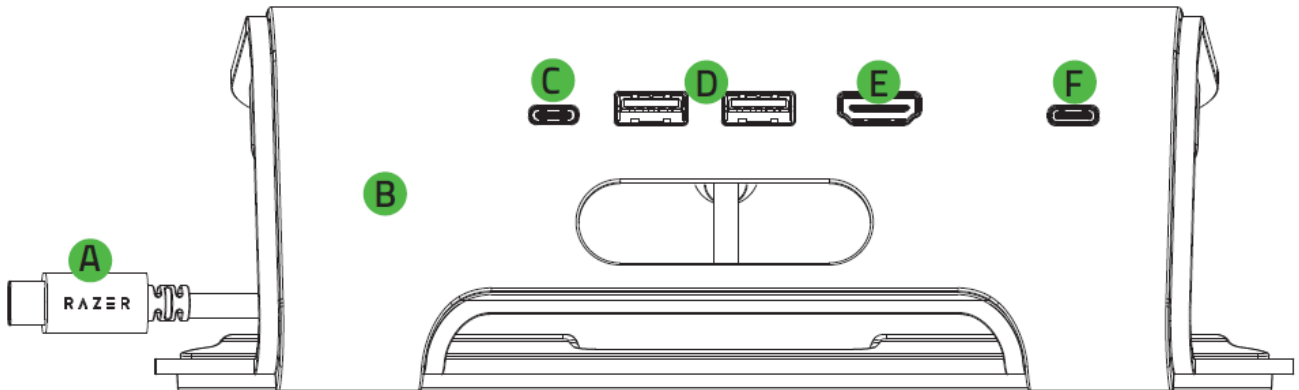


- A. USB Type-C connector (to laptop)¹
- B. Durable metallic frame
- C. USB 3.2 Gen 1 Type-C port^{2, 3}
- D. USB 3.0 Gen 1 Type-A ports
- E. HDMI port²
- F. Type-C Power Delivery port⁴

¹ When powering a laptop via power passthrough, up to 80% power output of its power adapter will only be used to power your system (e.g. 100W input will only generate 80W output) to ensure that other connected devices remain powered.

² Supports single display (up to 3480 x 2160, 60Hz) via HDMI or USB Type-C connection, and dual display (up to 2560 x 1440, 60Hz) via HDMI and USB Type-C connection. To use this feature, make sure your laptop supports these resolutions as well.

³ When using a USB Type-C cable to connect to a monitor, it's highly recommended that you directly plug it into the USB Type-C port of the laptop stand. If a USB Type-C to HDMI adapter is required in your setup, you may need to manually adjust the screen refresh rate of your monitor to 50Hz on your laptop's Advanced display settings to avoid display issues.

 ⁴ DC input. Supports power passthrough. When using this feature, it's recommended that you either use a Razer 65W / 100W power adapter or a Limited Power Source (LPS) adapter.

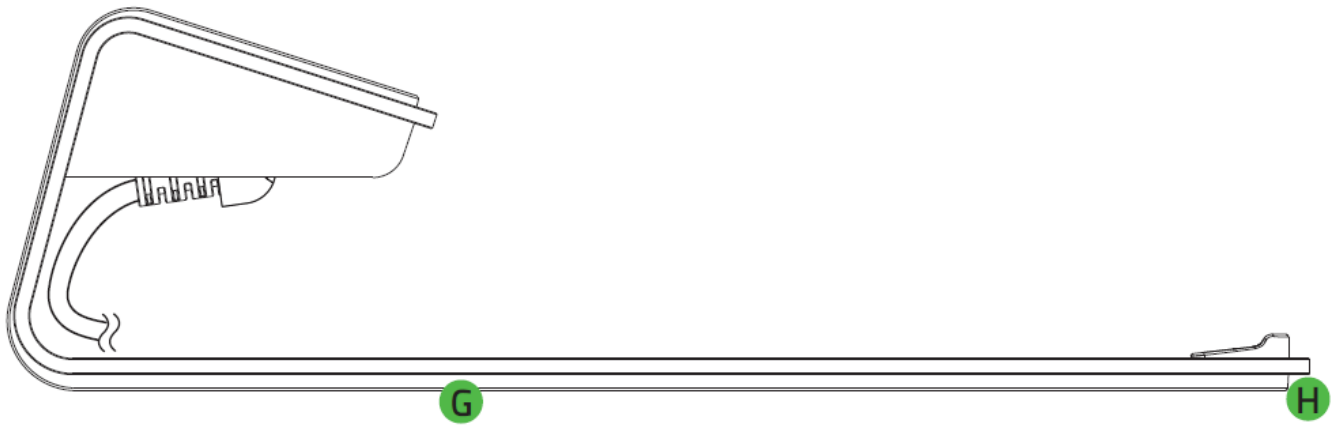

G. Non-slip rubber pad

H. Underglow lighting Powered by Razer Chroma™ RGB

- Important Product Information Guide

WHAT'S NEEDED

Product requirements

 
- Direct USB Type-C connection to a laptop

Razer Synapse requirements

- Windows®10 64-bit (or higher)
- Internet connection for software installation

2. LET'S GET YOU COVERED

You've got a great device in your hands, complete with a 1-year limited manufacturer's warranty* coverage. Now maximize its potential and score exclusive Razer benefits by registering at razerid.razer.com

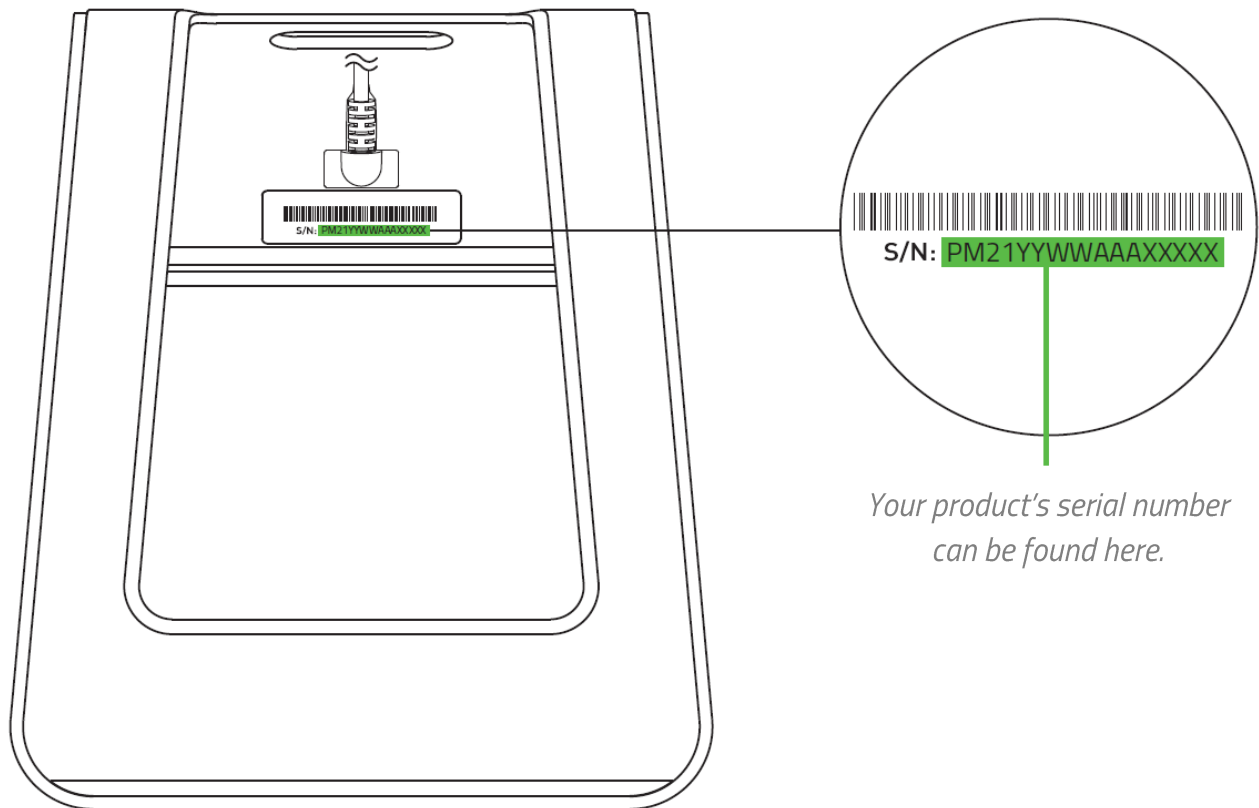


*Your product's serial number
can be found here.*

**Warranty may vary by region and is subject to applicable local law.*

Got a question? Ask the Razer Support Team at support.razer.com

3. GETTING STARTED

 1. Place your laptop on top of the laptop stand.
2. Connect the laptop stand to the USB Type-C port of your laptop*.

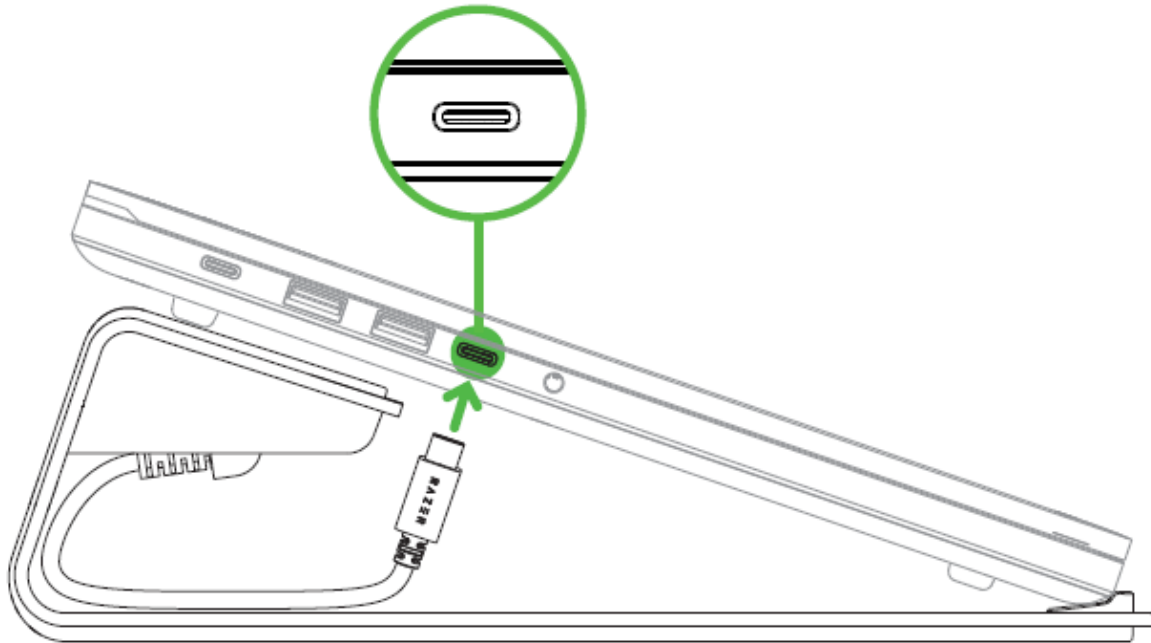

**Not included.*

i *Keep the Type-C cable of your laptop stand neatly tucked under your laptop.*

3. Use the Razer Synapse* app to access lighting customization options and integrate games and applications across your Razer Chroma-enabled devices for a truly immersive experience.

 
**Install Razer Synapse when prompted or download its installer from razer.com/synapse*

4. USING THE LAPTOP STAND


POWERING YOUR RAZER LAPTOP VIA POWER PASSTHROUGH

To use the laptop stand's power passthrough feature with your Razer laptop*, connect it to the laptop stand as follows:

1. Plug in your Razer laptop's USB Type-C power adapter into a power outlet, and then connect it to the Type-C Power Delivery port of the laptop stand.

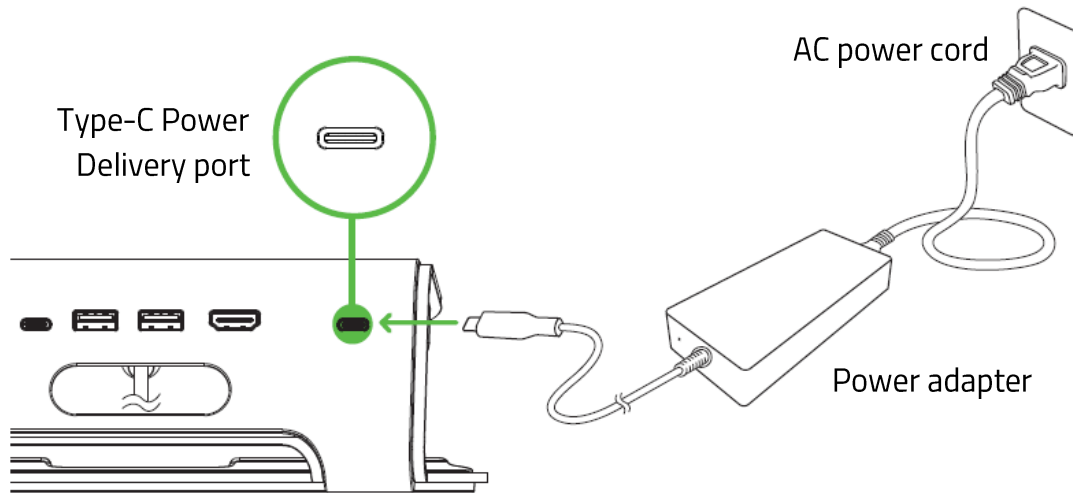

 
2. Connect the laptop stand to the USB Type-C power port of your laptop.

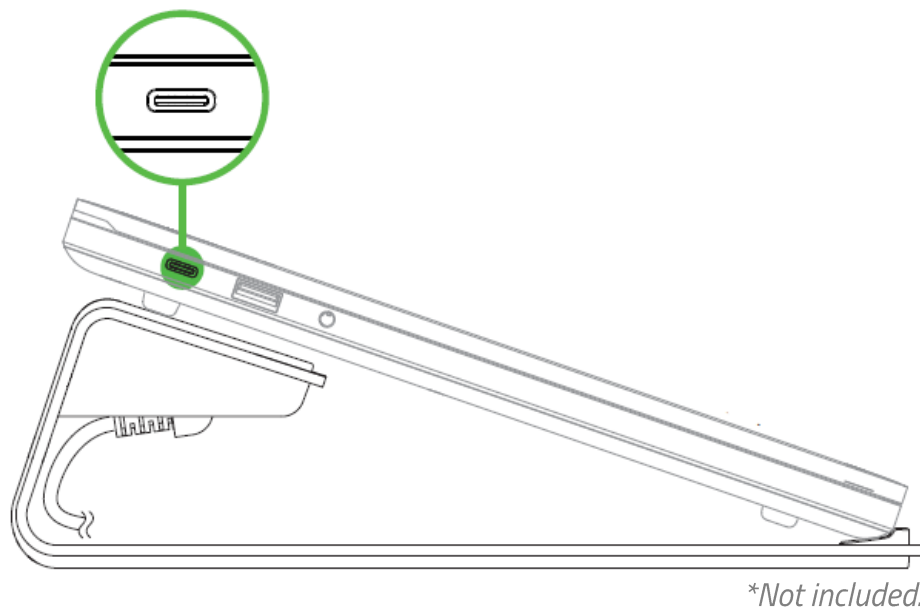

**Not included. For the full list of compatible Razer laptops, please visit support.razer.com*

ORGANIZING CABLES

 For other external cables, use the provided cable hole of the laptop stand to organize each cable as needed.

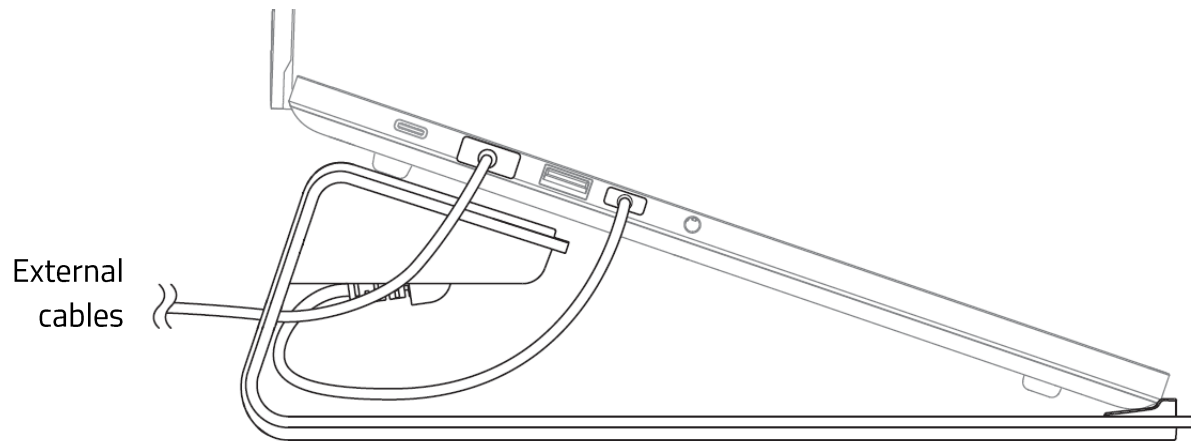

5. PERSONALIZING YOUR LAPTOP STAND

 
- i** *Internet connection is required for installation, updates and cloud-based features. Registering for a Razer ID account is recommended, but optional. All listed features are subject to change based on the current software version, connected device(s), and supported apps and software.*

SYNAPSE TAB

The Synapse tab is your default tab when you first launch Razer Synapse. This tab allows you to navigate the Dashboard subtab.


Dashboard

The Dashboard subtab is an overview of your Razer Synapse where you can access all your Razer devices, modules, and online services.

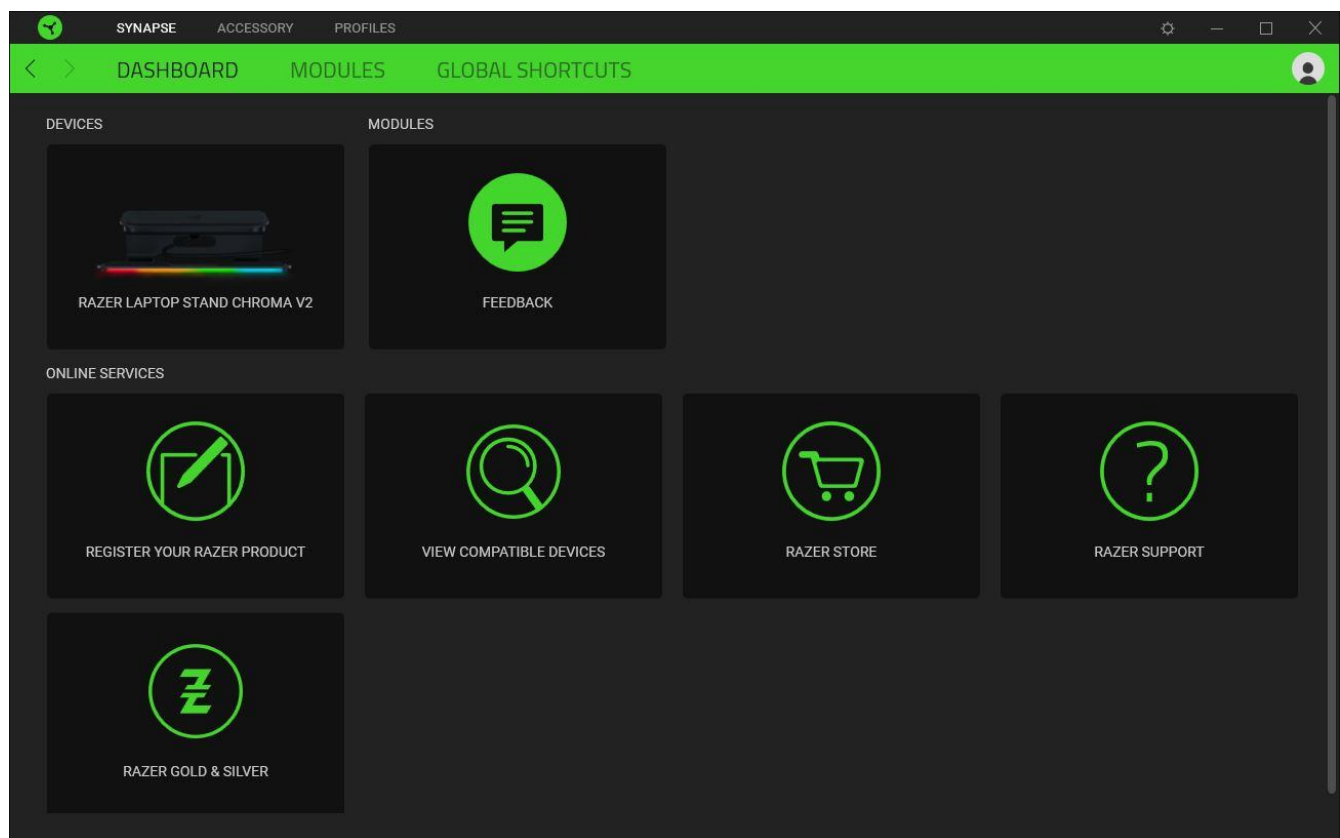

Modules

 
The Modules subtab displays all installed and available modules for installation.

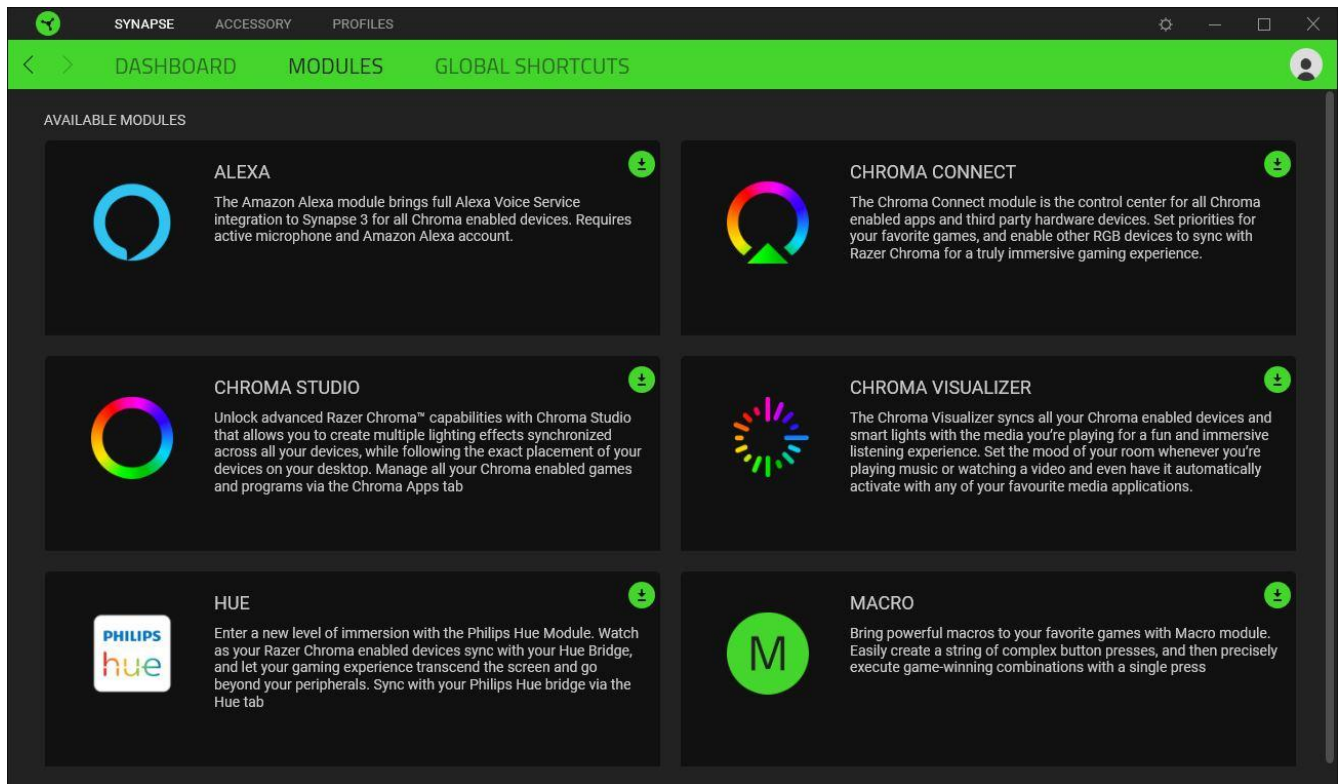

Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs which apply across all device profiles. [Learn more about Profiles](#)

  *Only Razer Synapse-enabled device inputs will be recognized.*

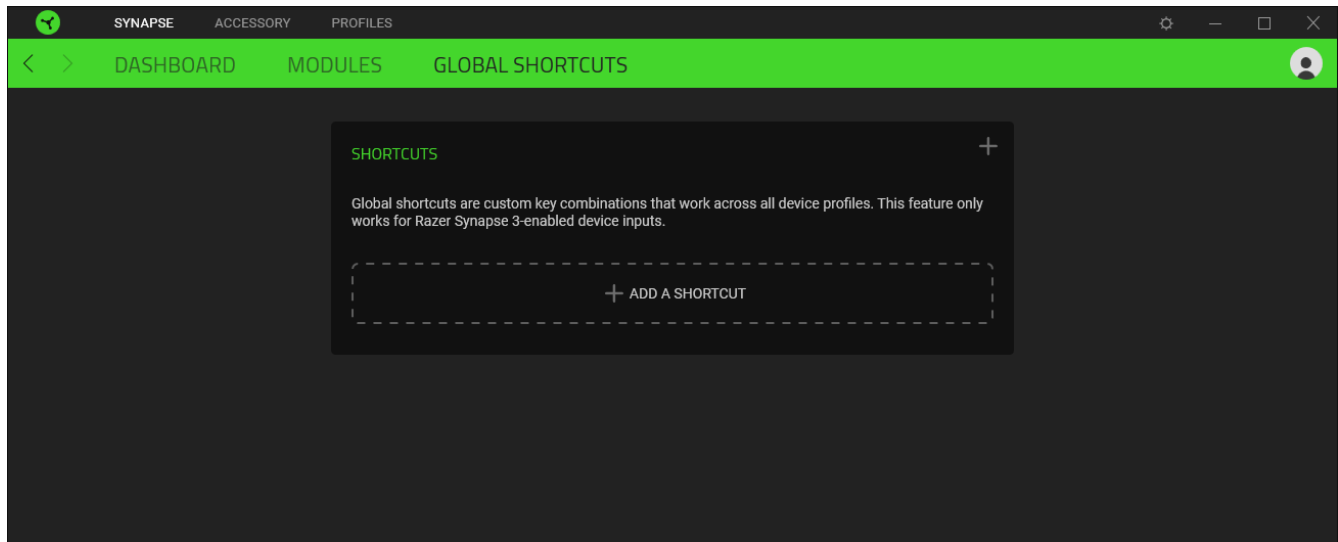


ACCESSORY TAB

The Accessory tab is the main tab for your laptop stand where you'll be able to customize its lighting and power saving feature. Changes made under this tab are automatically saved to your system and cloud storage.

Lighting

 The Lighting subtab enables you to customize the lighting of your Razer device.

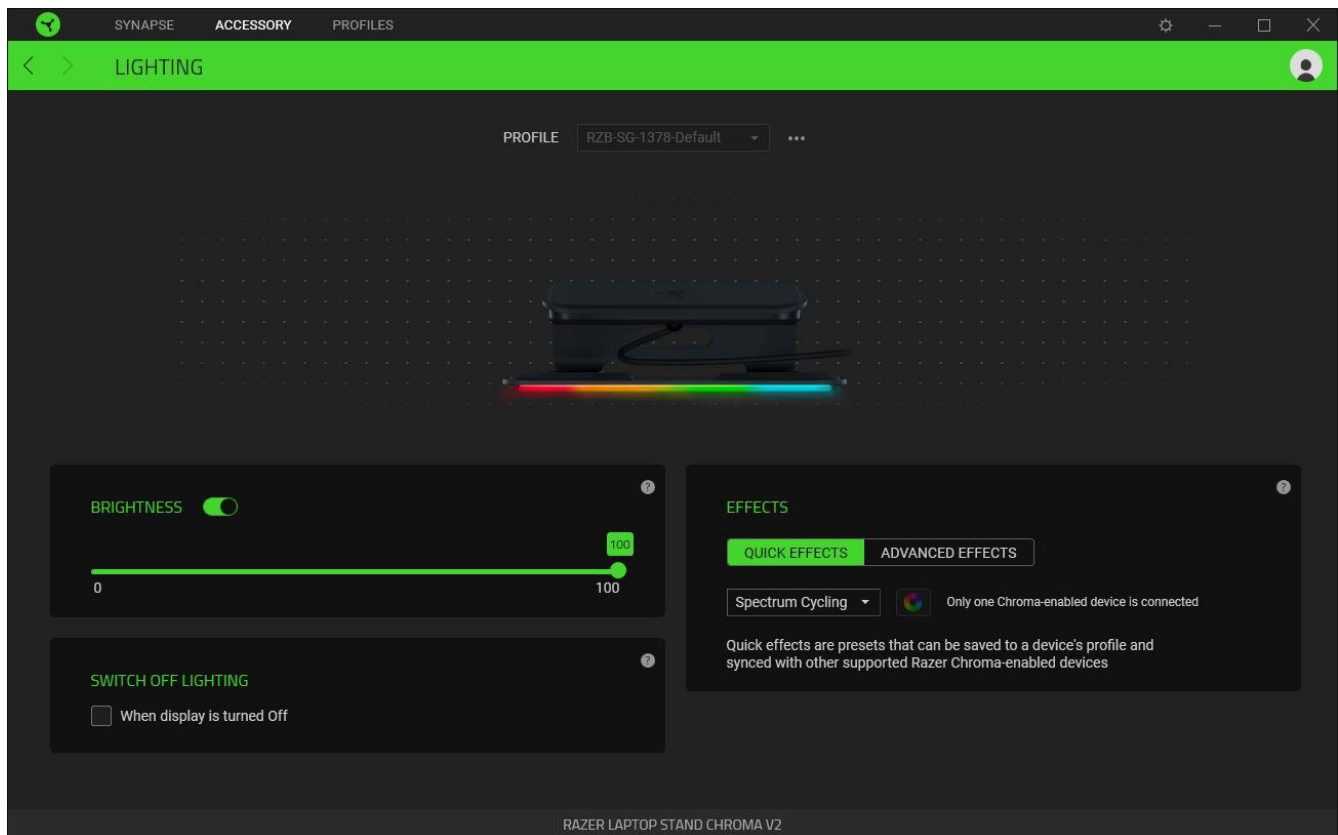

Profile

A Profile is a data storage for keeping all your Razer devices' settings. By default, the profile name is based on your system's name. To add, import, rename, duplicate, export, or delete a profile, simply press the profile's corresponding Miscellaneous button (●●●).

Brightness







You can turn off your Razer device's lighting by toggling the Brightness option or increase/decrease the luminance using the slider.


Switch Off Lighting

Enable this power saving option to disable your device's lighting in response to your system's display turning off.

Quick Effects


A number of quick effects can be selected and applied to your device's lighting, as listed here:

| | Name | Description | How to set up |
|---|------------------|---|---|
|  | Breathing | The lighting will fade in and out of the selected color(s) | Select up to 2 colors or randomize colors |
|  | Fire | The underglow lighting will light up in warm colors to mimic the motion of flames | No further customization required |
|  | Spectrum cycling | The lighting will cycle between 16.8 million colors indefinitely | No further customization required |
|  | Starlight | Each LED will have a chance of fading in and out at a random time and duration | Select up to 2 colors or randomize colors and select a duration |
|  | Static | The device will remain lit in the selected color | Select a color |
|  | Wave | The lighting will scroll in the direction selected | Select either left-to-right or right-to-left wave direction |

If you have other supported Razer Chroma-enabled devices, you can synchronize their quick effects with your Razer device by clicking the Chroma Sync button ().

 Only devices that support the selected lighting effect will synchronize.

Advanced Effects

The Advanced Effects option allows you to choose a Chroma Effect you want to use on your Razer Chroma-enabled peripheral. To start making your own Chroma Effect, simply press the Chroma Studio button ().

 
 The Chroma Studio module is required to use this function.




PROFILES TAB

The Profiles tab is a convenient way of managing all your profiles and linking them to your games and applications.

Devices

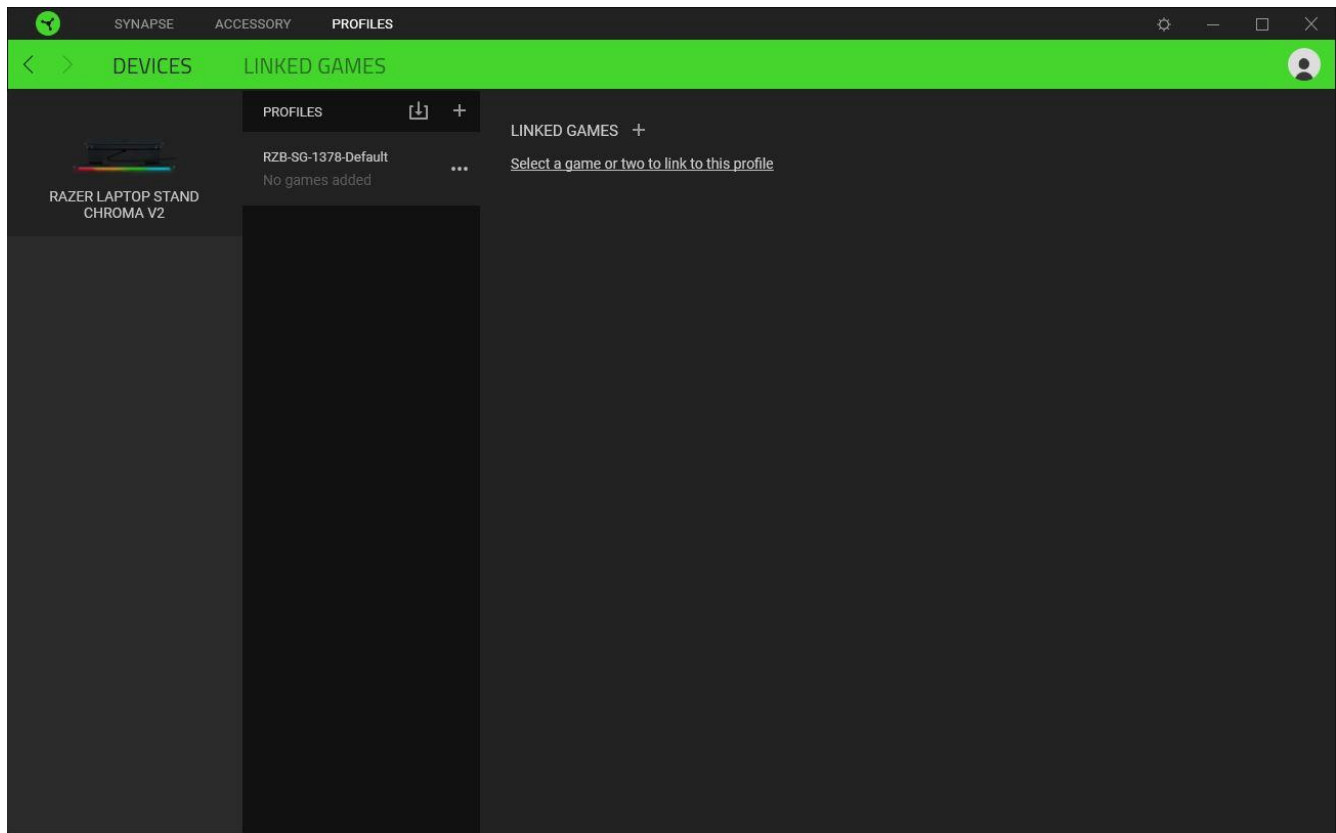
View which games are linked to each device's profiles or which Chroma Effect is linked to specific games using the Devices subtab.

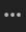

You can import Profiles from your computer or from the cloud through the import button () or create new profiles within the selected device using the add button (). To rename, duplicate, export, or delete a profile, simply press the Miscellaneous button (). Each profile can be set to automatically activate when you run an application using the Linked Games option.

Linked Games

 
The Linked Games subtab gives you the flexibility to add games, view devices that are linked to games, or search for added games. You can also sort games based on alphabetical order, last played, or most played. Added games will still be listed here even if it is not linked to a Razer device.

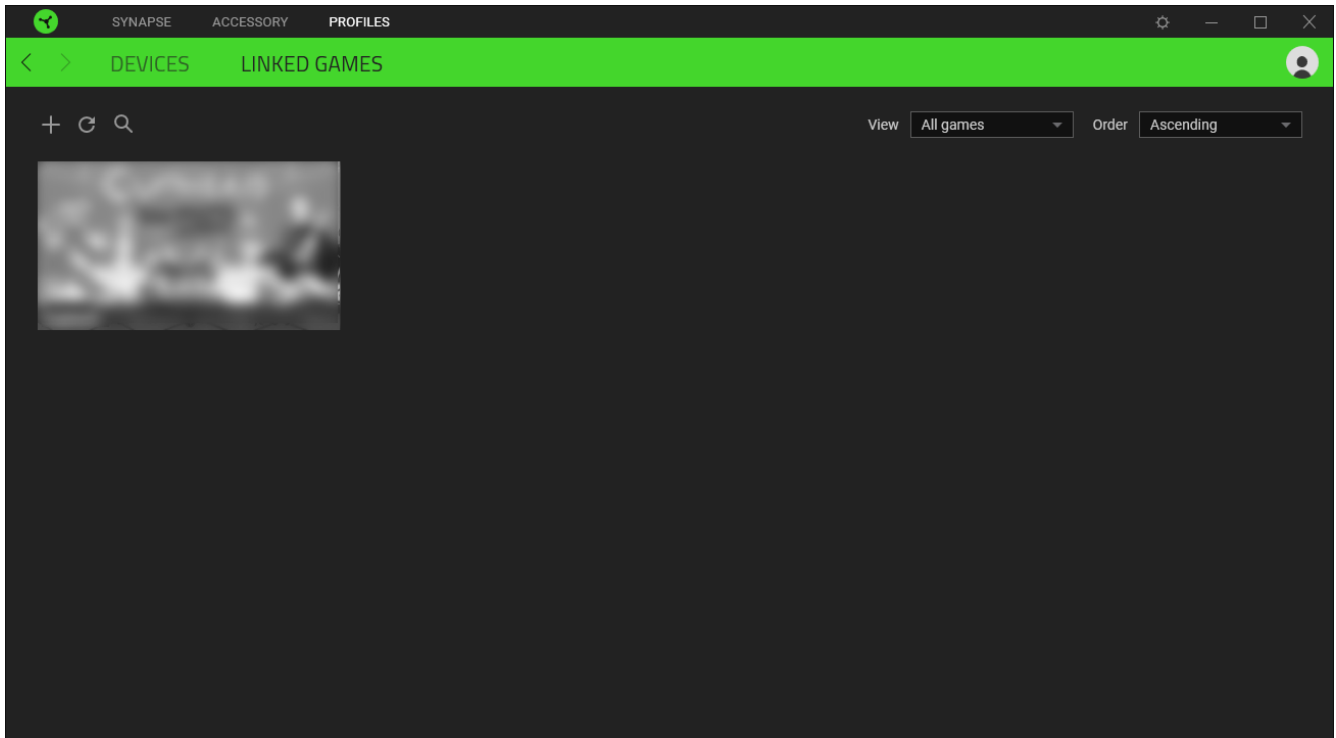

To link games to connected Razer devices or Chroma Effects, simply click on any game from the list, and then click **Select a device and its profile to launch automatically during gameplay** to select the Razer device or Chroma Effect it will link with. Once linked, you may click on the Miscellaneous button (●●●) of the corresponding Chroma Effect or device to select a specific Chroma Effect or profile.

SETTINGS WINDOW

 The Settings window, accessible by clicking the (⚙️) button on Razer Synapse, enables you to configure the startup behavior and display language of Razer Synapse, view the master guides of each connected Razer device, or perform factory reset on any connected Razer device.

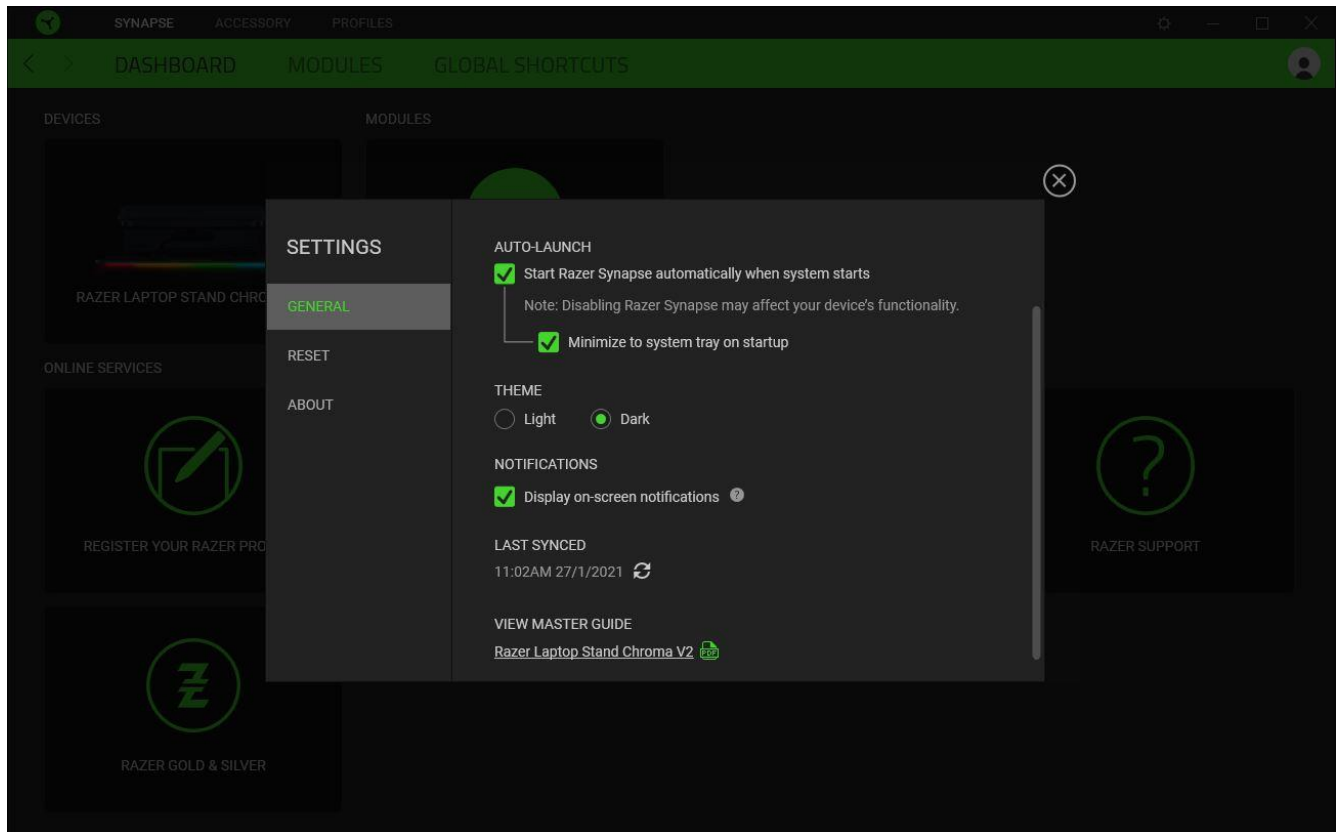

General tab

The default tab of the Settings window. The General tab enables you to change the software's display language, start-up behavior, display theme, and on-screen notifications display. You may also manually sync your profiles to the cloud (↻️) or view the master guide of all connected Razer devices and installed modules.

Reset tab

The Reset tab allows you to perform a factory reset on all connected Razer devices with on-board memory and/or reset Razer Synapse tutorials to acquaint yourself again with Razer Synapse's new features on its next launch.



By resetting a Razer device, all profiles stored on the selected device's on-board memory will be erased.

About tab

The About tab displays brief software information, copyright statement and provides relevant links for its terms of use. You may also use this tab to check for software updates, or as a quick access to Razer's social communities.

6. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Laptop Stand Chroma V2, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for support.

Do not take apart the device and do not attempt to operate it under abnormal current loads. Doing so will void your warranty.

Do not use or install the device and its components near water, moisture, solvents, or other wet surfaces, nor expose the device to high temperatures or direct sunlight for an extended period of time.

Keep the device away from liquid, humidity, or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug the device in order to let the temperature stabilize to an optimal level.

MAINTENANCE AND USE

The Razer Laptop Stand Chroma V2 requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the laptop stand from the laptop, detach all connected cables, and clean it using a soft cloth to prevent dirt buildup. Do not use soap, harsh cleaning agents, or abrasives.

7. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2021 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, “For Gamers. By Gamers.”, and “Powered by Razer Chroma” logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



USB Type-C™ and USB-C™ are trademarks of USB Implementers Forum.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Laptop Stand Chroma V2 (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://www.razer.com/warranty).

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without

invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.