



# FIMRWARE UPDATER INSTRUCTIONS

RAZER HUNTSMAN ELITE FIRMWARE UPDATER VERSION 1.04.00

---

## DRIVER INSTALLATION INSTRUCTIONS

### APPLICABLE MODEL NUMBERS

- RZ03-02520
- RZ03-02521

### DRIVER NAME AND VERSION

Huntsman Elite\_KB\_FirmwareUpdater\_v1.04.00\_r1

Download the firmware here: <http://rzt.to/kDlkZ>

### RELEASE NOTES:

- Fixed random ghost/phantom keypresses – random key presses will register in Windows without pressing any keys.

---

## PREPARATIONS


Please follow the instructions below to download and install the updater for your Viper Ultimate. Following the installation, it is recommended to search for any available Windows Updates.

1. For laptop users: Ensure that your laptop is plugged into a wall outlet and not running on battery alone before proceeding.
2. Save any open documents on your computer and close all other programs before attempting this update.
3. Close Razer Synapse and all other running applications before proceeding with the update.
4. Download the firmware updater from the link above.

 
---

## INSTALLATION PROCESS


1. Run "Huntsman Elite\_KB\_FirmwareUpdater\_v1.04.00\_r1" (Application) as shown in the image below:

Name	Date modified	Type	Size
 Huntsman Elite_KB_FirmwareUpdater_v1.04.00_r1	3/4/2021 11:48 AM	Application	18,110 KB


2. The installer will prompt you to close Synapse and all other applications, if you have already done so, click "OK" to proceed.

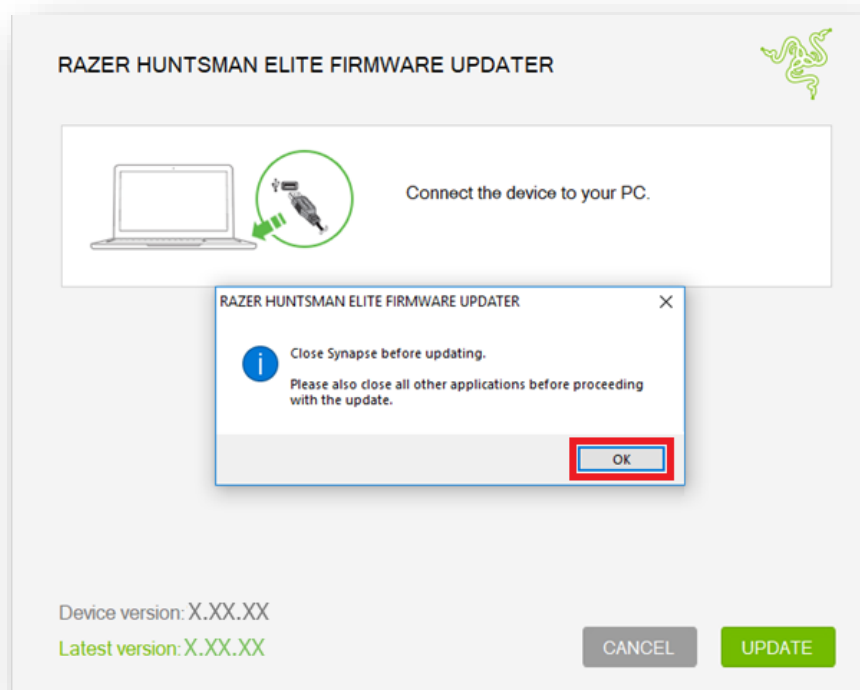

 3. Connect the Huntsman Elite and click "UPDATE".

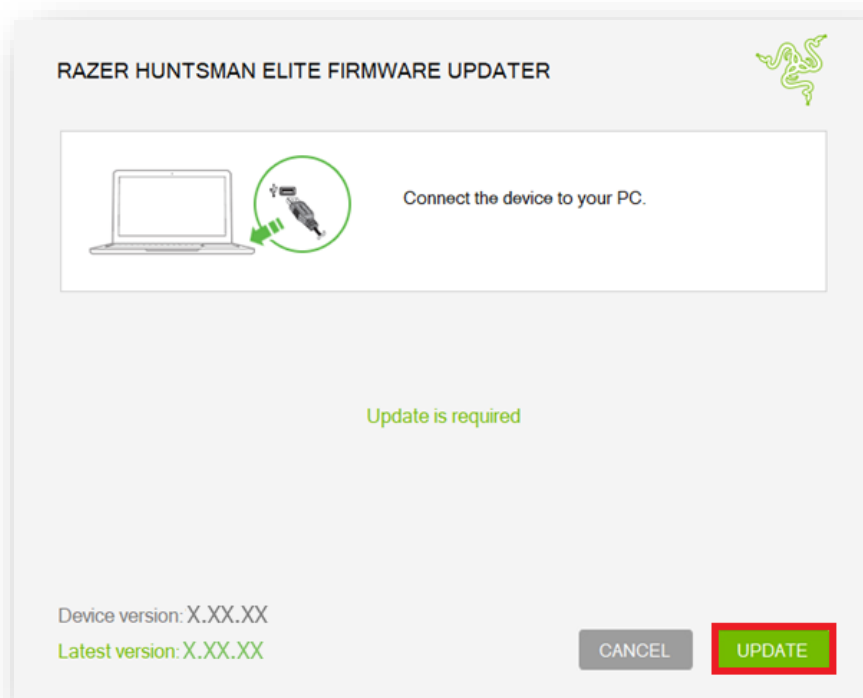

 4. Wait for the update to complete.

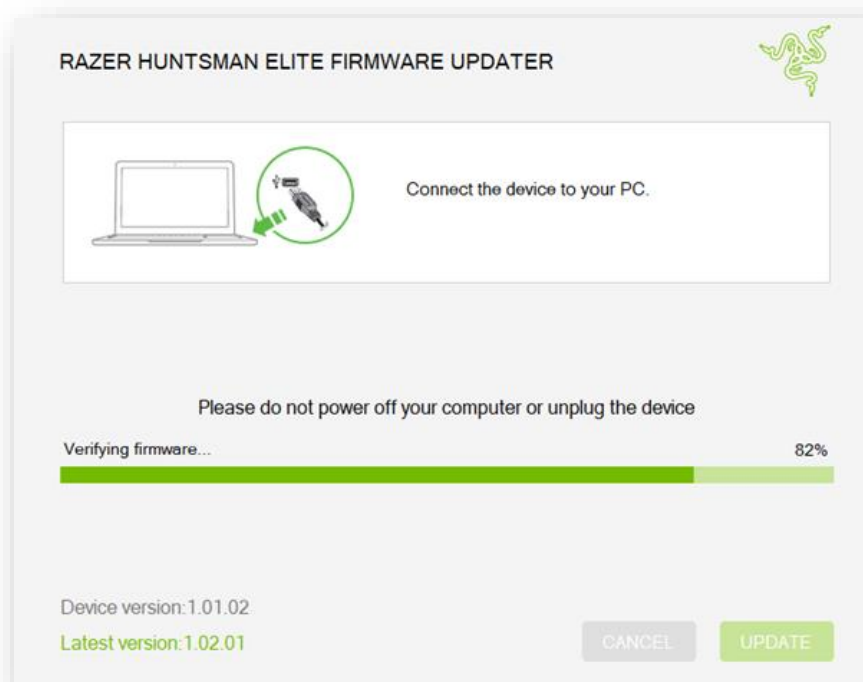

5. Once the firmware has been successfully applied, click "CLOSE" to exit the updater.

