razer blade pro windows 8.1 upgrade Instructions

Please follow the steps below to upgrade your Razer Blade from Windows 8.0 to Windows 8.1.

Step 1: Enter Bios mode by tapping at F1 or Del upon booting up system. In "Security" tab, ensure "Secure Boot" is enabled. Otherwise, select the option "Install All Factory Default Keys". "Save and Exit" Bios menu by pressing F4. Shutdown system completely.

Step 2: Perform Windows update and make sure to install KB2871389 – to enable system 'see' Windows 8.1 update link

Step 3: Before starting the upgrade please un-install the following applications and drivers and restart your Razer Blade when prompted to do so.

All NVIDIA applications \ Drivers
All Killer Suite\Drivers
Dolby Pro Surround Drivers
Realtek HD Audio Drivers
Intel HD graphic Drivers
Razer Comms


Step 4: Go to Store application and find the update for Windows 8.1. If Windows 8.1 update not shown in the store apps, please download Windows 8.1 Upgrade Assistant from Microsoft website - http://windows.microsoft.com/en-sq/windows-8/upgrade-assistant-download-online-faq

Store


Update Windows



Step 5: Click the link and select download to start upgrading your OS to Windows 8.1.

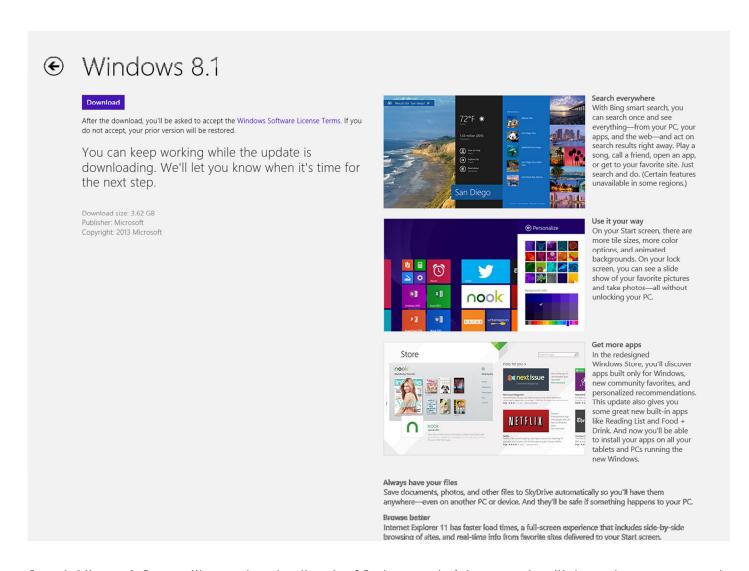


Step 6: Microsoft Store will start downloading the OS, the speed of the upgrade will depend on your network connection.

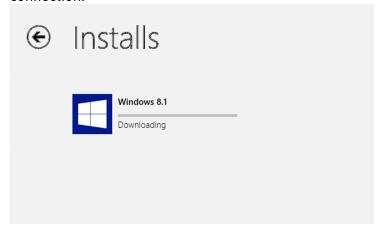

Step 7: At this point Windows 8.1 is upgrading your Razer Blade & will restart several times during this process. This can take up to an hour for the upgrade to complete.

Step 8: Welcome back to Windows. Please go through the OS registration process again.

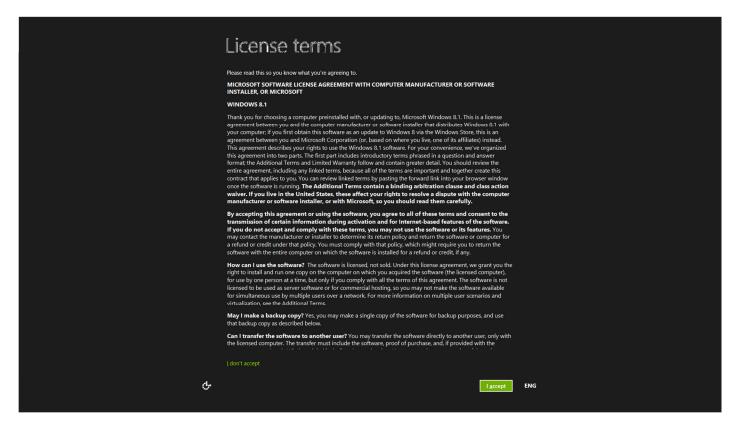

Step 9: Once you boot into the desktop, uninstall NVidia Video driver that comes with Windows 8.1. Go to Device Manager \rightarrow Display Adapters \rightarrow NVidia GeForce GTX 765M, right click and select uninstall. Check "Delete the driver software for this device" then restart the system.

Step 10: Please download and install the updated Windows 8.1 Drivers* and Razer Synapse. You can find the drivers at www.razersupport.com/downloads.

*Important Note:

o Win 8.1 Drivers

Please install Windows drivers according to following sequence:

- → Intel Chipset Driver
- → Intel(R) RST
- → Intel(R) Management Engine Interface
- → Realtek High Definition Audio
- → Dolby Digital Plus HT
- → Nvidia GeForce GTX 765M
- → Realtek PCIe GBE Family Controller (Please uninstall and reinstall with the latest version.)
- → Killer Suite (Please uninstall and reinstall the Killer Suite driver again)
- o Synapse
- o Razer Comms

Now start Enjoying Windows 8.1.